

Shark® 200 & 200T

Upgradeable Fully Featured Power & Energy Meter



**Installation &
Operation Manual**
V.1.12
January 30, 2012



Electro Industries/GaugeTech
The Leader In Power Monitoring and Smart Grid Solutions

This page intentionally left blank.

Shark® 200/200T Meter Installation and Operation Manual Version 1.12

Published by:

Electro Industries/GaugeTech

1800 Shames Drive

Westbury, NY 11590

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage or retrieval systems or any future forms of duplication, for any purpose other than the purchaser's use, without the expressed written permission of Electro Industries/GaugeTech.

© 2012 Electro Industries/GaugeTech

Nexus® and Shark® are registered trademarks of Electro Industries/GaugeTech.

This page intentionally left blank.

Customer Service and Support

Customer support is available 9:00 am to 4:30 pm, Eastern Standard Time, Monday through Friday. Please have the model, serial number and a detailed problem description available. If the problem concerns a particular reading, please have all meter readings available. When returning any merchandise to EIG, a return materials authorization number is required. For customer or technical assistance, repair or calibration, phone 516-334-0870 or fax 516-338-4741.

Product Warranty

Electro Industries/GaugeTech warrants all products to be free from defects in material and workmanship for a period of four years from the date of shipment. During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, fax or call our customer-support department. You will receive prompt assistance and return instructions. Send the instrument, transportation prepaid, to EIG at 1800 Shames Drive, Westbury, NY 11590. Repairs will be made and the instrument will be returned.

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for any reason other than electrical power monitoring. The Shark® 200/200T meter is not a user-serviceable product.

OUR PRODUCTS ARE NOT TO BE USED FOR PRIMARY OVER-CURRENT PROTECTION.
ANY PROTECTION FEATURE IN OUR PRODUCTS IS TO BE USED FOR ALARM OR
SECONDARY PROTECTION ONLY.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ELECTRO INDUSTRIES/GAUGETECH SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING FROM ANY AUTHORIZED OR UNAUTHORIZED USE OF ANY ELECTRO INDUSTRIES/GAUGETECH PRODUCT. LIABILITY SHALL BE LIMITED TO THE ORIGINAL COST OF THE PRODUCT SOLD.

Statement of Calibration

Our instruments are inspected and tested in accordance with specifications published by Electro Industries/GaugeTech. The accuracy and a calibration of our instruments are traceable to the National Institute of Standards and Technology through equipment that is calibrated at planned intervals by comparison to certified standards.

Disclaimer

The information presented in this publication has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this document is subject to change without notice.



This symbol indicates that the operator must refer to an explanation in the operating instructions. Please see Chapter 4 for important safety information regarding installation and hookup of the Shark® 200/200T meter.

About Electro Industries/GaugeTech

Founded in 1975 by engineer and inventor Dr. Samuel Kagan, Electro Industries/GaugeTech changed the face of power monitoring forever with its first breakthrough innovation: an affordable, easy-to-use AC power meter. A few of our many technology firsts include:

- 1975: First multifunction meter
- 1981: First micro-processor based power monitor
- 1986: First PC-based power monitoring software for plant-wide power distribution analysis
- 1994: First 1 MegaByte memory high-performance power monitor for data analysis and recording
- 1999: First auto-calibrating power monitoring - Nexus® Series
- 2001: First auto-calibrating meter under glass
- 2005: Shark® 100 submeter and Shark® 100S wireless submeter with 802.11 WiFi capability
- 2007: Shark® 200 data-logging submeter with optional I/O
- 2008: First Nexus® 1500 transient recorder and power meter with advanced PQ and dual Ethernet communication ports
- 2012: EIG released many products specializing in the Smart meter and Alternative Energy marketplace.

Thirty years since its founding, Electro Industries/GaugeTech, the leader in power monitoring and control, continues to revolutionize the industry with the highest quality, cutting edge power monitoring and control technology on the market today. An ISO 9001:2000 certified company, EIG sets the industry standard for advanced power quality and reporting, revenue metering and substation data acquisition and control. EIG products can be found on site at virtually all of today's leading manufacturers, industrial giants and utilities.

All EIG products are designed, manufactured, tested and calibrated at our facility in Westbury, New York.

Applications

- Web-accessed multifunction power monitoring and control
- Single and multifunction power monitoring
- Power quality monitoring
- Onboard data logging for trending power usage and quality
- Disturbance analysis
- Revenue metering and billing
- Smart grid solutions

Table of Contents

Customer Service and Support	iii
Product Warranty	iii
Statement of Calibration	iv
Disclaimer	iv
About Electro Industries/GaugeTech	v
1: Three-Phase Power Measurement	1-1
1.1: Three-Phase System Configurations	1-1
1.1.1: Wye Connection	1-1
1.1.2: Delta Connection	1-4
1.1.3: Blondell's Theorem and Three Phase Measurement	1-6
1.2: Power, Energy and Demand	1-8
1.3: Reactive Energy and Power Factor	1-12
1.4: Harmonic Distortion	1-14
1.5: Power Quality	1-17
2: Meter Overview and Specifications	2-1
2.1: Shark® 200 Meter Overview	2-1
2.1.1: Voltage and Current Inputs	2-3
2.1.2: Ordering Information	2-4
2.1.3: V-Switch™ Key Technology	2-6
2.1.4: Measured Values	2-8
2.1.5: Utility Peak Demand	2-9
2.2: Specifications	2-10
2.3: Compliance	2-15
2.4: Accuracy	2-16
3: Mechanical Installation	3-1
3.1: Introduction	3-1
3.2: ANSI Installation Steps	3-3
3.3: DIN Installation Steps	3-4
3.4: Transducer Installation	3-6
4: Electrical Installation	4-1
4.1: Considerations When Installing Meters	4-1
4.2: CT Leads Terminated to Meter	4-2
4.3: CT Leads Pass Through (No Meter Termination)	4-4
4.4: Quick Connect Crimp-on Terminations	4-5
4.5: Voltage and Power Supply Connections	4-6
4.6: Ground Connections	4-6
4.7: Voltage Fuses	4-6
4.8: Electrical Connection Diagrams	4-7
5: Communication Installation	5-1
5.1: Shark® 200 Meter Communication	5-1
5.1.1: IrDA Port (Com 1)	5-1
5.1.2: RS485 / KYZ Output (Com 2)	5-1
5.1.2.1: Using the Unicom 2500	5-5
5.2: Shark® 200T Transducer Communication and Programming Overview	5-6
5.2.1: Accessing the Meter in Default Communication Mode	5-6

5.2.2: Connecting to the Meter through Communicator EXT	5-7
5.2.2: Shark® 200 Meter Device Profile Settings	5-10
6: Using the Shark® 200 Meter	6-1
6.1: Introduction	6-1
6.1.1: Understanding Meter Face Elements	6-1
6.1.2: Understanding Meter Face Buttons	6-2
6.2: Using the Front Panel	6-3
6.2.1: Understanding Startup and Default Displays	6-3
6.2.2: Using the Main Menu	6-4
6.2.3: Using Reset Mode	6-5
6.2.4: Entering a Password	6-6
6.2.5: Using Configuration Mode	6-7
6.2.5.1: Configuring the Scroll Feature	6-9
6.2.5.2: Configuring CT Setting	6-10
6.2.5.3: Configuring PT Setting	6-11
6.2.5.4: Configuring Connection Setting	6-13
6.2.5.5: Configuring Communication Port Setting	6-13
6.2.6: Using Operating Mode	6-15
6.3: Understanding the % of Load Bar	6-16
6.4: Performing Watt-Hour Accuracy Testing (Verification)	6-17
7: Using the I/O Option Cards	7-1
7.1: Overview	7-1
7.2: Installing Option Cards	7-1
7.3: Configuring Option Cards	7-3
7.4: 1mA Output Card (1mAOS)	7-3
7.4.1: Specifications:	7-3
7.4.2: Default Configuration:	7-4
7.4.3: Wiring Diagram	7-5
7.5: 20mA Output Card (20mAOS)	7-6
7.5.1: Specifications	7-6
7.5.2: Default Configuration	7-7
7.5.3: Wiring Diagram	7-8
7.6: Digital Output (Relay Contact) / Digital Input Card (RO1S)	7-9
7.6.1: Specifications	7-9
7.6.2: Wiring Diagram	7-11
7.7: Pulse Output (Solid State Relay Contacts) / Digital Input Card (P01S)	7-12
7.7.1: Specifications	7-12
7.7.2: Default Configuration	7-13
7.7.3: Wiring Diagram	7-14
7.8: Fiber Optic Communication Card (FOSTS; FOVPS)	7-15
7.8.1: Specifications	7-15
7.8.2: Wiring Diagram	7-16
7.9: 10/100BaseT Ethernet Communication Card (INP100S)	7-17
7.9.1: Specifications	7-17
7.9.2: Default Configuration	7-18
7.9.3: Wiring Diagram	7-18
8: Using the Ethernet Card (INP100S)	8-1
8.1: Overview	8-1
8.2: Hardware Connection	8-1
8.3: Performing Network Configuration	8-2

8.4: Upgrading the Ethernet Card's Firmware	8-2
8.5: Ethernet Card Features	8-3
8.5.1: Ethernet Communication	8-3
8.5.2: Embedded Web Server	8-3
8.5.2.1: Upgrading the Ethernet Card's Firmware	8-7
8.5.3: NTP Time Server Synchronization	8-9
9: Data Logging	9-1
9.1: Overview	9-1
9.2: Available Logs	9-1
A: Shark® 200 Meter Navigation Maps	A-1
A.1: Introduction	A-1
A.2: Navigation Maps (Sheets 1 to 4)	A-1
B: Modbus Map and Retrieving Logs	B-1
B.1: Introduction	B-1
B.2: Modbus Register Map Sections	B-1
B.3: Data Formats	B-1
B.4: Floating Point Values	B-2
B.5: Retrieving Logs Using the Shark® 200 Meter's Modbus Map	B-3
B.5.1: Data Formats	B-4
B.5.2: Shark® 200 Meter Logs	B-4
B.5.3: Block Definitions	B-6
B.5.4: Log Retrieval	B-16
B.5.4.1: Auto-Increment	B-16
B.5.4.2: Modbus Function Code 0x23	B-16
B.5.4.3: Log Retrieval Procedure	B-17
B.5.4.4: Log Retrieval Example	B-20
B.5.5: Log Record Interpretation	B-28
B.5.6: Examples	B-36
B.6: Important Note Concerning the Shark® 200 Meter's Modbus Map	B-39
B.6.1: Hex Representation	B-39
B.6.2: Decimal Representation	B-39
B.7: Modbus Register Map (MM-1 to MM-32)	B-40
C: DNP Mapping	C-1
C.1: Overview	C-1
C.2: Physical Layer	C-1
C.3: Data Link Layer	C-1
C.4: Application Layer	C-2
C.5: Error Reply	C-3
C.6: DNP Register Map	C-3
C.7: DNP Message Layouts	C-6
C.8: Internal Indication Bits	C-9
D: Using the USB to IrDA Adapter (CAB6490)	D-1
D.1: Introduction	D-1
D.2: Installation Procedures	D-1

This page intentionally left blank.

1: Three-Phase Power Measurement

This introduction to three-phase power and power measurement is intended to provide only a brief overview of the subject. The professional meter engineer or meter technician should refer to more advanced documents such as the EEI Handbook for Electricity Metering and the application standards for more in-depth and technical coverage of the subject.

1.1: Three-Phase System Configurations

Three-phase power is most commonly used in situations where large amounts of power will be used because it is a more effective way to transmit the power and because it provides a smoother delivery of power to the end load. There are two commonly used connections for three-phase power, a wye connection or a delta connection. Each connection has several different manifestations in actual use.

When attempting to determine the type of connection in use, it is a good practice to follow the circuit back to the transformer that is serving the circuit. It is often not possible to conclusively determine the correct circuit connection simply by counting the wires in the service or checking voltages. Checking the transformer connection will provide conclusive evidence of the circuit connection and the relationships between the phase voltages and ground.

1.1.1: Wye Connection

The wye connection is so called because when you look at the phase relationships and the winding relationships between the phases it looks like a Y. Figure 1.1 depicts the winding relationships for a wye-connected service. In a wye service the neutral (or center point of the wye) is typically grounded. This leads to common voltages of 208/120 and 480/277 (where the first number represents the phase-to-phase voltage and the second number represents the phase-to-ground voltage).

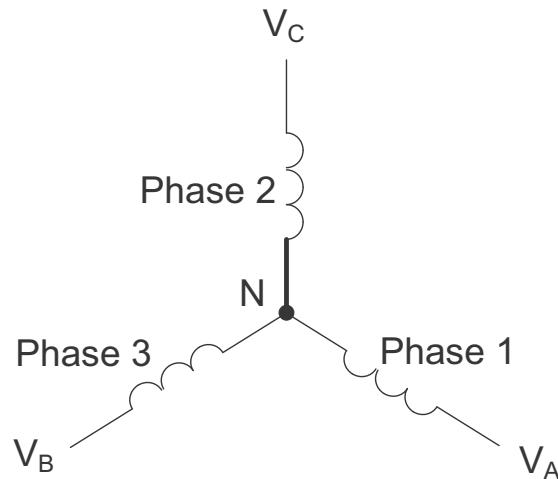


Figure 1.1: Three-phase Wye Winding

The three voltages are separated by 120° electrically. Under balanced load conditions the currents are also separated by 120° . However, unbalanced loads and other conditions can cause the currents to depart from the ideal 120° separation. Three-phase voltages and currents are usually represented with a phasor diagram. A phasor diagram for the typical connected voltages and currents is shown in Figure 1.2.

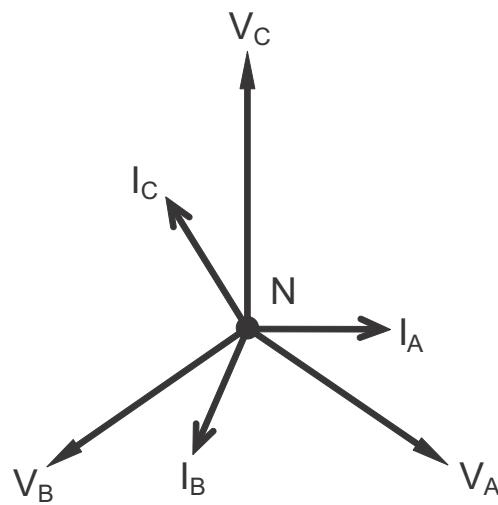


Figure 1.2: Phasor Diagram Showing Three-phase Voltages and Currents

The phasor diagram shows the 120° angular separation between the phase voltages. The phase-to-phase voltage in a balanced three-phase wye system is 1.732 times the phase-to-neutral voltage. The center point of the wye is tied together and is typically grounded. Table 1.1 shows the common voltages used in the United States for wye-connected systems.

Phase to Ground Voltage	Phase to Phase Voltage
120 volts	208 volts
277 volts	480 volts
2,400 volts	4,160 volts
7,200 volts	12,470 volts
7,620 volts	13,200 volts

Table 1: Common Phase Voltages on Wye Services

Usually a wye-connected service will have four wires: three wires for the phases and one for the neutral. The three-phase wires connect to the three phases (as shown in Figure 1.1). The neutral wire is typically tied to the ground or center point of the wye.

In many industrial applications the facility will be fed with a four-wire wye service but only three wires will be run to individual loads. The load is then often referred to as a delta-connected load but the service to the facility is still a wye service; it contains four wires if you trace the circuit back to its source (usually a transformer). In this type of connection the phase to ground voltage will be the phase-to-ground voltage indicated in Table 1, even though a neutral or ground wire is not physically present at the load. The transformer is the best place to determine the circuit connection type because this is a location where the voltage reference to ground can be conclusively identified.



1.1.2: Delta Connection

Delta-connected services may be fed with either three wires or four wires. In a three-phase delta service the load windings are connected from phase-to-phase rather than from phase-to-ground. Figure 1.3 shows the physical load connections for a delta service.

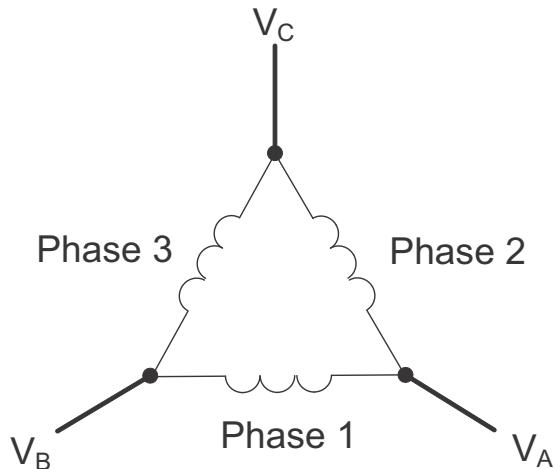


Figure 1.3: Three-phase Delta Winding Relationship

In this example of a delta service, three wires will transmit the power to the load. In a true delta service, the phase-to-ground voltage will usually not be balanced because the ground is not at the center of the delta.

Figure 1.4 shows the phasor relationships between voltage and current on a three-phase delta circuit.

In many delta services, one corner of the delta is grounded. This means the phase to ground voltage will be zero for one phase and will be full phase-to-phase voltage for the other two phases. This is done for protective purposes.

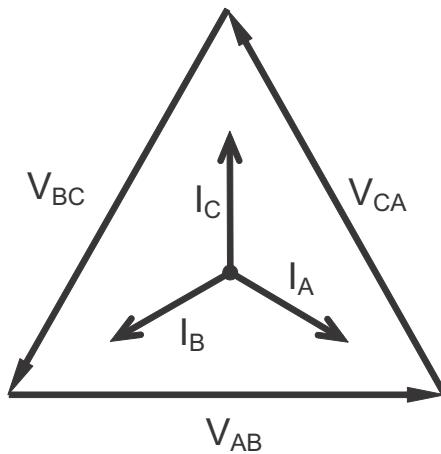


Figure 1.4: Phasor Diagram, Three-Phase Voltages and Currents, Delta-Connected

Another common delta connection is the four-wire, grounded delta used for lighting loads. In this connection the center point of one winding is grounded. On a 120/240 volt, four-wire, grounded delta service the phase-to-ground voltage would be 120 volts on two phases and 208 volts on the third phase. Figure 1.5 shows the phasor diagram for the voltages in a three-phase, four-wire delta system.

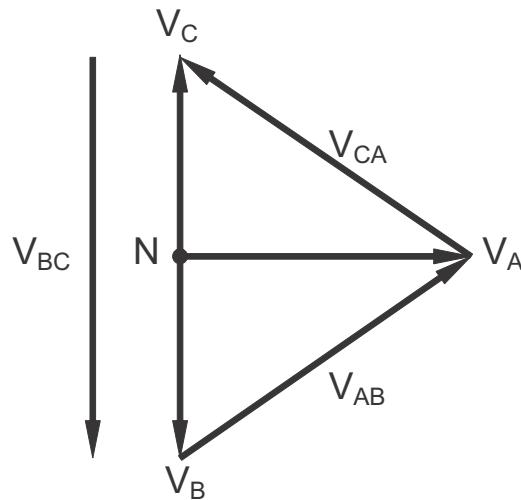


Figure 1.5: Phasor Diagram Showing Three-phase Four-Wire Delta-Connected System

1.1.3: Blondell's Theorem and Three Phase Measurement

In 1893 an engineer and mathematician named Andre E. Blondell set forth the first scientific basis for polyphase metering. His theorem states:

If energy is supplied to any system of conductors through N wires, the total power in the system is given by the algebraic sum of the readings of N wattmeters so arranged that each of the N wires contains one current coil, the corresponding potential coil being connected between that wire and some common point. If this common point is on one of the N wires, the measurement may be made by the use of N-1 Wattmeters.

The theorem may be stated more simply, in modern language:

In a system of N conductors, N-1 meter elements will measure the power or energy taken provided that all the potential coils have a common tie to the conductor in which there is no current coil.

Three-phase power measurement is accomplished by measuring the three individual phases and adding them together to obtain the total three phase value. In older analog meters, this measurement was accomplished using up to three separate elements. Each element combined the single-phase voltage and current to produce a torque on the meter disk. All three elements were arranged around the disk so that the disk was subjected to the combined torque of the three elements. As a result the disk would turn at a higher speed and register power supplied by each of the three wires.

According to Blondell's Theorem, it was possible to reduce the number of elements under certain conditions. For example, a three-phase, three-wire delta system could be correctly measured with two elements (two potential coils and two current coils) if the potential coils were connected between the three phases with one phase in common.

In a three-phase, four-wire wye system it is necessary to use three elements. Three voltage coils are connected between the three phases and the common neutral conductor. A current coil is required in each of the three phases.

In modern digital meters, Blondell's Theorem is still applied to obtain proper metering. The difference in modern meters is that the digital meter measures each phase voltage and current and calculates the single-phase power for each phase. The meter then sums the three phase powers to a single three-phase reading.

Some digital meters calculate the individual phase power values one phase at a time. This means the meter samples the voltage and current on one phase and calculates a power value. Then it samples the second phase and calculates the power for the second phase. Finally, it samples the third phase and calculates that phase power. After sampling all three phases, the meter combines the three readings to create the equivalent three-phase power value. Using mathematical averaging techniques, this method can derive a quite accurate measurement of three-phase power.

More advanced meters actually sample all three phases of voltage and current simultaneously and calculate the individual phase and three-phase power values. The advantage of simultaneous sampling is the reduction of error introduced due to the difference in time when the samples were taken.

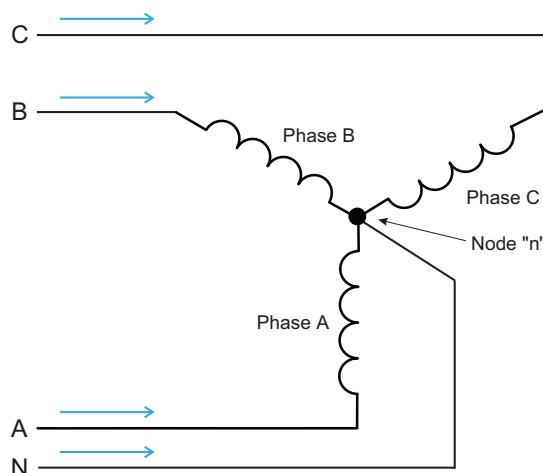


Figure 1.6: Three-Phase Wye Load Illustrating Kirchhoff's Law and Blondell's Theorem

Blondell's Theorem is a derivation that results from Kirchhoff's Law. Kirchhoff's Law states that the sum of the currents into a node is zero. Another way of stating the same thing is that the current into a node (connection point) must equal the current out of the node. The law can be applied to measuring three-phase loads. Figure 1.6 shows a typical connection of a three-phase load applied to a three-phase, four-wire service. Kirchhoff's Law holds that the sum of currents A, B, C and N must equal zero or that the sum of currents into Node "n" must equal zero.

If we measure the currents in wires A, B and C, we then know the current in wire N by Kirchhoff's Law and it is not necessary to measure it. This fact leads us to the conclusion of Blondell's Theorem- that we only need to measure the power in three of

the four wires if they are connected by a common node. In the circuit of Figure 1.6 we must measure the power flow in three wires. This will require three voltage coils and three current coils (a three-element meter). Similar figures and conclusions could be reached for other circuit configurations involving Delta-connected loads.

1.2: Power, Energy and Demand

It is quite common to exchange power, energy and demand without differentiating between the three. Because this practice can lead to confusion, the differences between these three measurements will be discussed.

Power is an instantaneous reading. The power reading provided by a meter is the present flow of watts. Power is measured immediately just like current. In many digital meters, the power value is actually measured and calculated over a one second interval because it takes some amount of time to calculate the RMS values of voltage and current. But this time interval is kept small to preserve the instantaneous nature of power.

Energy is always based on some time increment; it is the integration of power over a defined time increment. Energy is an important value because almost all electric bills are based, in part, on the amount of energy used.

Typically, electrical energy is measured in units of kilowatt-hours (kWh). A kilowatt-hour represents a constant load of one thousand watts (one kilowatt) for one hour. Stated another way, if the power delivered (instantaneous watts) is measured as 1,000 watts and the load was served for a one hour time interval then the load would have absorbed one kilowatt-hour of energy. A different load may have a constant power requirement of 4,000 watts. If the load were served for one hour it would absorb four kWh. If the load were served for 15 minutes it would absorb $\frac{1}{4}$ of that total or one kWh.

Figure 1.7 shows a graph of power and the resulting energy that would be transmitted as a result of the illustrated power values. For this illustration, it is assumed that the power level is held constant for each minute when a measurement is taken. Each bar in the graph will represent the power load for the one-minute increment of time. In real life the power value moves almost constantly.

The data from Figure 1.7 is reproduced in Table 2 to illustrate the calculation of energy. Since the time increment of the measurement is one minute and since we

specified that the load is constant over that minute, we can convert the power reading to an equivalent consumed energy reading by multiplying the power reading times 1/60 (converting the time base from minutes to hours).

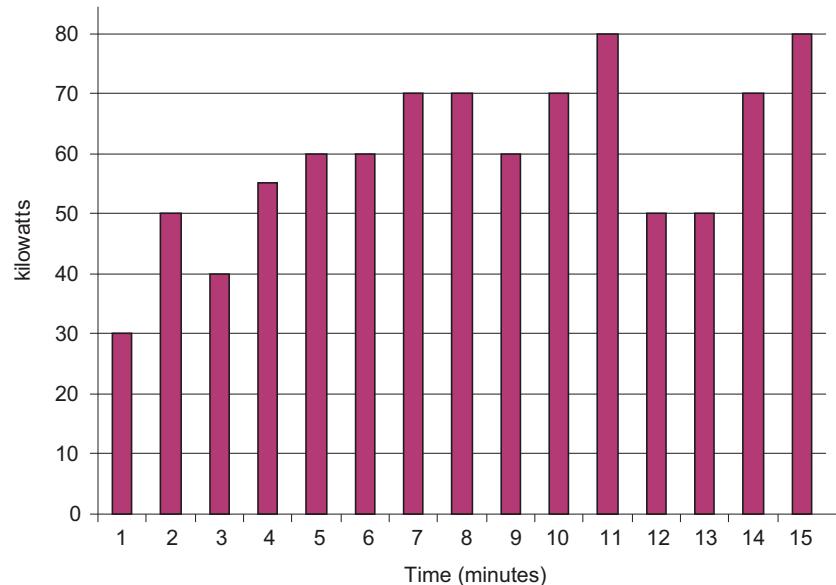


Figure 1.7: Power Use over Time

Time Interval (minute)	Power (kW)	Energy (kWh)	Accumulated Energy (kWh)
1	30	0.50	0.50
2	50	0.83	1.33
3	40	0.67	2.00
4	55	0.92	2.92
5	60	1.00	3.92
6	60	1.00	4.92
7	70	1.17	6.09
8	70	1.17	7.26
9	60	1.00	8.26
10	70	1.17	9.43
11	80	1.33	10.76
12	50	0.83	12.42
13	50	0.83	12.42
14	70	1.17	13.59
15	80	1.33	14.92

Table 1.2: Power and Energy Relationship over Time

As in Table 1.2, the accumulated energy for the power load profile of Figure 1.7 is 14.92 kWh.

Demand is also a time-based value. The demand is the average rate of energy use over time. The actual label for demand is kilowatt-hours/hour but this is normally reduced to kilowatts. This makes it easy to confuse demand with power, but demand is not an instantaneous value. To calculate demand it is necessary to accumulate the energy readings (as illustrated in Figure 1.7) and adjust the energy reading to an hourly value that constitutes the demand.

In the example, the accumulated energy is 14.92 kWh. But this measurement was made over a 15-minute interval. To convert the reading to a demand value, it must be normalized to a 60-minute interval. If the pattern were repeated for an additional three 15-minute intervals the total energy would be four times the measured value or



59.68 kWh. The same process is applied to calculate the 15-minute demand value. The demand value associated with the example load is 59.68 kWh/hr or 59.68 kWd. Note that the peak instantaneous value of power is 80 kW, significantly more than the demand value.

Figure 1.8 shows another example of energy and demand. In this case, each bar represents the energy consumed in a 15-minute interval. The energy use in each interval typically falls between 50 and 70 kWh. However, during two intervals the energy rises sharply and peaks at 100 kWh in interval number 7. This peak of usage will result in setting a high demand reading. For each interval shown the demand value would be four times the indicated energy reading. So interval 1 would have an associated demand of 240 kWh/hr. Interval 7 will have a demand value of 400 kWh/hr. In the data shown, this is the peak demand value and would be the number that would set the demand charge on the utility bill.

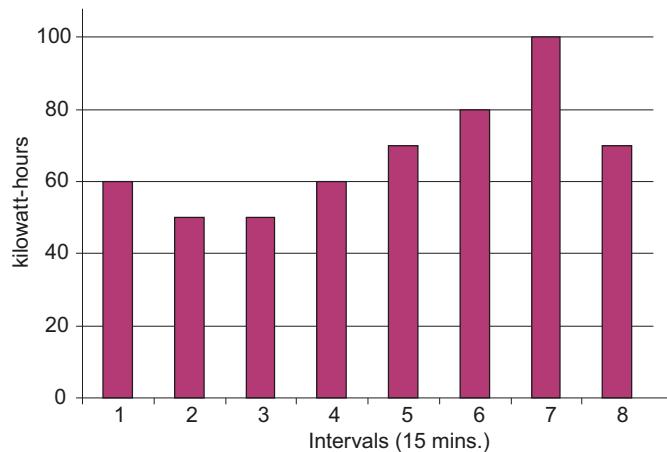


Figure 1.8: Energy Use and Demand

As can be seen from this example, it is important to recognize the relationships between power, energy and demand in order to control loads effectively or to monitor use correctly.

1.3: Reactive Energy and Power Factor

The real power and energy measurements discussed in the previous section relate to the quantities that are most used in electrical systems. But it is often not sufficient to only measure real power and energy. Reactive power is a critical component of the total power picture because almost all real-life applications have an impact on reactive power. Reactive power and power factor concepts relate to both load and generation applications. However, this discussion will be limited to analysis of reactive power and power factor as they relate to loads. To simplify the discussion, generation will not be considered.

Real power (and energy) is the component of power that is the combination of the voltage and the value of corresponding current that is directly in phase with the voltage. However, in actual practice the total current is almost never in phase with the voltage. Since the current is not in phase with the voltage, it is necessary to consider both the inphase component and the component that is at quadrature (angularly rotated 90° or perpendicular) to the voltage. Figure 1.9 shows a single-phase voltage and current and breaks the current into its in-phase and quadrature components.

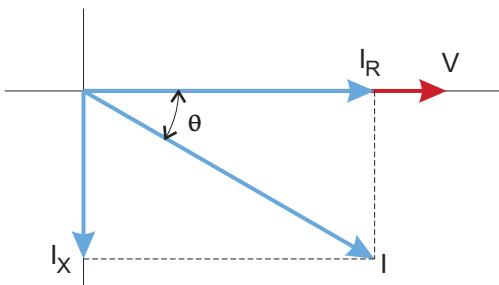


Figure 1.9: Voltage and Complex Current

The voltage (V) and the total current (I) can be combined to calculate the apparent power or VA. The voltage and the in-phase current (I_R) are combined to produce the real power or watts. The voltage and the quadrature current (I_X) are combined to calculate the reactive power.

The quadrature current may be lagging the voltage (as shown in Figure 1.9) or it may lead the voltage. When the quadrature current lags the voltage the load is requiring both real power (watts) and reactive power (VARs). When the quadrature current

leads the voltage the load is requiring real power (watts) but is delivering reactive power (VARs) back into the system; that is VARs are flowing in the opposite direction of the real power flow.

Reactive power (VARs) is required in all power systems. Any equipment that uses magnetization to operate requires VARs. Usually the magnitude of VARs is relatively low compared to the real power quantities. Utilities have an interest in maintaining VAR requirements at the customer to a low value in order to maximize the return on plant invested to deliver energy. When lines are carrying VARs, they cannot carry as many watts. So keeping the VAR content low allows a line to carry its full capacity of watts. In order to encourage customers to keep VAR requirements low, some utilities impose a penalty if the VAR content of the load rises above a specified value.

A common method of measuring reactive power requirements is power factor. Power factor can be defined in two different ways. The more common method of calculating power factor is the ratio of the real power to the apparent power. This relationship is expressed in the following formula:

$$\text{Total PF} = \text{real power} / \text{apparent power} = \text{watts/VA}$$

This formula calculates a power factor quantity known as Total Power Factor. It is called Total PF because it is based on the ratios of the power delivered. The delivered power quantities will include the impacts of any existing harmonic content. If the voltage or current includes high levels of harmonic distortion the power values will be affected. By calculating power factor from the power values, the power factor will include the impact of harmonic distortion. In many cases this is the preferred method of calculation because the entire impact of the actual voltage and current are included.

A second type of power factor is Displacement Power Factor. Displacement PF is based on the angular relationship between the voltage and current. Displacement power factor does not consider the magnitudes of voltage, current or power. It is solely based on the phase angle differences. As a result, it does not include the impact of harmonic distortion. Displacement power factor is calculated using the following equation:

$$\text{Displacement PF} = \cos\theta$$

where θ is the angle between the voltage and the current (see Fig. 1.9).

In applications where the voltage and current are not distorted, the Total Power Factor will equal the Displacement Power Factor. But if harmonic distortion is present, the two power factors will not be equal.

1.4: Harmonic Distortion

Harmonic distortion is primarily the result of high concentrations of non-linear loads. Devices such as computer power supplies, variable speed drives and fluorescent light ballasts make current demands that do not match the sinusoidal waveform of AC electricity. As a result, the current waveform feeding these loads is periodic but not sinusoidal. Figure 1.10 shows a normal, sinusoidal current waveform. This example has no distortion.

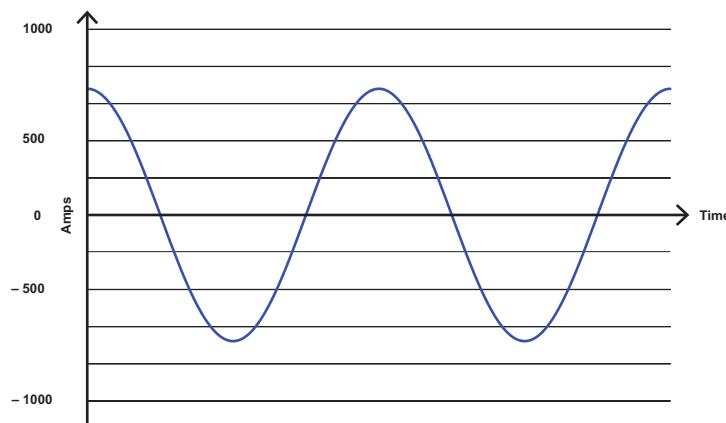


Figure 1.10: Nondistorted Current Waveform

Figure 1.11 shows a current waveform with a slight amount of harmonic distortion. The waveform is still periodic and is fluctuating at the normal 60 Hz frequency. However, the waveform is not a smooth sinusoidal form as seen in Figure 1.10.

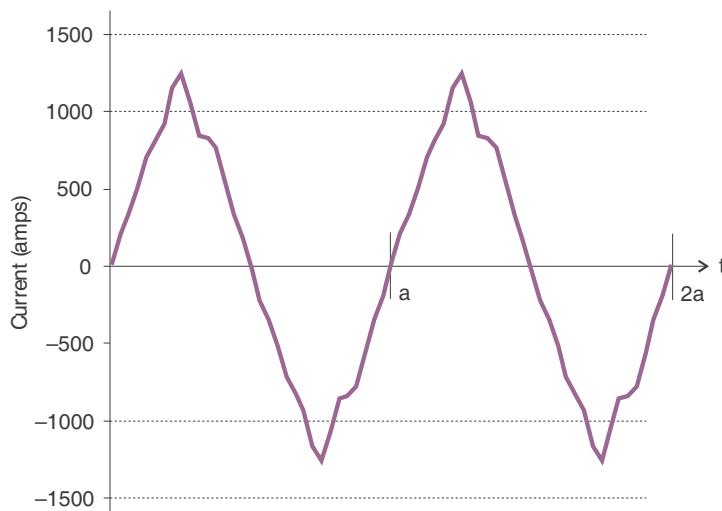


Figure 1.11: Distorted Current Waveform

The distortion observed in Figure 1.11 can be modeled as the sum of several sinusoidal waveforms of frequencies that are multiples of the fundamental 60 Hz frequency. This modeling is performed by mathematically disassembling the distorted waveform into a collection of higher frequency waveforms.

These higher frequency waveforms are referred to as harmonics. Figure 1.12 shows the content of the harmonic frequencies that make up the distortion portion of the waveform in Figure 1.11.

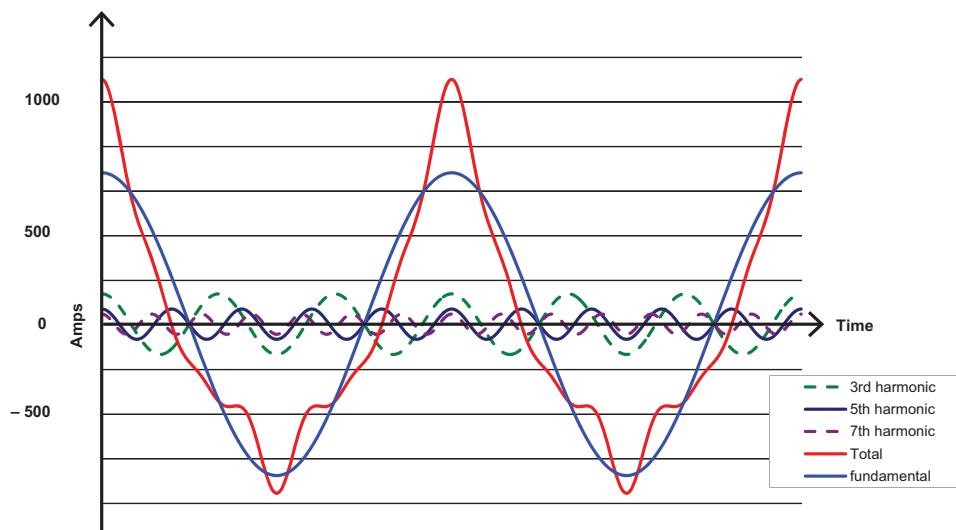


Figure 1.12: Waveforms of the Harmonics

The waveforms shown in Figure 1.12 are not smoothed but do provide an indication of the impact of combining multiple harmonic frequencies together.

When harmonics are present it is important to remember that these quantities are operating at higher frequencies. Therefore, they do not always respond in the same manner as 60 Hz values.

Inductive and capacitive impedance are present in all power systems. We are accustomed to thinking about these impedances as they perform at 60 Hz. However, these impedances are subject to frequency variation.

$$X_L = j\omega L \quad \text{and}$$

$$X_C = 1/j\omega C$$

At 60 Hz, $\omega = 377$; but at 300 Hz (5th harmonic) $\omega = 1,885$. As frequency changes impedance changes and system impedance characteristics that are normal at 60 Hz may behave entirely differently in the presence of higher order harmonic waveforms.

Traditionally, the most common harmonics have been the low order, odd frequencies, such as the 3rd, 5th, 7th, and 9th. However newer, non-linear loads are introducing significant quantities of higher order harmonics.

Since much voltage monitoring and almost all current monitoring is performed using instrument transformers, the higher order harmonics are often not visible. Instrument transformers are designed to pass 60 Hz quantities with high accuracy. These devices, when designed for accuracy at low frequency, do not pass high frequencies with high accuracy; at frequencies above about 1200 Hz they pass almost no information. So when instrument transformers are used, they effectively filter out higher frequency harmonic distortion making it impossible to see.

However, when monitors can be connected directly to the measured circuit (such as direct connection to a 480 volt bus) the user may often see higher order harmonic distortion. An important rule in any harmonics study is to evaluate the type of equipment and connections before drawing a conclusion. Not being able to see harmonic distortion is not the same as not having harmonic distortion.

It is common in advanced meters to perform a function commonly referred to as waveform capture. Waveform capture is the ability of a meter to capture a present picture of the voltage or current waveform for viewing and harmonic analysis.



Typically a waveform capture will be one or two cycles in duration and can be viewed as the actual waveform, as a spectral view of the harmonic content, or a tabular view showing the magnitude and phase shift of each harmonic value. Data collected with waveform capture is typically not saved to memory. Waveform capture is a real-time data collection event.

Waveform capture should not be confused with waveform recording that is used to record multiple cycles of all voltage and current waveforms in response to a transient condition.

1.5: Power Quality

Power quality can mean several different things. The terms "power quality" and "power quality problem" have been applied to all types of conditions. A simple definition of "power quality problem" is any voltage, current or frequency deviation that results in mis-operation or failure of customer equipment or systems. The causes of power quality problems vary widely and may originate in the customer equipment, in an adjacent customer facility or with the utility.

In his book Power Quality Primer, Barry Kennedy provided information on different types of power quality problems. Some of that information is summarized in Table 1.3.



Cause	Disturbance Type	Source
Impulse transient	Transient voltage disturbance, sub-cycle duration	Lightning Electrostatic discharge Load switching Capacitor switching
Oscillatory transient with decay	Transient voltage, sub-cycle duration	Line/cable switching Capacitor switching Load switching
Sag/swell	RMS voltage, multiple cycle duration	Remote system faults
Interruptions	RMS voltage, multiple seconds or longer duration	System protection Circuit breakers Fuses Maintenance
Under voltage/over voltage	RMS voltage, steady state, multiple seconds or longer duration	Motor starting Load variations Load dropping
Voltage flicker	RMS voltage, steady state, repetitive condition	Intermittent loads Motor starting Arc furnaces
Harmonic distortion	Steady state current or voltage, long-term duration	Non-linear loads System resonance

Table 1.3: Typical Power Quality Problems and Sources

It is often assumed that power quality problems originate with the utility. While it is true that many power quality problems can originate with the utility system, many problems originate with customer equipment. Customer-caused problems may manifest themselves inside the customer location or they may be transported by the utility system to another adjacent customer. Often, equipment that is sensitive to power quality problems may in fact also be the cause of the problem.

If a power quality problem is suspected, it is generally wise to consult a power quality professional for assistance in defining the cause and possible solutions to the problem.



2: Meter Overview and Specifications

2.1: Shark® 200 Meter Overview

The Shark® 200 meter is a multifunction, data logging, power and energy meter with waveform recording capability, designed to be used in electrical substations, panel boards, as a power meter for OEM equipment, and as a primary revenue meter, due to its high performance measurement capability. The unit provides multifunction measurement of all electrical parameters and makes the data available in multiple formats via display, communication systems, and analog retransmits. The unit also has data logging and load profiling to provide historical data analysis, and waveform recording that allows for enhanced power quality analysis.

The Shark® 200 meter offers up to 4 MegaBytes of Flash memory. The unit provides you with up to seven logs: three historical logs, a log of limit alarms, a log of I/O changes, a waveform log, and a sequence of events log. (See NOTE on Flash memory on page 2-6.)

The purposes of these features include historical load profiling, voltage analysis, and recording power factor distribution. The Shark® 200 meter's real-time clock allows all events to be time stamped.

Optional 10/100BaseT Ethernet capability is available for the meter. When it is equipped with an Ethernet card, the meter's real-time clock can be synchronized with an outside Network Time Protocol (NTP) server (see the *Communicator EXT User Manual* for instructions on using this feature.) A Shark® meter with an Ethernet card also becomes a Web server. See Chapter 8 for more information on this feature.

The Shark® 200 meter is designed with advanced measurement capabilities, allowing it to achieve high performance accuracy. It is specified as a 0.2% class energy meter for billing applications as well as a highly accurate panel indication meter.



Figure 2.1: Shark® 200 meter

The Shark® 200 meter provides additional capabilities, including standard RS485, Modbus and DNP 3.0 protocol support, an IrDA port for remote interrogation, and Option cards that can be added at any time.

Features of the Shark® 200 meter include:

- 0.2% Class revenue certifiable energy and demand metering
- Meets ANSI C12.20 (0.2%) and IEC 687 (0.2%) classes
- Multifunction measurement including voltage, current, power, frequency, energy, etc.
- Optional secondary Voltage display (see Chapter 5 in the *Communicator EXT User Manual* for instructions on setting up this feature*)
- Power quality measurements (%THD and Alarm Limits) - for meters with V-Switch™ keys 3-6, symmetrical components, Voltage unbalance, and current unbalance are also available and can be used with the Limits functionality (see Chapter 5 in the *Communicator EXT User Manual* for instructions on using this feature*)
- V-Switch™ Key technology - field upgradable without removing installed meter
- Percentage of Load bar for analog meter reading
- Easy to use faceplate programming
- IrDA port for laptop PC remote read
- RS485 communication
- Optional I/O Cards (including 10/100BaseT Ethernet) - field upgradable without removing installed meter
- Sampling rate of up to 512 samples per cycle for waveform recording
- Transformer/Line Loss compensation (see Chapter 5 and Appendix B in the *Communicator EXT User Manual* for instructions on using this feature*)

- CT/PT compensation (V-Switch™ keys 3-6: see Chapter 5 in the *Communicator EXT User Manual* for instructions on using this feature*)

* Access the *Communicator EXT User Manual* from the Communicator EXT CD or by clicking **Help>Contents** from the Communicator EXT Main screen.

In addition to the Shark® 200 meter/transducer configuration, a Shark® 200T transducer configuration is available. The Shark® 200T transducer is a digital transducer only unit, providing RS485 communication via Modbus RTU, Modbus ASCII or DNP 3.0 protocols. The unit is designed to install using DIN Rail mounting (see Section 3.4 for Shark® 200T transducer mounting information).



Figure 2.2: Shark® 200 Transducer

2.1.1: Voltage and Current Inputs

Universal Voltage Inputs

Voltage inputs allow measurement up to Nominal 480VAC (Phase to Reference) and 600VAC (Phase to Phase). This insures proper meter safety when wiring directly to high Voltage systems. The unit will perform to specification on 69 Volt, 120 Volt, 230 Volt, 277 Volt, and 347 Volt power systems.

NOTE: Higher Voltages require the use of potential transformers (PTs).

Current Inputs

The unit supports a 5 Amp or a 1 Amp secondary for current measurements.

NOTE: The secondary current must be specified and ordered with the meter.

The Shark® 200 meter's current inputs use a unique dual input method:

Method 1: CT Pass Through:

The CT passes directly through the meter without any physical termination on the meter. This insures that the meter cannot be a point of failure on the CT circuit. This is preferable for utility users when sharing relay class CTs. No Burden is added to the secondary CT circuit.

Method 2: Current "Gills":

This unit additionally provides ultra-rugged termination pass through bars that allow CT leads to be terminated on the meter. This, too, eliminates any possible point of failure at the meter. This is a preferred technique for insuring that relay class CT integrity is not compromised (the CT will not open in a fault condition).

2.1.2: Ordering Information

Shark200 - 60 - 10- V2- D -INP100S - X

1	2	3	4	5	6	7
---	---	---	---	---	---	---

1. Model:

Shark® 200 Meter/Transducer

Shark® 200T Transducer (no display)

2. Frequency:

50: 50 Hz System

60: 60 Hz System

3. Current Input:

10: 5 Amp Secondary

2: 1 Amp Secondary

4. V-Switch™ Key Pack:

V1: Multifunction meter only

V2: Above, with 2 MegaBytes data logging memory

V3: Above, with %THD

V4: Above, with limit and control functions

V5: Above, with 3 MegaBytes data logging memory and 64 samples per cycle
waveform recorder

V6: Above, with 4 MegaBytes data logging memory and 512 samples per cycle waveform recorder

See Section 2.1.3 for more information and instructions on obtaining a V-Switch™ key.

5. Power Supply:

D2 Option: Universal, (90 to 265) VAC @50/60Hz or (100 to 370) VDC

D Option: (18-60) VDC

6 and 7. I/O Slots 1 and 2 (see Chapter 7 for I/O Card Specifications):

X: None

INP100S: 10/100BaseT Ethernet

RO1S: 2 Relay outputs/2 Status inputs

PO1S: 4 Pulse outputs/4 Status inputs

1mAOS: 4 Channel Analog output 0-1 (bidirectional)

20mAOS: 4 Channel Analog output 4-20mA

FOSTS: Fiber Optic Output ST terminated

FOVPS: Fiber Optic Output Versatile Link terminated

Example:

Shark200-60-10-V2-D-INP100S-X

(Shark® 200 meter with 60 Hz System, 5 Amp Secondary, V-2 V-Switch™ key, 18-60 VDC power supply, 10/100BaseT Ethernet in Card Slot 1 and no card in Card Slot 2)

2.1.3: V-Switch™ Key Technology

The Shark® 200 meter is equipped with V-Switch™ key technology, a virtual firmware-based switch that lets you enable meter features through software communication. V-Switch™ key technology allows meter upgrades after installation without removal from service.

Available V-Switch™ key upgrades are as follows:

- V-Switch™ key 1 (V-1): Multifunction measurement
- V-Switch™ key 2 (V-2): Multifunction measurement and 2 MegaBytes* for data logging
- V-Switch™ key 3 (V-3): Multifunction measurement with harmonics and 2 Mega-Bytes* for data logging
- V-Switch™ key 4 (V-4): Multifunction measurement with harmonics, 2 MegaBytes* for data logging, and limit and control functions
- V-Switch™ key 5 (V-5): Multifunction measurement with harmonics, 3 MegaBytes* for data logging, limit and control functions, and 64 samples per cycle waveform recorder
- V-Switch™ key 6 (V-6): Multifunction measurement with harmonics, 4 MegaBytes* for data logging, limit and control functions, and 512 samples per cycle waveform recorder

*Because the memory is flash-based rather than NVRAM (non-volatile random-access memory), some sectors are reserved for overhead, erase procedures, and spare sectors for long-term wear reduction.

Obtaining a V-Switch™ Key:


Contact EIG's inside sales staff at sales@electroind.com or by calling (516) 334-0870 (USA) and provide the following information:

1. Serial number(s) of the meter(s) you are upgrading. Use the number(s), with leading zeros, shown in the Communicator EXT Device Status screen (from the Communicator EXT Main screen, click **Tools>Device Status**).

2. Desired V-Switch™ key.
3. Credit card or Purchase Order number. EIG will issue you the V-Switch™ key.

Enabling the V-Switch™ Key:

1. Open Communicator EXT.
2. Power up your meter.
3. Connect to the Shark® 200 meter through Communicator EXT (see Chapter 5).
4. Click **Tools>Change V-Switch** from the Title Bar. A screen opens, requesting the encrypted key. Enter the V-Switch™ key provided by EIG.
5. Click the **OK** button. The V-Switch™ key is enabled and the meter resets.

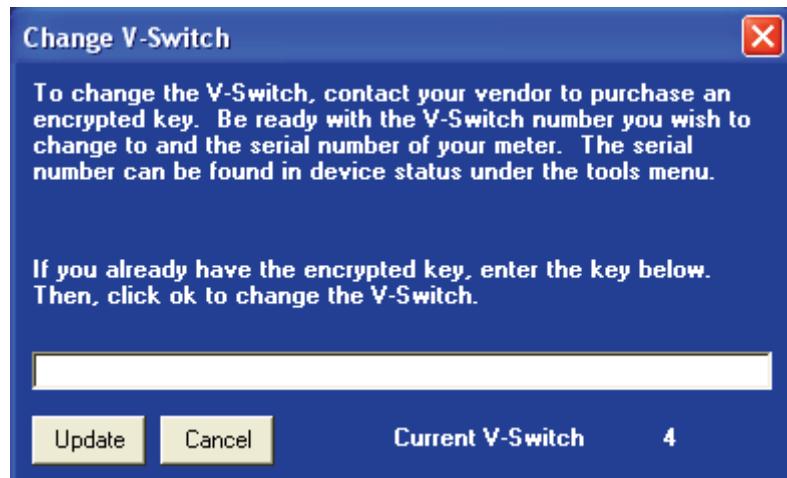

NOTE: For more details on software configuration, refer to the Communicator EXT User's Manual.

2.1.4: Measured Values

The Shark® 200 meter provides the following measured values all in real time instantaneous. As the table below shows, some values are also available in average, maximum and minimum.

Measured Values	Instantaneous	Avg	Max	Min
Voltage L-N	X		X	X
Voltage L-L	X		X	X
Current per Phase	X	X	X	X
Current Neutral	X	X	X	X
WATT(A,B,C,Tot.)	X	X	X	X
VAR (A,B,C,Tot.)	X	X	X	X
VA (A,B,C,Tot.)	X	X	X	X
PF (A,B,C,Tot.)	X	X	X	X
+Watt-Hour (A,B,C,Tot.)	X			
-Watt-Hour (A,B,C,Tot.)	X			
Watt-Hour Net	X			
+VAR-Hour (A,B,C,Tot.)	X			
-VAR-Hour (A,B,C,Tot.)	X			
VAR-Hour Net (A,B,C,Tot.)	X			
VA-Hour (A,B,C,Tot.)	X			
Frequency	X		X	X
Harmonics to the 40th Order	X			
%THD	X		X	X
Voltage Angles	X			
Current Angles	X			
% of Load Bar	X			
Waveform Scope	X			

2.1.5: Utility Peak Demand

The Shark® 200 meter provides user-configured Block (Fixed) window or Rolling window Demand modes. This feature lets you set up a customized Demand profile. Block window Demand mode records the average demand for time intervals you define (usually 5, 15 or 30 minutes). Rolling window Demand mode functions like multiple, overlapping Block windows. You define the subintervals at which an average of Demand is calculated. An example of Rolling window Demand mode would be a 15-minute Demand block using 5-minute subintervals, thus providing a new Demand reading every 5 minutes, based on the last 15 minutes.

Utility Demand features can be used to calculate Watt, VAR, VA and PF readings. Voltage provides an instantaneous Max and Min reading which displays the highest surge and lowest sag seen by the meter. All other parameters offer Max and Min capability over the user-selectable averaging period.

2.2: Specifications

Power Supply

Range:	D2 Option: Universal, (90 to 265) VAC @50/60Hz or (100 to 370)VDC D Option: (18-60) VDC
Power Consumption:	(5 to 10)VA, (3.5 to 7)W - depending on the meter's hardware configuration

Voltage Inputs

(For Accuracy specifications, see Section 2.4.)

Absolute Maximum Range:	Universal, Auto-ranging: Phase to Reference (Va, Vb, Vc to Vref): (20 to 576)VAC
	Phase to Phase (Va to Vb, Vb to Vc, Vc to Va): (0 to 721)VAC
Supported hookups:	3 Element Wye, 2.5 Element Wye, 2 Element Delta, 4 Wire Delta
Input Impedance:	1M Ohm/Phase
Burden:	0.36VA/Phase Max at 600 Volts; 0.014VA at 120 Volts
Pickup Voltage:	20VAC
Connection:	7 Pin 0.400" Pluggable Terminal Block

	AWG#12 -26/ (0.129 -3.31) mm ²
Fault Withstand:	Meets IEEE C37.90.1
Reading:	Programmable Full Scale to any PT ratio
Current Inputs	
(For Accuracy specifications, see Section 2.4.)	
Class 10:	5A Nominal, 10A Maximum
Class 2:	1A Nominal, 2A Maximum
Burden:	0.005VA Per Phase Max at 11 Amps
Pickup Current:	0.1% of Nominal (0.2% of Nominal if using Current Only mode, that is, there is no connection to the Voltage inputs)
Connections:	O Lug or U Lug electrical connection (Figure 4.1) Pass through wire, 0.177" / 4.5mm maximum diameter (Figure 4.2) Quick connect, 0.25" male tab (Figure 4.3)
Fault Withstand (at 23° C):	100A/10sec., 300A/3sec., 500A/1sec.
Reading:	Programmable Full Scale to any CT ratio

Continuous Current Withstand:	20 Amps for screw terminated or pass through connections
-------------------------------	---

KYZ/RS485 Port Specifications

RS485 Transceiver; meets or exceeds EIA/TIA-485 Standard

Type:	Two-wire, half duplex
-------	-----------------------

Min. input Impedance:	96kΩ
-----------------------	------

Max. output current:	±60mA
----------------------	-------

Wh Pulse

KYZ output contacts, and infrared LED light pulses through face plate (see Section 6.4 for Kh values):

Pulse Width:	90ms
--------------	------

Full Scale Frequency:	~3Hz
-----------------------	------

Contact type:	Solid state – SPDT (NO – C – NC)
---------------	----------------------------------

Relay type:	Solid state
-------------	-------------

Peak switching voltage:	DC ±350V
-------------------------	----------

Continuous load current:	120mA
--------------------------	-------

Peak load current:	350mA for 10ms
--------------------	----------------

On resistance, max.:	35Ω
----------------------	-----

Leakage current:	1µA@350V
------------------	----------

Isolation:	AC 3750V
------------	----------


Reset state:	(NC - C) Closed; (NO - C) Open
--------------	--------------------------------

Infrared LED:

Peak Spectral wavelength: 940nm


Reset state: Off

Internal schematic:

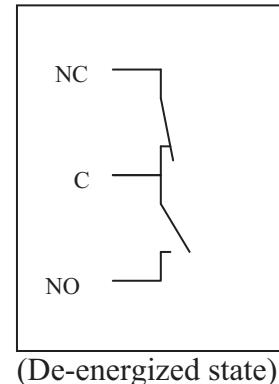

(De-energized state)

Output timing:

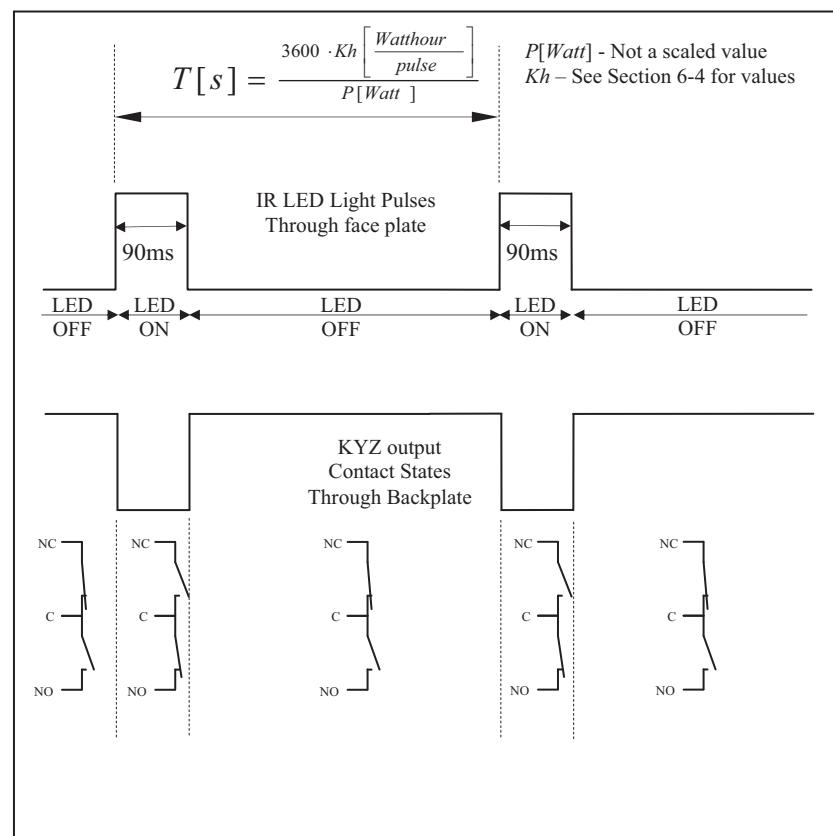

Isolation

All Inputs and Outputs are galvanically isolated to 2500 VAC

Environmental Rating

Storage:	(-20 to +70) ^o C
Operating:	(-20 to +70) ^o C
Humidity:	to 95% RH Non-condensing
Faceplate Rating:	NEMA12 (Water Resistant), mounting gasket included

Measurement Methods

Voltage, current:	True RMS
Power:	Sampling at over 400 samples per cycle on all channels

Update Rate

Watts, VAR and VA:	Every 6 cycles (e.g., 100ms @ 60 Hz)
All other parameters:	Every 60 cycles (e.g., 1 s @ 60 Hz) 1 second for Current Only measurement, if reference Voltage is not available

CommunicationStandard:

1. RS485 port through backplate
2. IrDA port through faceplate
3. Energy pulse output through backplate and Infrared LED through faceplate

Optional, through I/O card slots:

1. INP100S - 10/100BaseT Ethernet card
2. FOSTS - Fiber Optic output ST terminated card
3. FOVPS - Fiber Optic output Versatile Link terminated card

Protocols: Modbus RTU, Modbus ASCII, DNP
3.0

Com Port Baud Rate: 9600 to 57600 bps

Com Port Address: 001-247

Data Format: 8 Bit, No Parity

Shark® 200T transducer Default Initial communication baud
rate 9600 (See Chapter 5)

Mechanical Parameters

Dimensions: see Chapter 3.

Weight (without Option card): 2 pounds/ 0.9kg (ships in a 6"
/15.24cm cube container)

2.3: Compliance

- UL Listing: USL/CNL E250818
- CE (EN61326-1, FCC Part 15, Subpart B, Class A)
- IEC 62053-22 (0.2% Class)
- ANSI C12.20 (0.2% Accuracy)
- ANSI (IEEE) C37.90.1 Surge Withstand
- ANSI C62.41 (Burst)
- IEC 1000-4-2 (ESD)

- IEC 1000-4-3 (Radiated Immunity)
- IEC 1000-4-4 (Fast Transient)
- IEC1000-4-5 (Surge Immunity)
- UL Listed
- CE Compliant

2.4: Accuracy

(For full Range specifications see Section 2.2.)

Shark 200 Clock Accuracy: Max. +/-2 seconds per day at 25° C

For 23° C, 3 Phase balanced Wye or Delta load, at 50 or 60 Hz (as per order), 5A (Class 10) nominal unit, accuracy as follows:

Parameter	Accuracy	Accuracy Input Range
Voltage L-N [V]	0.1% of reading	(69 to 480)V
Voltage L-L [V]	0.2% of reading ²	(120 to 600)V
Current Phase [A]	0.1% of reading ^{1, 3}	(0.15 to 5) A
Current Neutral (calculated) [A]	2% of Full Scale ¹	(0.15 to 5) A @ (45 to 65) Hz
Active Power Total [W]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Active Energy Total [Wh]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Reactive Power Total [VAR]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0 to 0.8) lag/lead PF
Reactive Energy Total [VARh]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0 to 0.8) lag/lead PF
Apparent Power Total [VA]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF

Parameter	Accuracy	Accuracy Input Range1
Apparent Energy Total [VAh]	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Power Factor	0.2% of reading ^{1, 2}	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Frequency [Hz]	+/- 0.03 Hz	(45 to 65) Hz
Total Harmonic Distortion [%]	+/- 2% ^{1, 4}	(0.5 to 10)A or (69 to 480)V, measurement range (1 to 99.99)%
Load Bar	+/- 1 segment	(0.005 to 6) A

1

- For 2.5 element programmed units, degrade accuracy by an additional 0.5% of reading.
- For 1A (Class 2) Nominal, degrade accuracy to 0.5% of reading for watts and energy; all other values 2 times rated accuracy.
- For 1A (Class 2) Nominal, the input current range for accuracy specification is 20% of the values listed in the table.

2

For unbalanced Voltage inputs where at least one crosses the 150V auto-scale threshold (for example, 120V/120V/208V system), degrade the accuracy to 0.4% of reading.

3

With reference Voltage applied (VA, VB, or VC). Otherwise, degrade accuracy to 0.2%. See hookup diagrams 8, 9, and 10 in Chapter 4.

4

At least one Voltage input (minimum 20 VAC) must be connected for THD measurement on current channels.



This page intentionally left blank.

3: Mechanical Installation

3.1: Introduction

The Shark® 200 meter can be installed using a standard ANSI C39.1 (4" round) or an IEC 92mm DIN (square) form. In new installations, simply use existing DIN or ANSI punches. For existing panels, pull out old analog meters and replace them with the Shark® 200 meter. See Section 3.4 for Shark® 200T transducer installation. See Chapter 4 for wiring diagrams.

NOTE: The drawings shown below and on the next page give you the meter dimensions in inches and centimeters [cm shown in brackets]. Tolerance is +/- 0.1" [.25 cm].

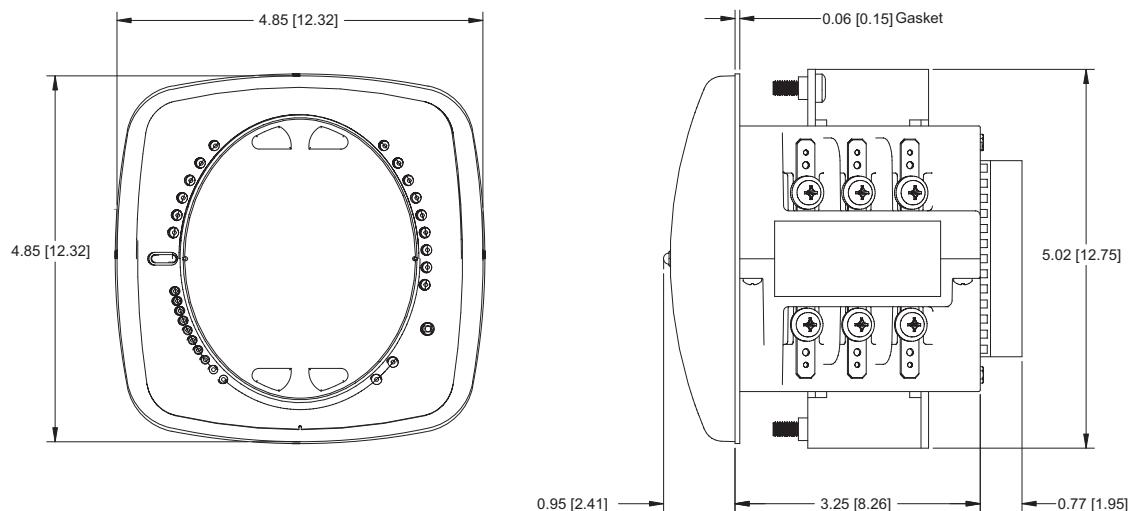


Figure 3.1: Meter Front and Side Dimensions

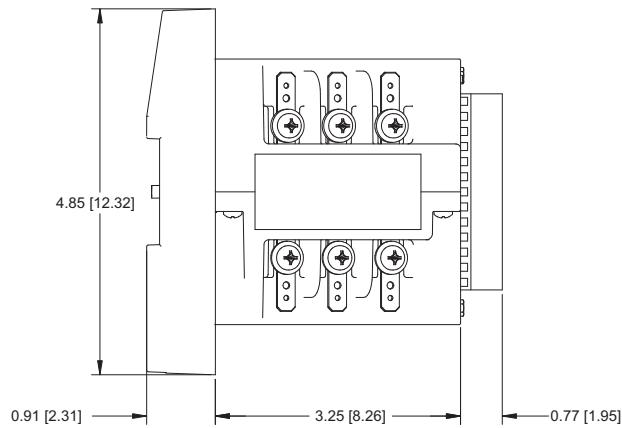


Figure 3.2: Shark® 200T Dimensions

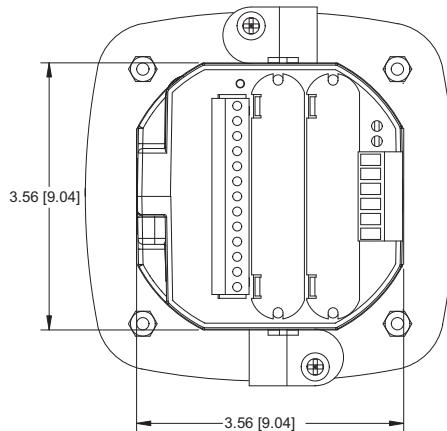


Figure 3.3: Meter Back Dimensions

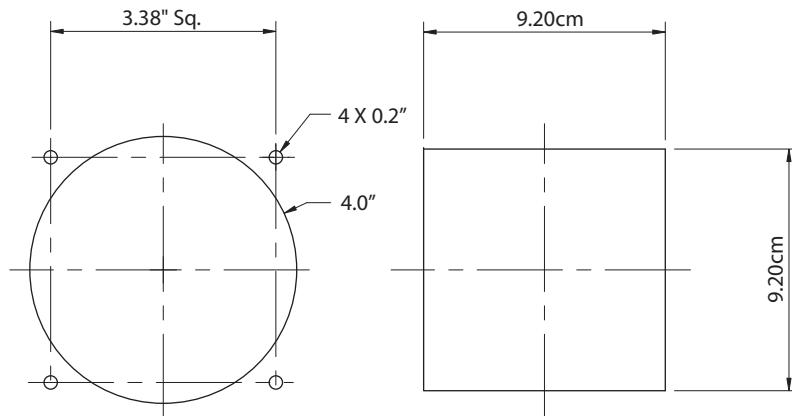


Figure 3.4: ANSI and DIN Cutout Dimensions

Recommended Tools for Shark® 200 Meter Installation:

- #2 Phillips screwdriver
- Small adjustable wrench
- Wire cutters

The Shark® 200 meter is designed to withstand harsh environmental conditions; however it is recommended you install it in a dry location, free from dirt and corrosive substances (see Environmental specifications in Chapter 2).

3.2: ANSI Installation Steps

1. Insert 4 threaded rods by hand into the back of meter. Twist until secure.
2. Slide NEMA 12 Mounting Gasket onto back of meter with rods in place.
3. Slide meter with Mounting Gasket into panel.

4. Secure from back of panel with lock washer and nut on each threaded rod. Use a small wrench to tighten. Do not overtighten. The maximum installation torque is 0.4 Newton-Meter.

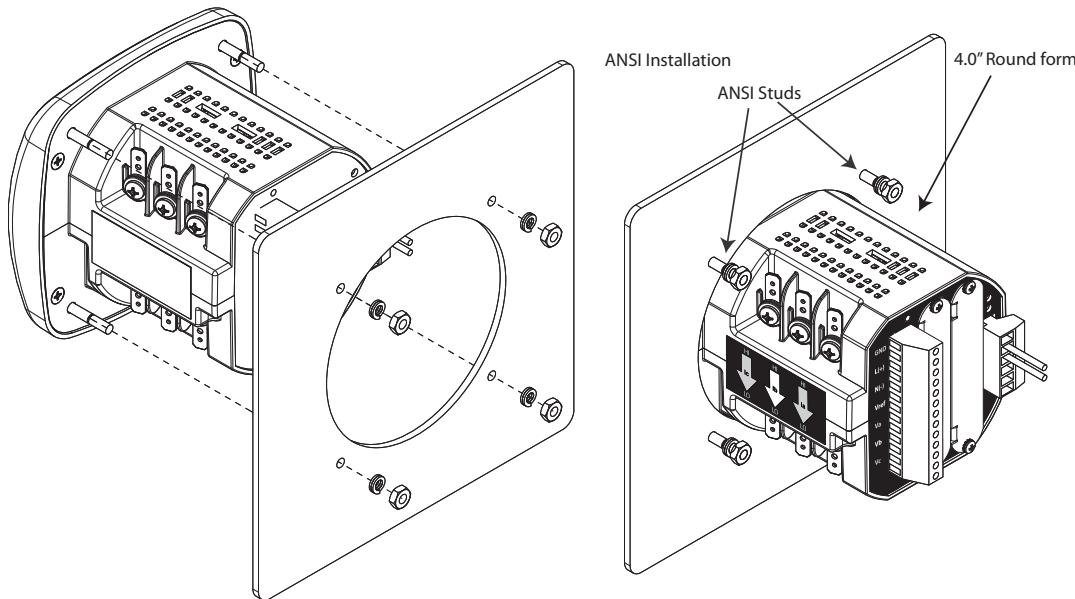


Figure 3.5: ANSI Installation

3.3: DIN Installation Steps

1. Slide meter with NEMA 12 Mounting Gasket into panel (remove ANSI Studs, if in place).
2. From back of panel, slide 2 DIN Mounting Brackets into grooves in top and bottom of meter housing. Snap into place.

3. Secure meter to panel with lock washer and a #8 screw through each of the 2 mounting brackets. Tighten with a #2 Phillips screwdriver. Do not overtighten. The maximum installation torque is 0.4 Newton-Meter.

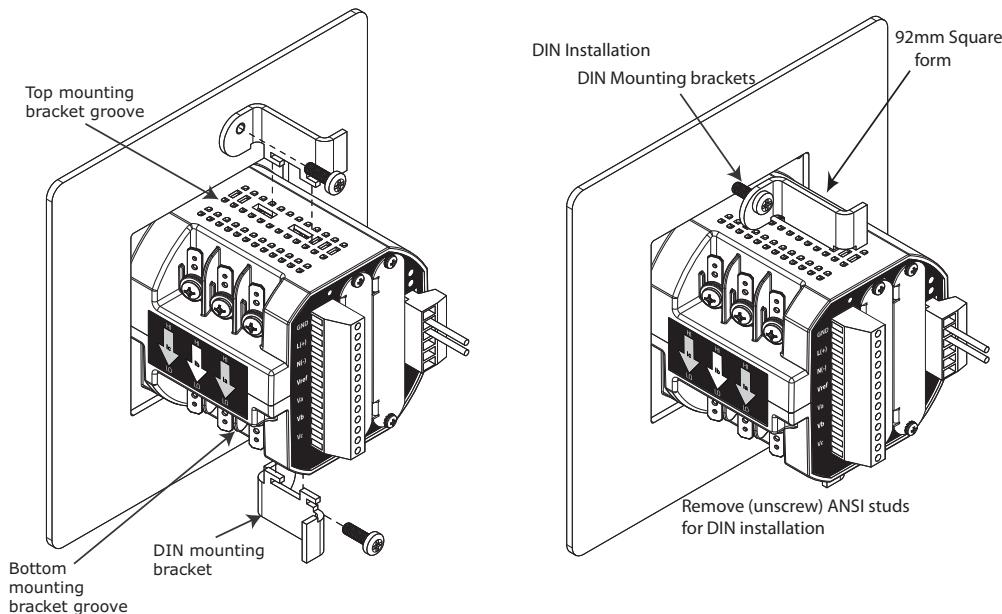


Figure 3.6: DIN Installation

3.4: Transducer Installation

Use DIN Rail mounting to install the Shark® 200T transducer.

Specs for DIN Rail Mounting

International Standards DIN 46277/3

DIN Rail (Slotted) Dimensions

0.297244" x 1.377953" x 3" /.755cm x 3.5cm x 7.62cm

1. Slide top groove of meter onto the DIN Rail.
2. Press gently until the meter clicks into place.

NOTES:

- To remove the meter from the DIN Rail, pull down on the Release Clip to detach the unit from the rail (see Figure 3.7).
- If mounting with the DIN Rail provided, use the black rubber stoppers, also provided (see Figure 3.8).

NOTE ON DIN RAILS: DIN Rails are commonly used as a mounting channel for most terminal blocks, control devices, circuit protection devices and PLCs. DIN Rails are made of electrolytically plated cold rolled steel and are also available in aluminum, PVC, stainless steel and copper.

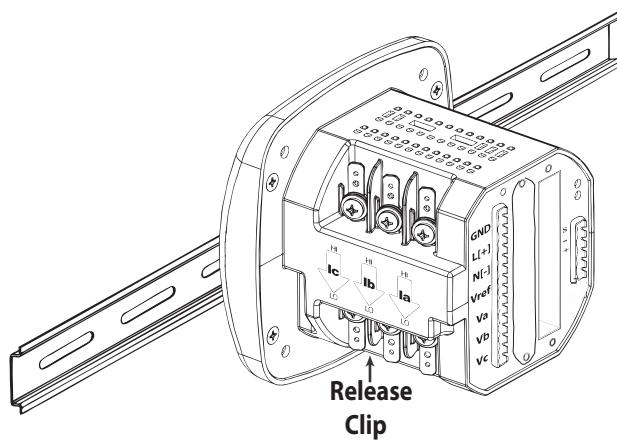


Figure 3.7: Transducer on DIN Rail

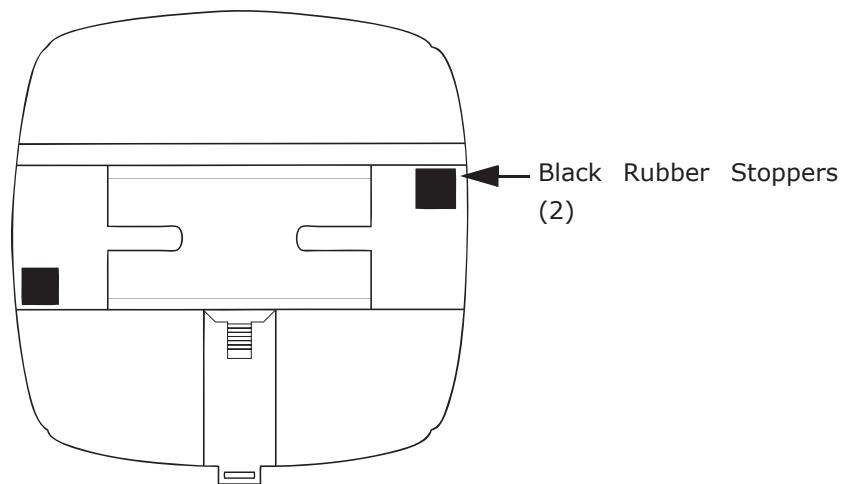


Figure 3.8: DIN Rail Detail

This page intentionally left blank.

4: Electrical Installation

4.1: Considerations When Installing Meters



Installation of the Shark® 200 meter must be performed only by qualified personnel who follow standard safety precautions during all procedures. Those personnel should have appropriate training and experience with high Voltage devices. Appropriate safety gloves, safety glasses and protective clothing is recommended.

During normal operation of the Shark® 200 meter, dangerous Voltages flow through many parts of the meter, including: Terminals and any connected CTs (Current Transformers) and PTs (Potential Transformers), all I/O Modules (Inputs and Outputs) and their circuits.

All Primary and Secondary circuits can, at times, produce lethal Voltages and currents. Avoid contact with any current-carrying surfaces.

Do not use the meter or any I/O Output device for primary protection or in an energy-limiting capacity. The meter can only be used as secondary protection.

Do not use the meter for applications where failure of the meter may cause harm or death.

Do not use the meter for any application where there may be a risk of fire.

All meter terminals should be inaccessible after installation.

Do not apply more than the maximum Voltage the meter or any attached device can withstand. Refer to meter and/or device labels and to the specifications for all devices before applying voltages. Do not HIPOT/Dielectric test any Outputs, Inputs or Communications terminals.

EIG recommends the use of Shorting Blocks and Fuses for Voltage leads and power supply to prevent hazardous Voltage conditions or damage to CTs, if the meter needs to be removed from service. CT grounding is optional.

IMPORTANT!

IF THE EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, THE PROTECTION PROVIDED BY THE EQUIPMENT MAY BE IMPAIRED.

- THERE IS NO REQUIRED PREVENTIVE MAINTENANCE OR INSPECTION NECESSARY FOR SAFETY. HOWEVER, ANY REPAIR OR MAINTENANCE SHOULD BE PERFORMED BY THE FACTORY.



DISCONNECT DEVICE: The following part is considered the equipment disconnect device. A SWITCH OR CIRCUIT-BREAKER SHALL BE INCLUDED IN THE END-USE EQUIPMENT OR BUILDING INSTALLATION. THE SWITCH SHALL BE IN CLOSE PROXIMITY TO THE EQUIPMENT AND WITHIN EASY REACH OF THE OPERATOR. THE SWITCH SHALL BE MARKED AS THE DISCONNECTING DEVICE FOR THE EQUIPMENT.

4.2: CT Leads Terminated to Meter

The Shark® 200 meter is designed to have current inputs wired in one of three ways. Figure 4.1 shows the most typical connection where CT Leads are terminated to the meter at the current gills. This connection uses nickel-plated brass studs (current gills) with screws at each end. This connection allows the CT wires to be terminated using either an "O" or a "U" lug. Tighten the screws with a #2 Phillips screwdriver. The maximum installation torque is 1 Newton-Meter.

Other current connections are shown in figures 4.2 and 4.3. Voltage and RS485/KYZ connections are shown in Figure 4.4.

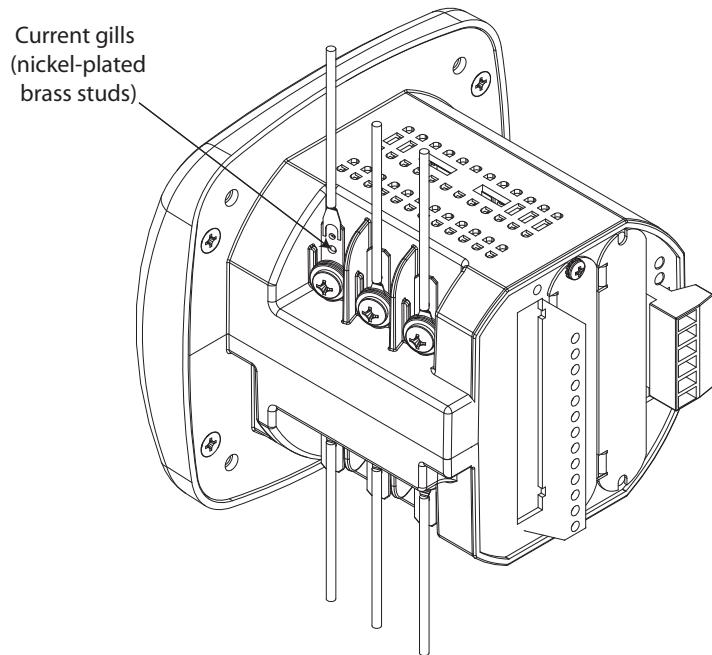


Figure 4.1: CT Leads Terminated to Meter, #8 Screw for Lug Connection

Wiring Diagrams are shown in Section 4.8 of this chapter.

Communications connections are detailed in Chapter 5.

4.3: CT Leads Pass Through (No Meter Termination)

The second method allows the CT wires to pass through the CT inputs without terminating at the meter. In this case, remove the current gills and place the CT wire directly through the CT opening. The opening accommodates up to 0.177" / 4.5mm maximum diameter CT wire.

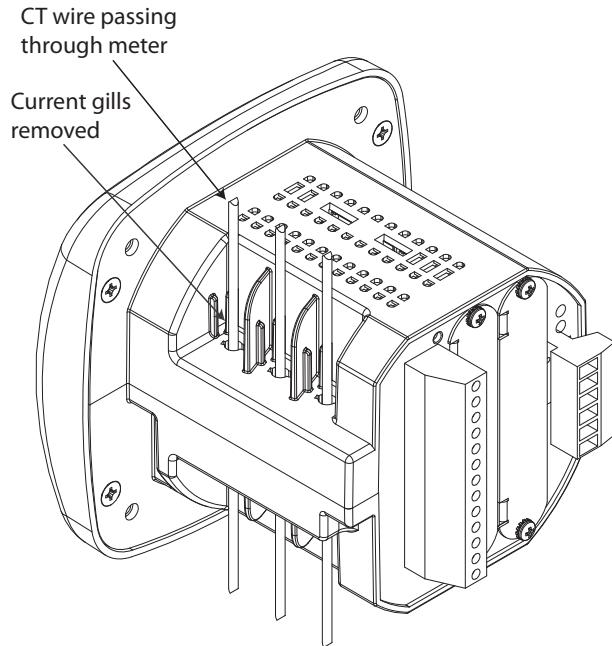


Figure 4.2: Pass Through Wire Electrical Connection

4.4: Quick Connect Crimp-on Terminations

For quick termination or for portable applications, 0.25" quick connect crimp-on connectors can also be used

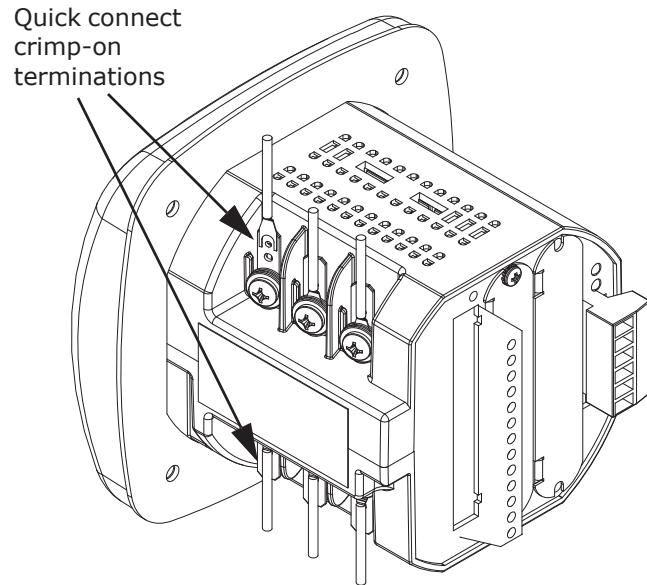


Figure 4.3: Quick Connect Electrical Connection

4.5: Voltage and Power Supply Connections

Voltage inputs are connected to the back of the unit via optional wire connectors. The connectors accommodate AWG# 12 -26/ (0.129 - 3.31)mm².

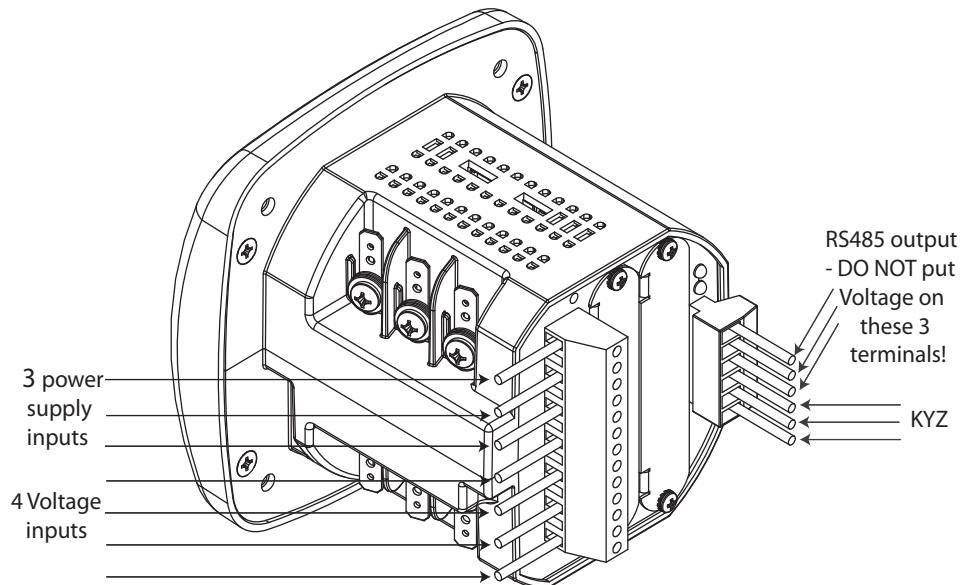


Figure 4.4: Meter Connections

4.6: Ground Connections

The meter's Ground terminals should be connected directly to the installation's protective earth ground. Use AWG# 12/2.5 mm² wire for this connection.

4.7: Voltage Fuses

EIG recommends the use of fuses on each of the sense voltages and on the control power, even though the wiring diagrams in this chapter do not show them.

- Use a 0.1 Amp fuse on each voltage input.
- Use a 3 Amp Slow Blow fuse on the power supply.

EIG offers the EI-CP Panel meter protective fuse kit, which can be ordered from EIG's webstore: www.electroind.com/store. Select Fuse Kits from the list on the left side of the webpage.


4.8: Electrical Connection Diagrams

The following pages contain electrical connection diagrams for the Shark® 200 meter. Choose the diagram that best suits your application. Be sure to maintain the CT polarity when wiring.


The diagrams are presented in the following order:

1. Three Phase, Four-Wire System Wye/Delta with Direct Voltage, 3 Element
 - a. Example of Dual-Phase Hookup
 - b. Example of Single Phase Hookup
2. Three Phase, Four-Wire System Wye with Direct Voltage, 2.5 Element
3. Three-Phase, Four-Wire Wye/Delta with PTs, 3 Element
4. Three-Phase, Four-Wire Wye with PTs, 2.5 Element
5. Three-Phase, Three-Wire Delta with Direct Voltage
6. Three-Phase, Three-Wire Delta with 2 PTs
7. Three-Phase, Three-Wire Delta with 3 PTs
8. Current Only Measurement (Three Phase)
9. Current Only Measurement (Dual Phase)
10. Current Only Measurement (Single Phase)


1. Service: WYE/Delta, 4-Wire with No PTs, 3 CTs

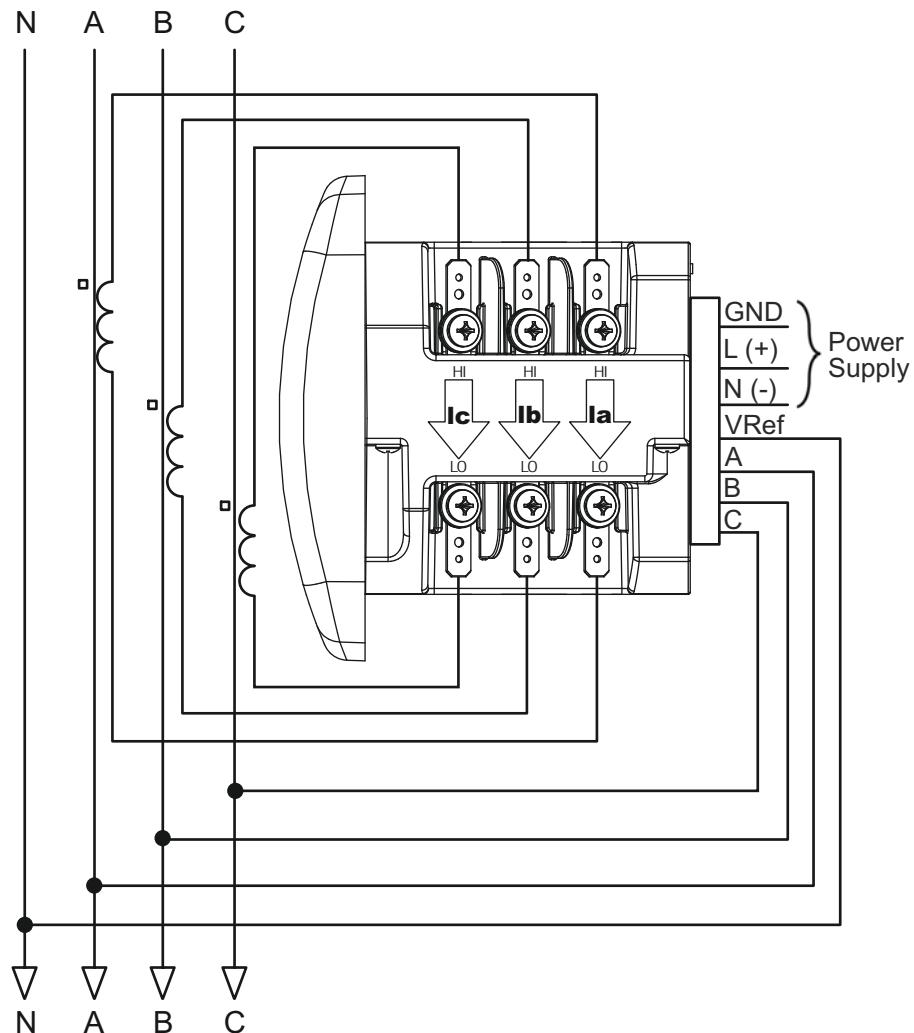


Select: " 3 EL WYE " (3 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

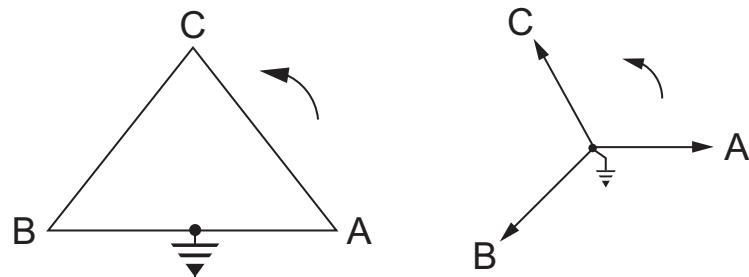

1a. Example of Dual Phase Hookup

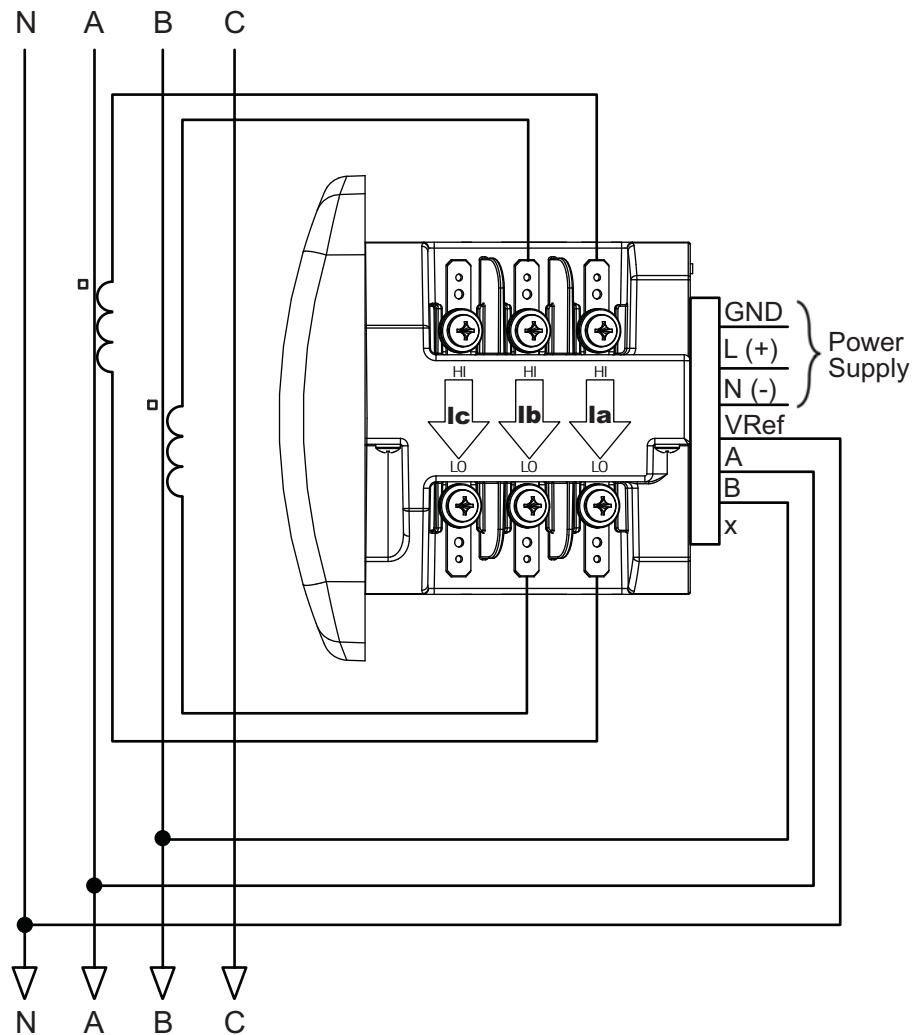


Select: " 3 EL WYE " (3 Element Wye) from the Shark® meter's Front Panel Display.
 (See Chapter 6.)

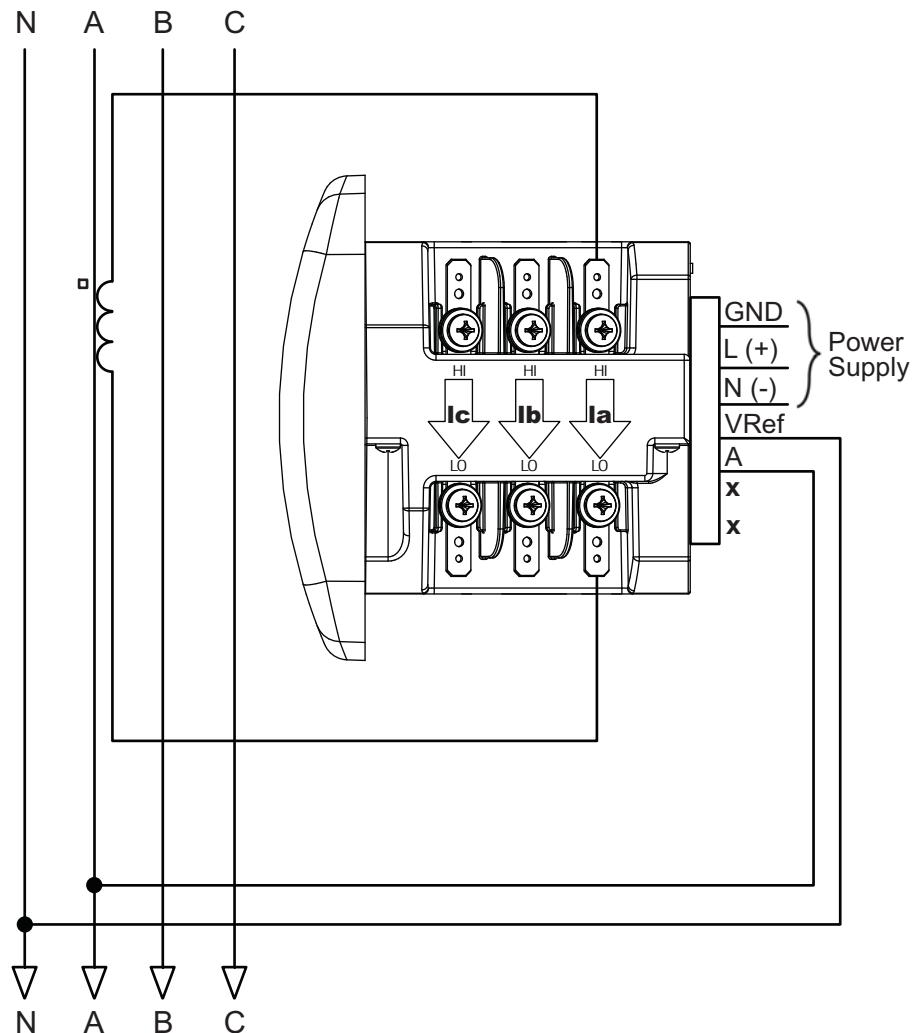
1b. Example of Single Phase Hookup

Select: " 3 EL WYE " (3 Element Wye) from the Shark® meter's Front Panel Display.
(See Chapter 6.)


2. Service: 2.5 Element WYE, 4-Wire with No PTs, 3 CTs

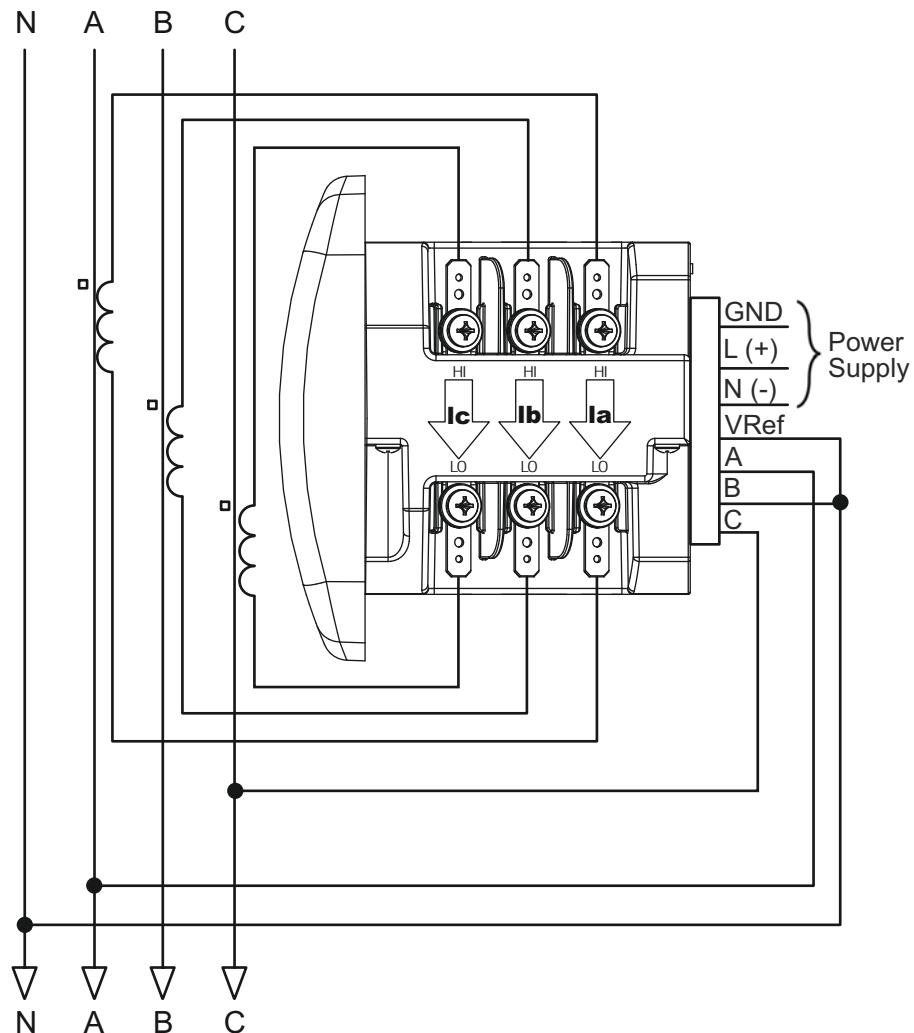


Select: "2.5 EL WYE" (2.5 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

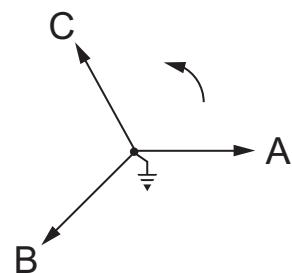


3. Service: WYE/Delta, 4-Wire with 3 PTs, 3 CTs

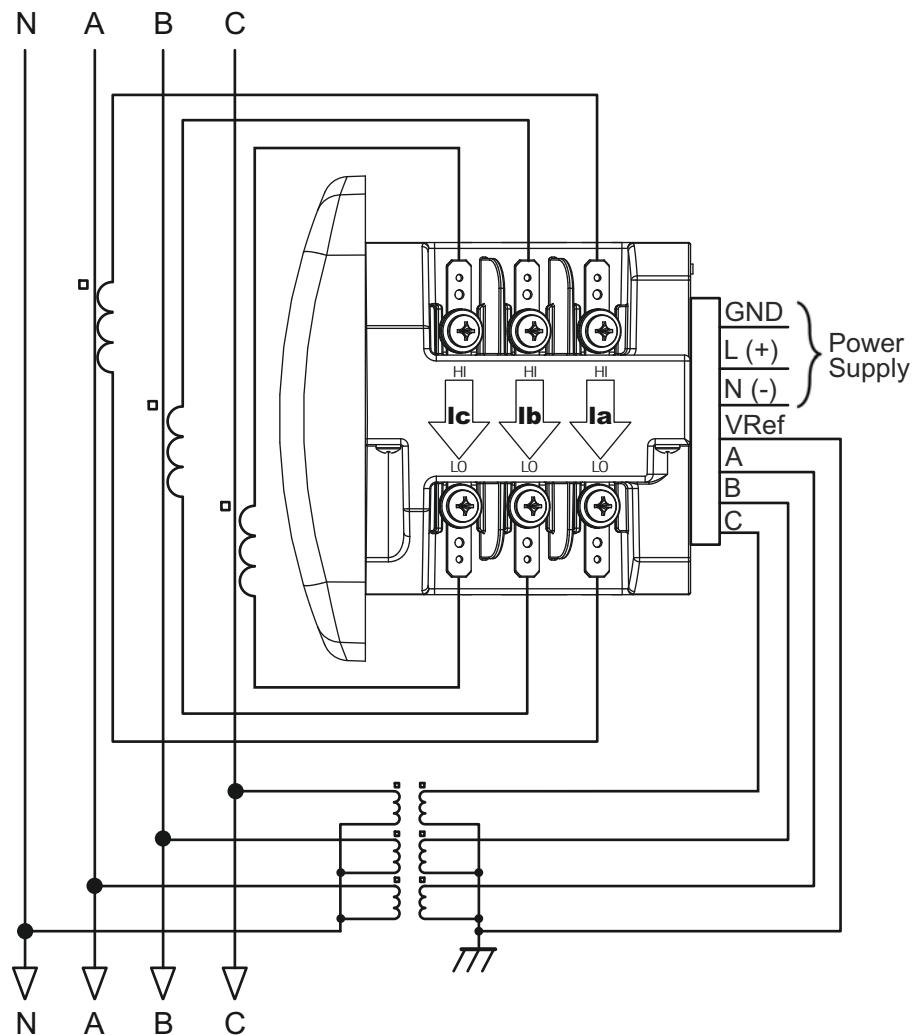


Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

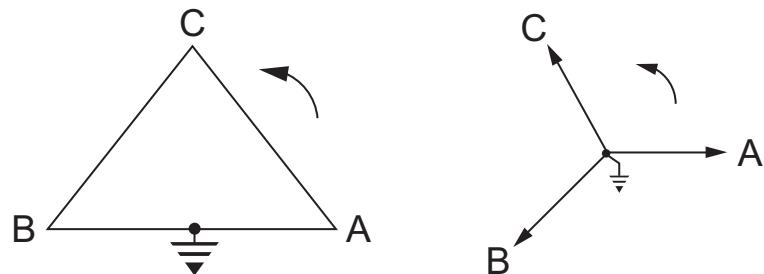


4. Service: 2.5 Element WYE, 4-Wire with 2 PTs, 3 CTs

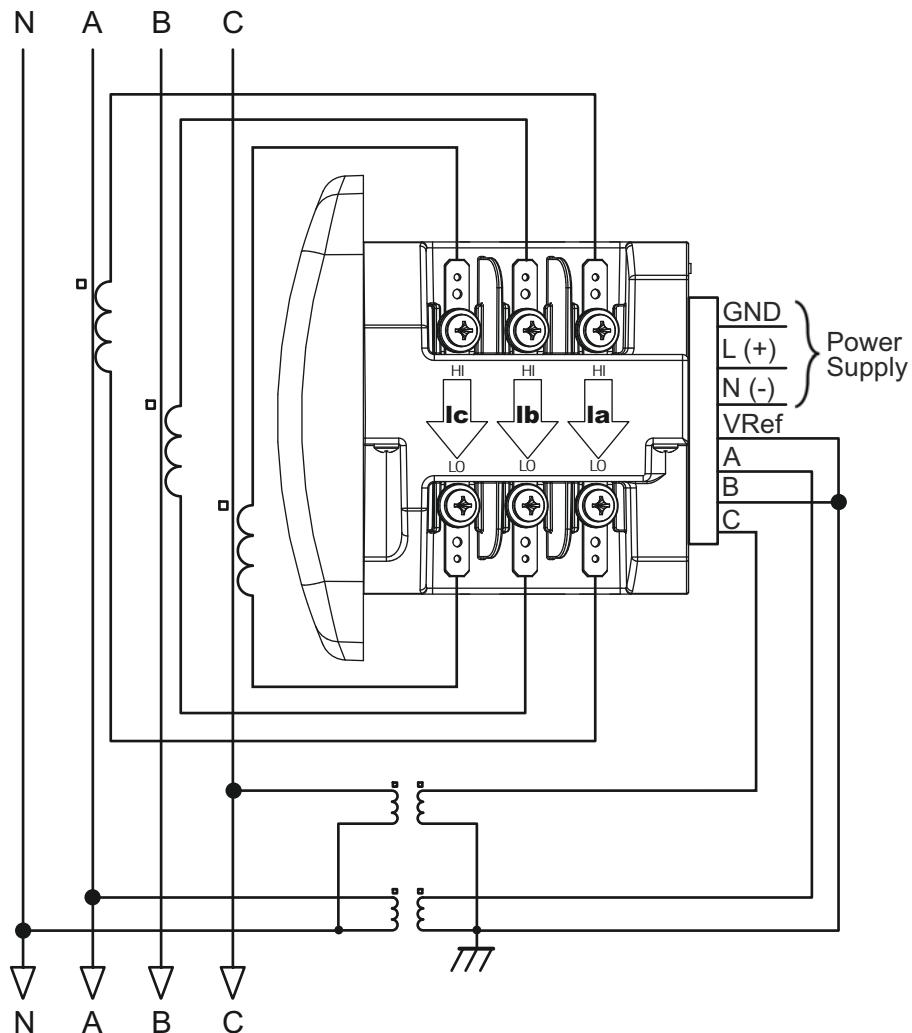


Select: "2.5 EL WYE" (2.5 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

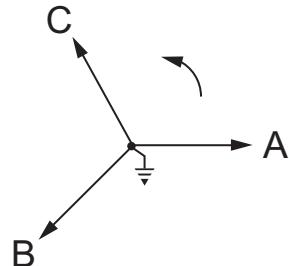


5. Service: Delta, 3-Wire with No PTs, 2 CTs

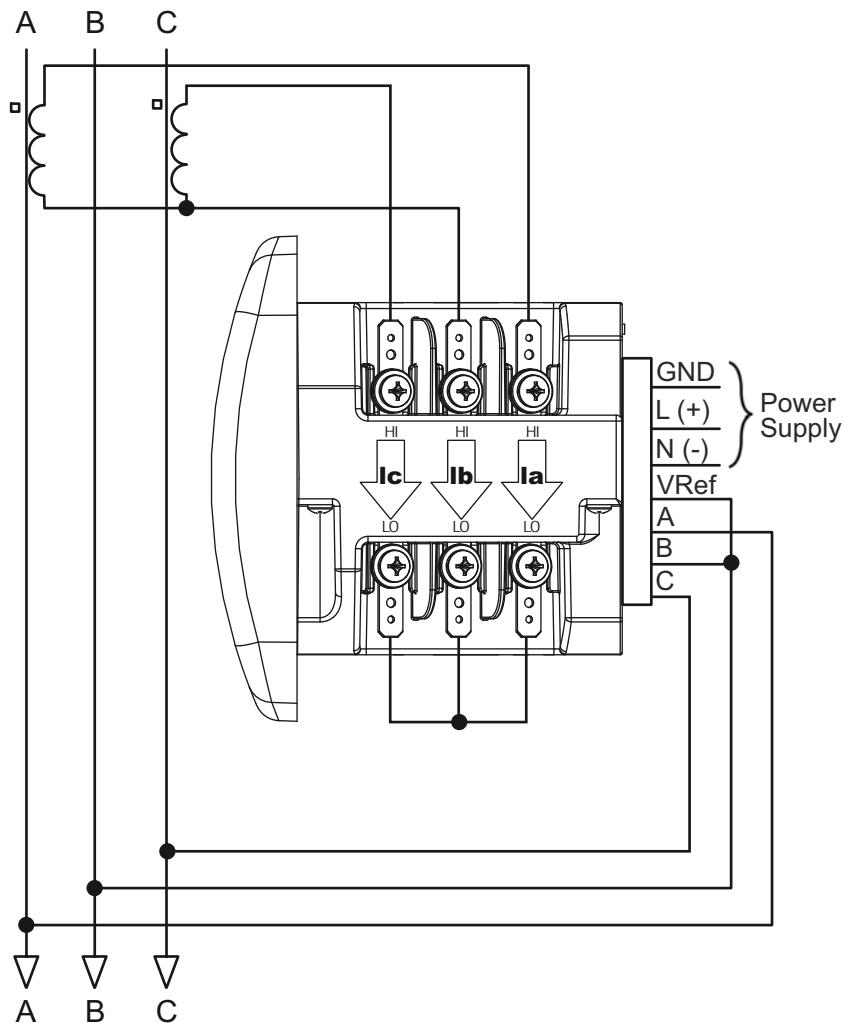


Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's front panel display (see Chapter 6).

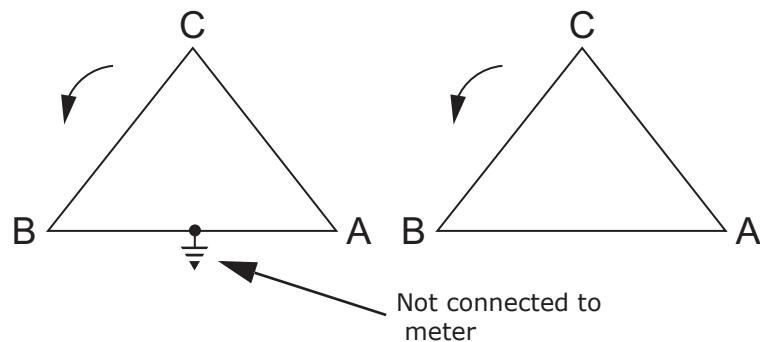


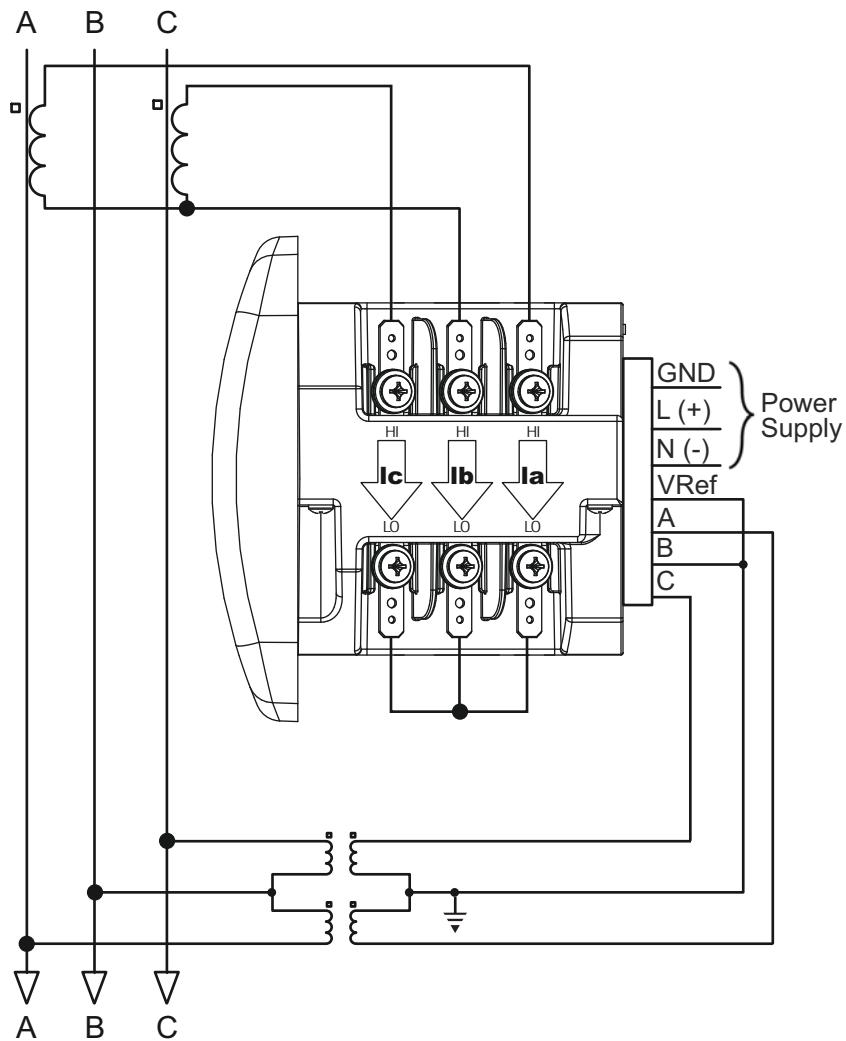6. Service: Delta, 3-Wire with 2 PTs, 2 CTs

Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's front panel display (see Chapter 6).

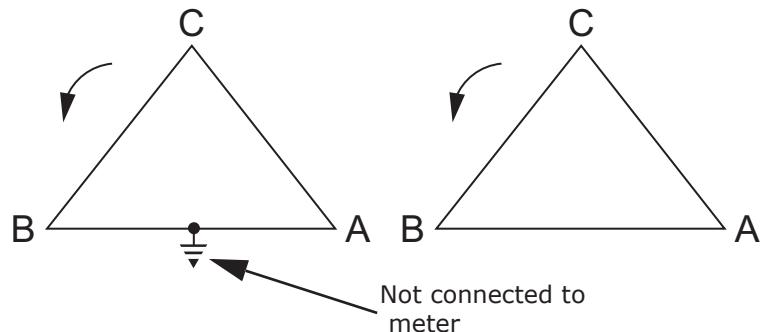


7. Service: Delta, 3-Wire with 2 PTs, 3 CTs

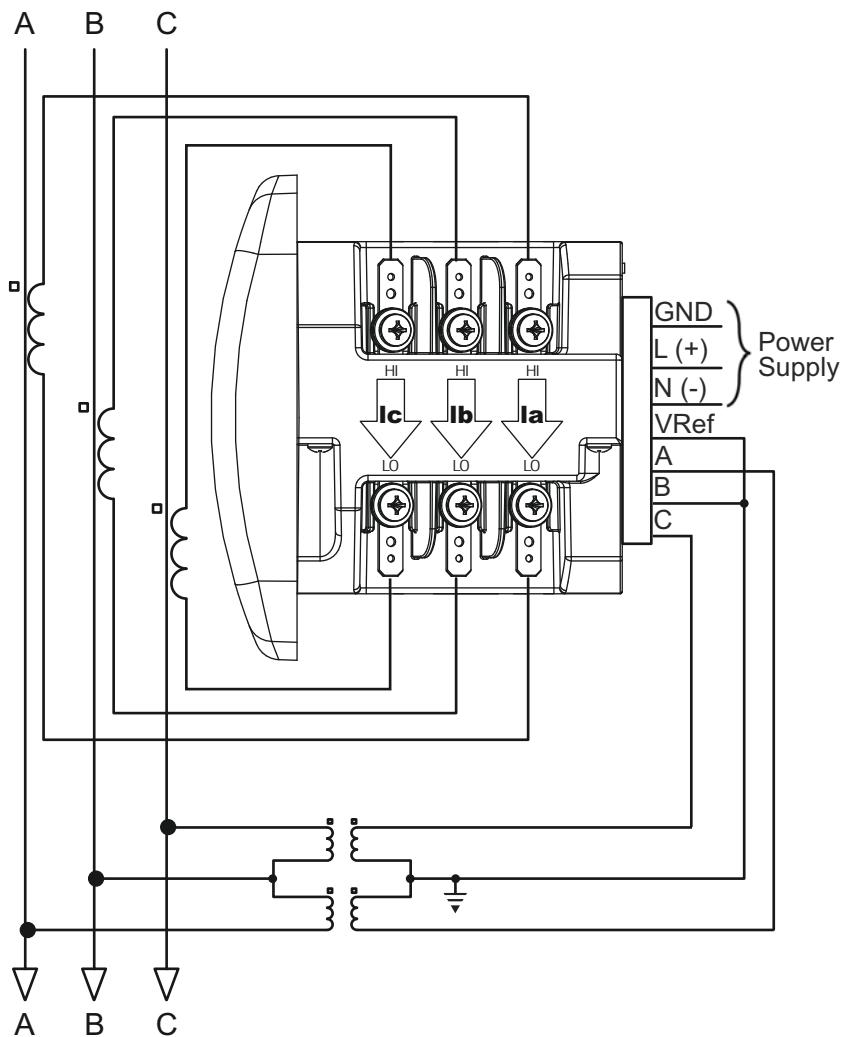


Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's front panel display (see Chapter 6).

NOTE: The third CT for hookup is optional, and is used only for Current measurement.

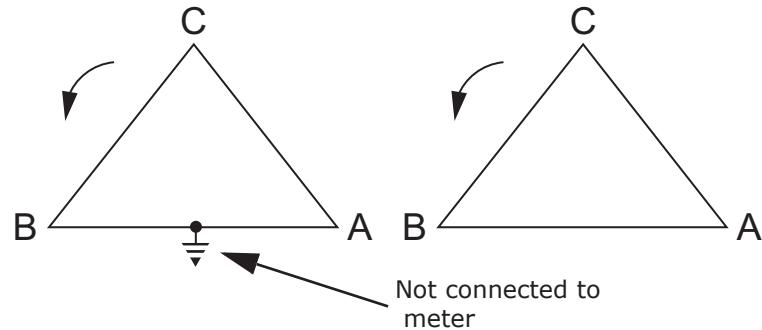


8. Service: Current Only Measurement (Three Phase)

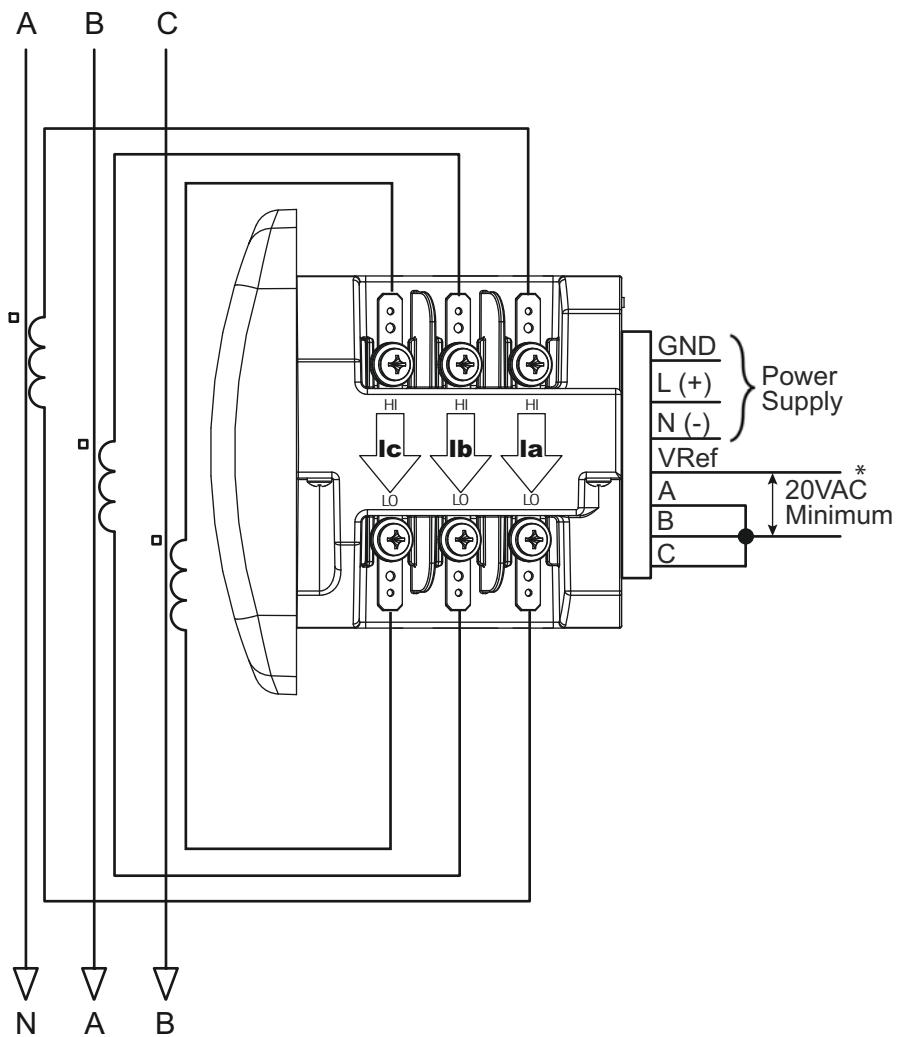

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's front panel display (see Chapter 6.)

* This connection is not required, but is recommended for improved accuracy.


9. Service: Current Only Measurement (Dual Phase)

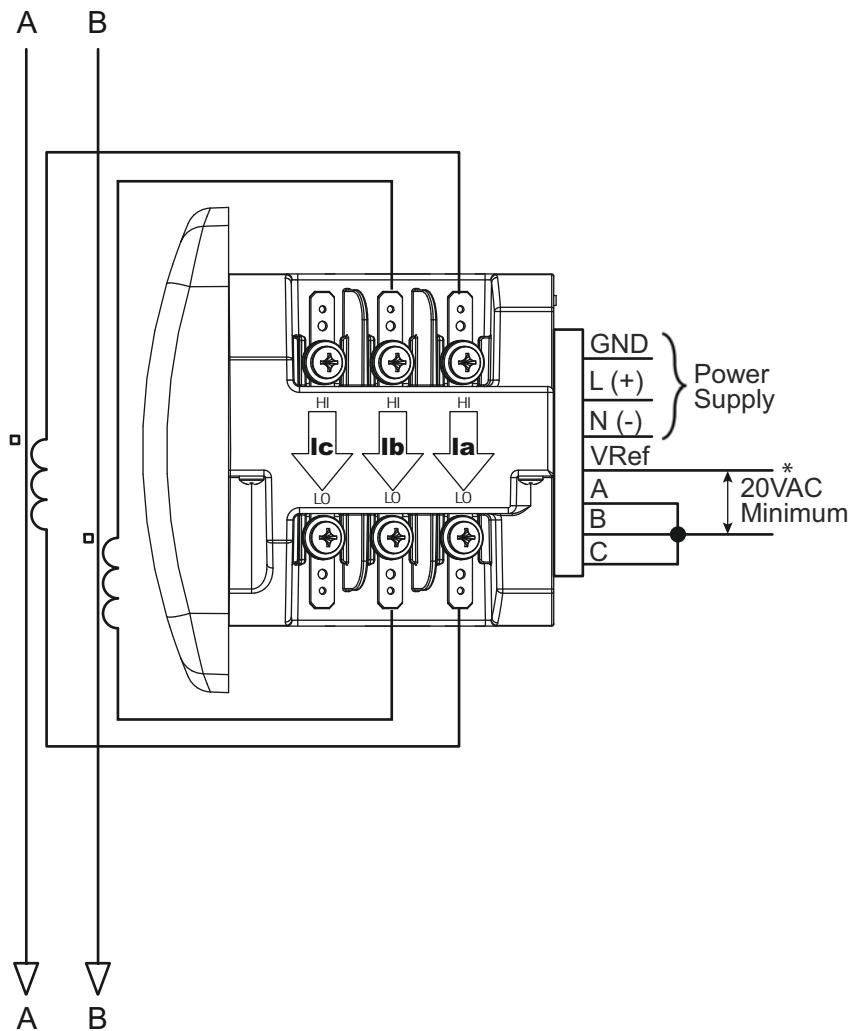

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

* This connection is not required, but is recommended for improved accuracy.

10. Service: Current Only Measurement (Single Phase)

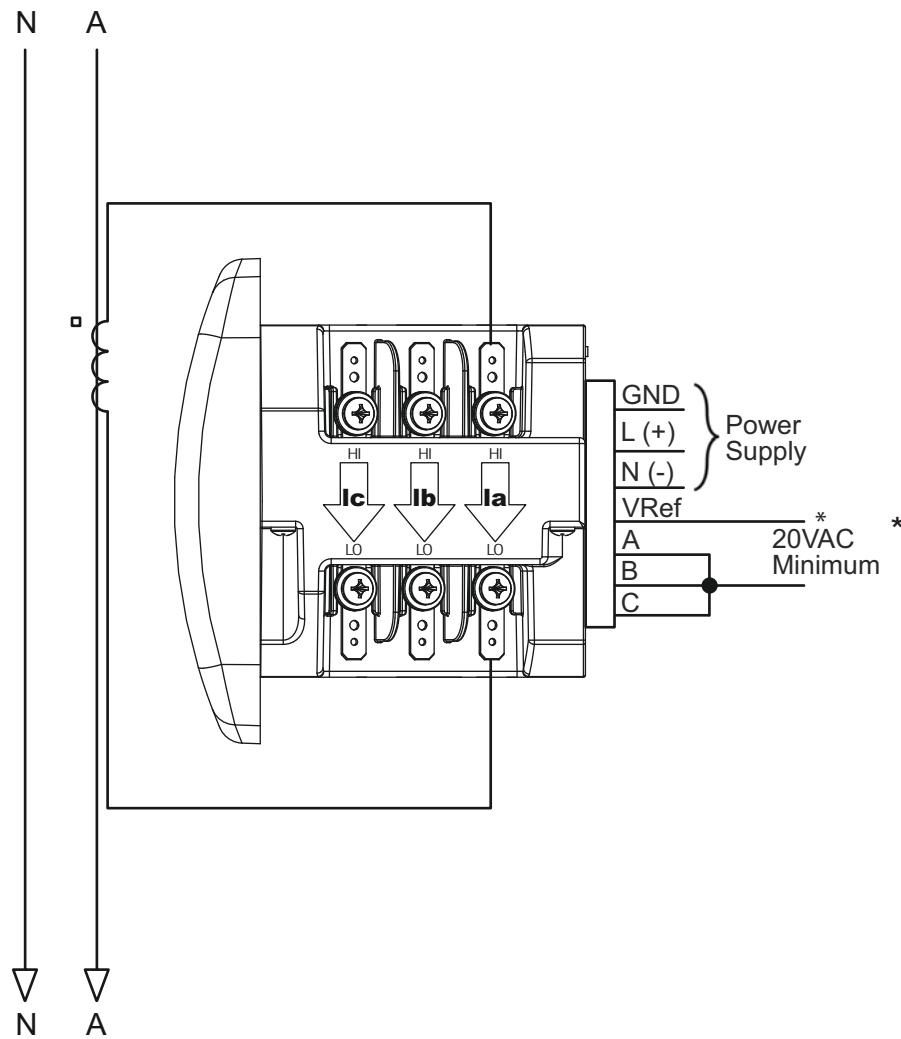

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's front panel display (see Chapter 6).

* This connection is not required, but is recommended for improved accuracy.

NOTE: The diagram shows a connection to Phase A, but you can also connect to Phase B or Phase C.

This page intentionally left blank.

5: Communication Installation

5.1: Shark® 200 Meter Communication

The Shark® 200 meter provides two independent Communication ports. The first port, Com 1, is an optical IrDA port. The second port, Com 2, provides RS485 communication speaking Modbus ASCII, Modbus RTU, and DNP 3.0 protocols. Additionally, the Shark® 200 meter has two optional communication cards: the Fiber Optic communication card and the 10/100BaseT Ethernet communication card. See Chapter 7 for more information on these options.

5.1.1: IrDA Port (Com 1)

The Shark® 200 meter's Com 1 IrDA port is on the face of the meter. The IrDA port allows the unit to be read and programmed without the need of a communication cable. Just point at the meter with an IrDA-equipped laptop PC to configure it.

NOTES:

- Settings for Com 1 (IrDA Port) are configured using Communicator EXT software.
- This port only communicates via Modbus ASCII Protocol.
- Refer to Appendix D for instructions on using EIG's USB to IrDA Adapter.

5.1.2: RS485 / KYZ Output (Com 2)

Com 2 provides a combination RS485 and an Energy Pulse Output (KYZ pulse).

See Chapter 2, Section 2.2 for the KYZ Output specifications; see Chapter 6, Section 6.4 for pulse constants.

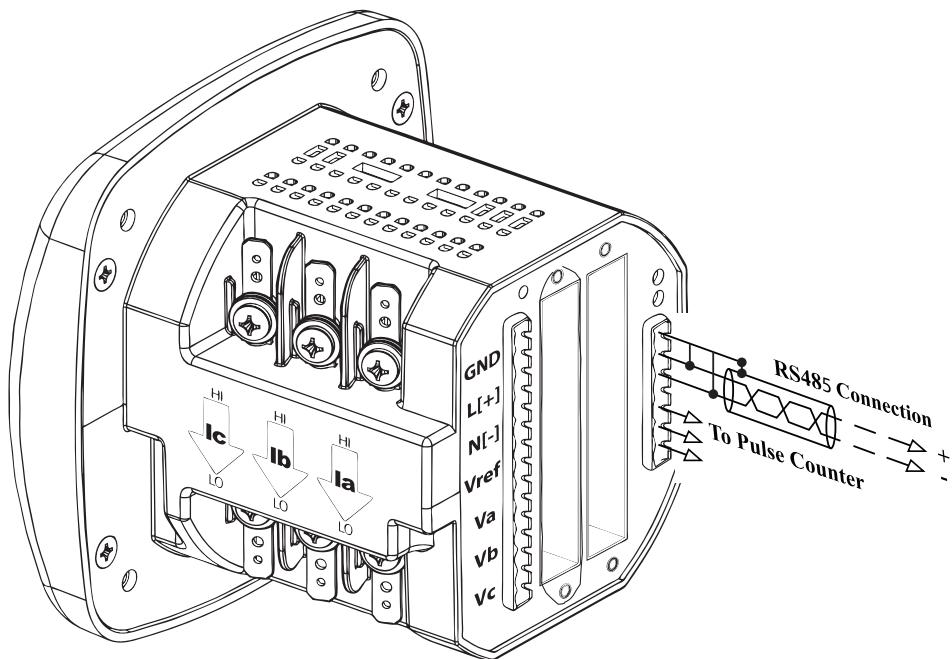


Figure 5.1: Shark® 200 Meter Back with RS485 Communication Installation

RS485 allows you to connect one or multiple Shark® 200 meters to a PC or other device, at either a local or remote site. All RS485 connections are viable for up to 4000 feet (1219.20 meters).

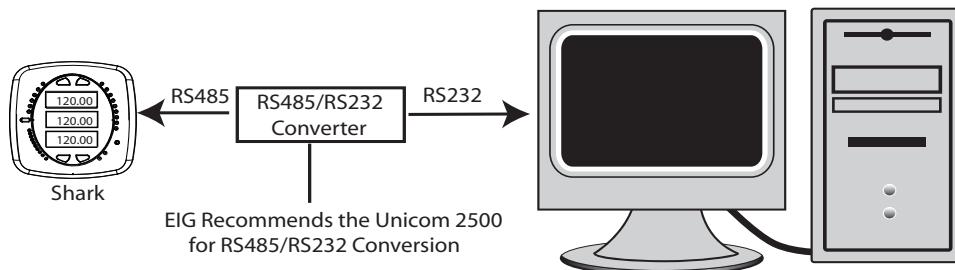


Figure 5.2: Shark® 200 Meter Connected to a PC via RS485 bus

As shown in Figure 5.2, to connect a Shark® 200 meter to a PC, you need to use an RS485 to RS232 converter, such as EIG's Unicom 2500. See Section 5.1.2.1 for information on using the Unicom 2500 with the Shark® 200 meter.

Figure 5.3 shows the detail of a 2-wire RS485 connection

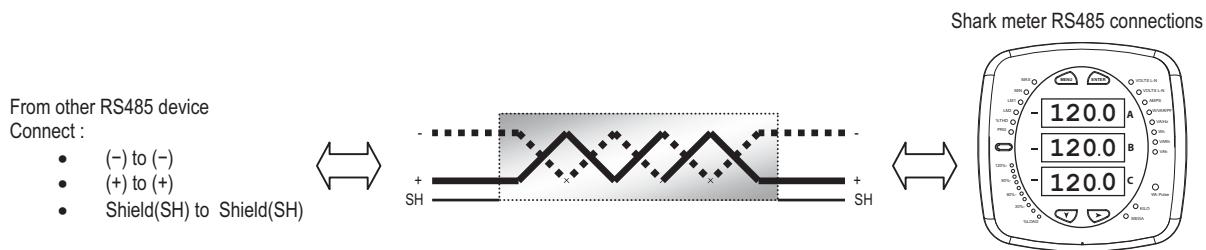


Figure 5.3: 2-wire RS485 Connection

NOTES:

For All RS485 Connections:

- Use a shielded twisted pair cable and ground the shield, preferably at one location only.
- Establish point-to-point configurations for each device on a RS485 bus: connect (+) terminals to (+) terminals; connect (-) terminals to (-) terminals.
- You may connect up to 31 meters on a single bus using RS485. Before assembling the bus, each meter must have a unique address: refer to Chapter 5 in the *Communicator EXT User Manual* for instructions.
- Protect cables from sources of electrical noise.
- Avoid both "Star" and "Tee" connections (see Figure 5.5).
- No more than two cables should be connected at any one point on an RS485 network, whether the connections are for devices, converters, or terminal strips.
- Include all segments when calculating the total cable length of a network. If you are not using an RS485 repeater, the maximum length for cable connecting all devices is 4000 feet (1219.20 meters).
- Connect shield to RS485 Master and individual devices as shown in Figure 5.4. You may also connect the shield to earth-ground at one point.
- Termination Resistors (RT) may be needed on both ends for longer length transmission lines. However, since the meter has some level of termination internally,

Termination Resistors may not be needed. When they are used, the value of the Termination Resistors is determined by the electrical parameters of the cable.

Figure 5.4 shows a representation of an RS485 Daisy Chain connection. Refer to Section 5.1.2.1 for details on RS485 connection for the Unicom 2500.

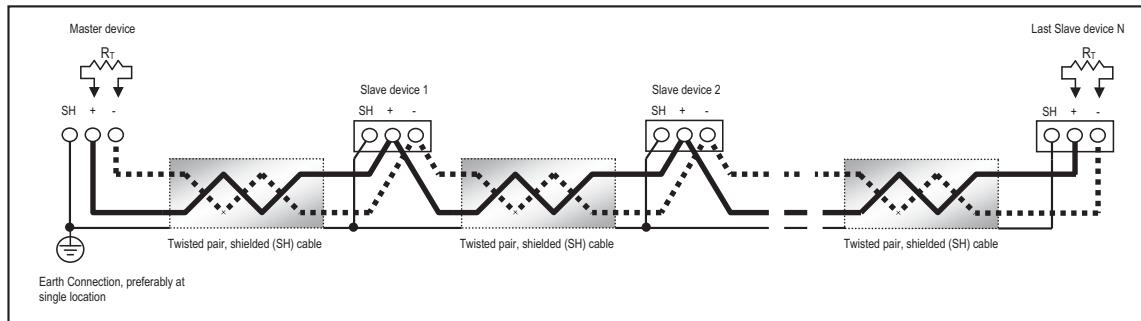


Figure 5.4: RS485 Daisy Chain Connection

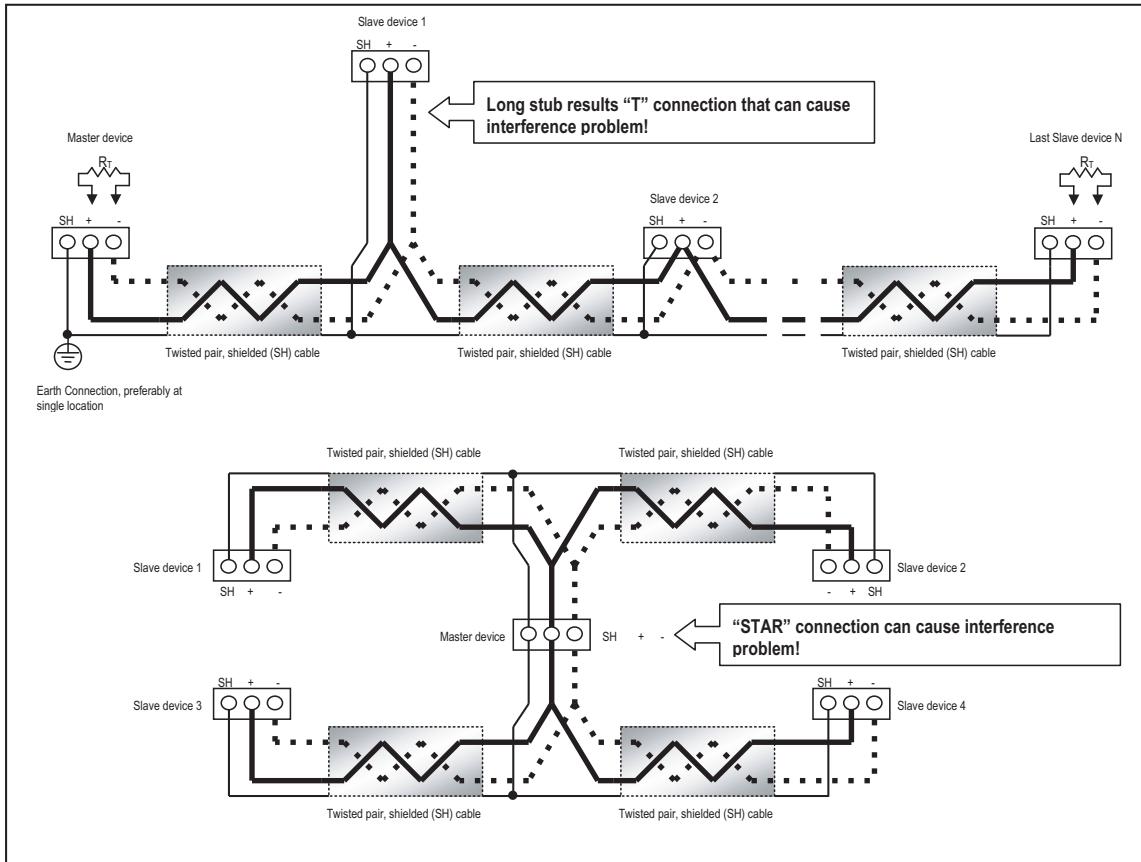


Figure 5.5: Incorrect "T" and "Star" Topologies

5.1.2.1: Using the Unicom 2500

The Unicom 2500 provides RS485/RS232 and Fiber Optic/RS232 conversion. In doing so it allows a Shark® 200 meter with either RS485 communication or the optional Fiber Optic communication card to communicate with a PC. See the *Unicom 2500 Installation and Operation Manual* for additional information. You can order the Unicom 2500 from EIG's webstore: www.electroind.com/store. Select Communication Products from the left side of the webpage.

Figure 5.6 illustrates the Unicom 2500 connections for RS485 and Fiber Optics.


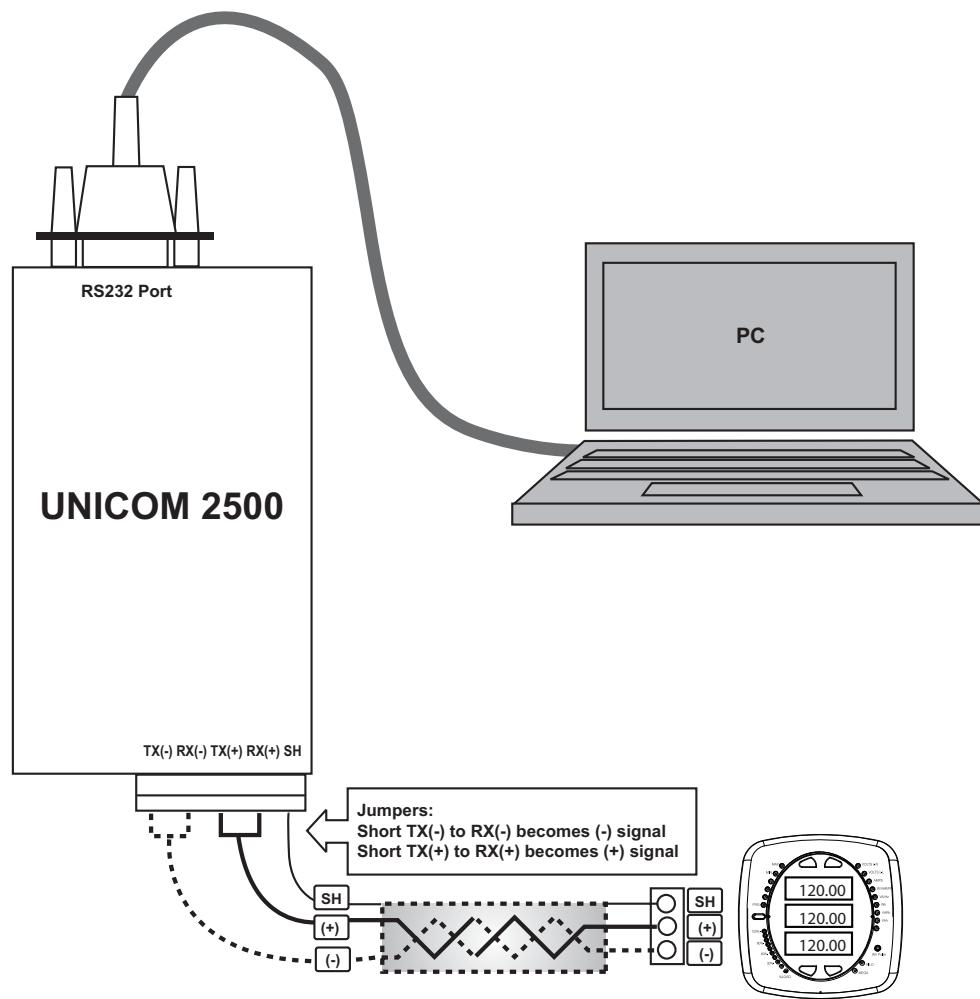


Figure 5.6: Unicom 2500 with Connections

The Unicom 2500 can be configured for either 4-wire or 2-wire RS485 connections. Since the Shark® 200 meter uses a 2-wire connection, you need to add jumper wires to convert the Unicom 2500 to the 2-wire configuration. As shown in Figure 5.6, you connect the "RX-" and "TX-" terminals with a jumper wire to make the "-" terminal, and connect the "RX+" and "TX+" terminals with a jumper wire to make the "+" terminal. See the figure on the right for the Unicom 2500's settings. The Unicom's Baud rate must match the Baud rate of the meter's RS485 port: you set the Baud rate by turning the screw to point at the rate you want.

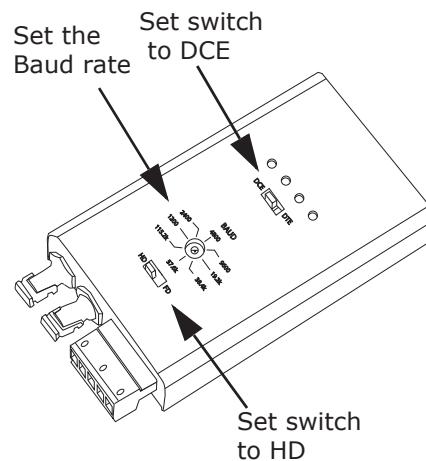

5.2: Shark® 200T Transducer Communication and Programming Overview

The Shark® 200T transducer does not include a display on the front face of the meter; there are no buttons or IrDA Port on the face of the meter. Programming and communication utilize the RS485 connection on the back of the meter as shown in Figure 5.1. Once a connection is established, Communicator EXT 3.0 software can be used to program the meter and communicate to Shark® 200T transducer slave devices.

Meter Connection

To provide power to the meter, attach an Aux cable to GND, L(+) and N(-). Refer to Section 4.8, Figure 1.

The RS485 cable attaches to SH, - and + as shown in Figure 5.1.

5.2.1: Accessing the Meter in Default Communication Mode

You can connect to the Shark® 200T in Default Communication mode. This feature is useful in debugging or if you do not know the meter's programmed settings and want to find them. For 5 seconds after the Shark® 200T is powered up, you can use the RS485 port with Default Communication mode to poll the Name Register. You do this by connecting to the meter with the following default settings (see Section 5.2.2 on the next page):

Baud Rate: 9600

Address: 1

Protocol: Modbus RTU

The meter continues to operate with these default settings for 5 minutes. During this time, you can access the meter's Device Profile to ascertain/change meter information. After 5 minutes of no activity, the meter reverts to the programmed Device Profile settings.

IMPORTANT! In Normal operating mode the initial factory communication settings are:

Baud Rate: 57600


Address: 1

Protocol: Modbus RTU


5.2.2: Connecting to the Meter through Communicator EXT

How to Connect:

1. Open the Communicator EXT software.
2. Click the **Connect** icon in the Icon bar.

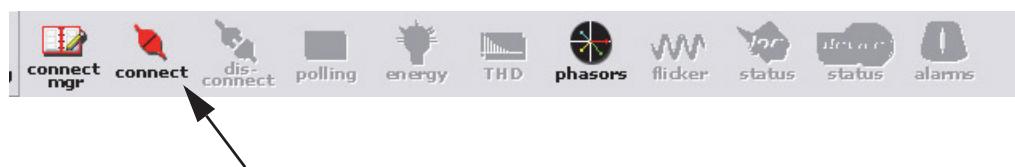

3. The Connect screen opens, showing the Default settings. Make sure your settings are the same as shown here. Use the pull-down menus to make any necessary changes to the settings.

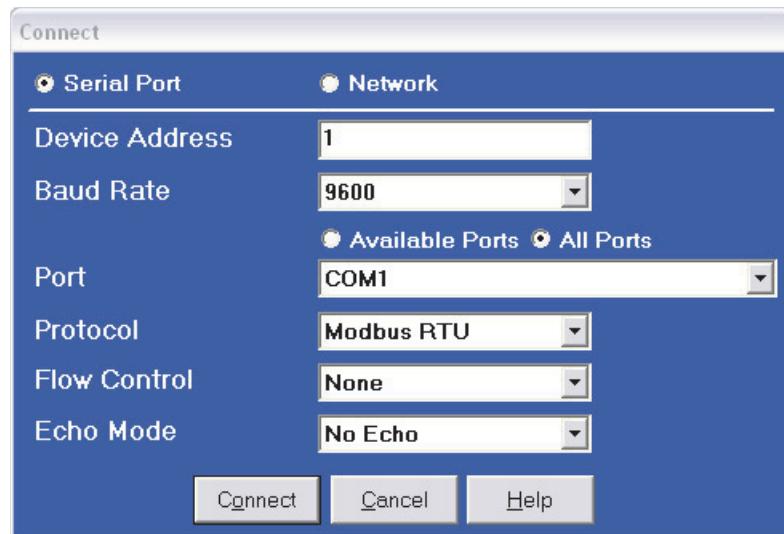


4. Click the **Connect** button. If you have a problem connecting, you may have to disconnect power to the meter, then reconnect power and click the Connect button, again.
5. You will see the Device Status screen, confirming connection to your meter. Click **OK**.


Device Status		
Device	Device Type	Serial Number
Ip151x	Shark200	0030283117
		Item Value
Boot		0002
Run		On
State		Run Mode Logging Enabled
V-Switch		6
On Time		Wednesday, April 13, 2011 12:09:31
ASIC		3
<input checked="" type="checkbox"/> Polling Ip151x		<input type="button" value="OK"/> <input type="button" value="Copy"/>

6. Click the **Profile** icon in the Title Bar.

7. You will see the Shark® 200 meter's Device Profile screen. The menu on the left side of the screen lets you navigate between Settings screens (see below).

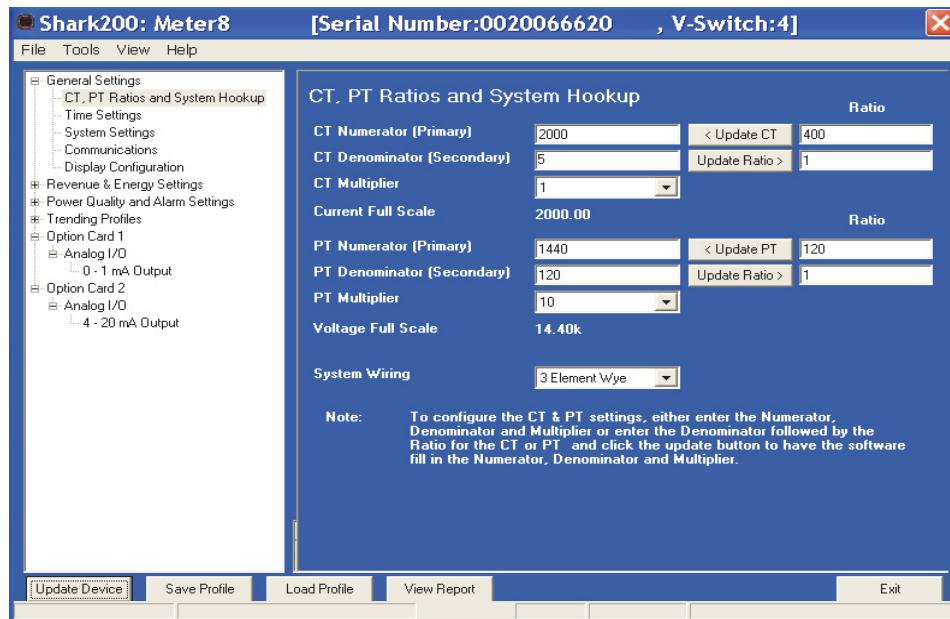

8. Click **Communications**. You will see the screen shown below. Use this screen to enter communication settings for the meter's two on-board ports: the IrDA port (COM 1) and RS485 port (COM 2). Make any necessary changes to settings.

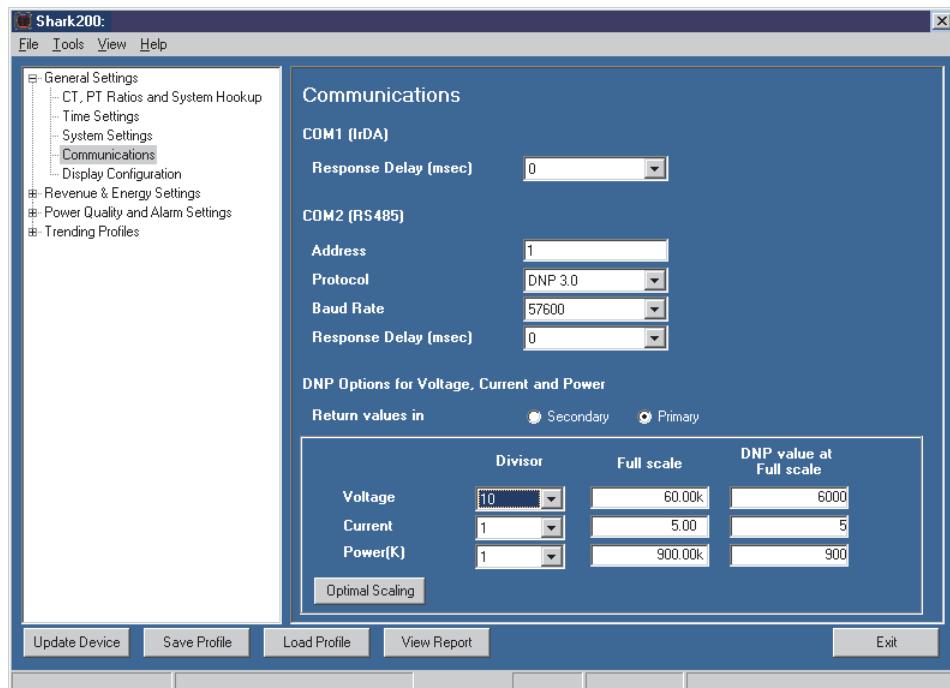

Valid Communication Settings are as follows:

COM1 (IrDA)

Response Delay (0-750 msec)

COM2 (RS485)

Address (1-247)

Protocol (Modbus RTU, Modbus ASCII or DNP)

Baud Rate (9600 to 57600)

Response Delay (0-750 msec)

DNP Options for Voltage, Current, and Power - these fields allow you to choose Primary or Secondary Units for DNP, and to set custom scaling if you choose Primary. See Chapter 5 in the *Communicator EXT User Manual* for more information.


9. When changes are complete, click the **Update Device** button to send a new profile to the meter.
10. Click **Exit** to leave the Device Profile or click other menu items to change other aspects of the Device Profile (see the following section for instructions).

5.2.2: Shark® 200 Meter Device Profile Settings

IMPORTANT! Modification to the Device Profile may cause improper Option card operation due to changed Scaling, etc. Verify or update programmable settings related to any Option cards installed in the Shark® 200 meter.

NOTE: Only the basic Shark® 200 meter Device Profile settings are explained in this manual. Refer to Chapter 5 in the *Communicator EXT User Manual* for detailed instructions on configuring all settings of the meter's Device Profile. You can view the manual online by clicking **Help>Contents** from the Communicator EXT Main screen.

CT, PT Ratios and System Hookup

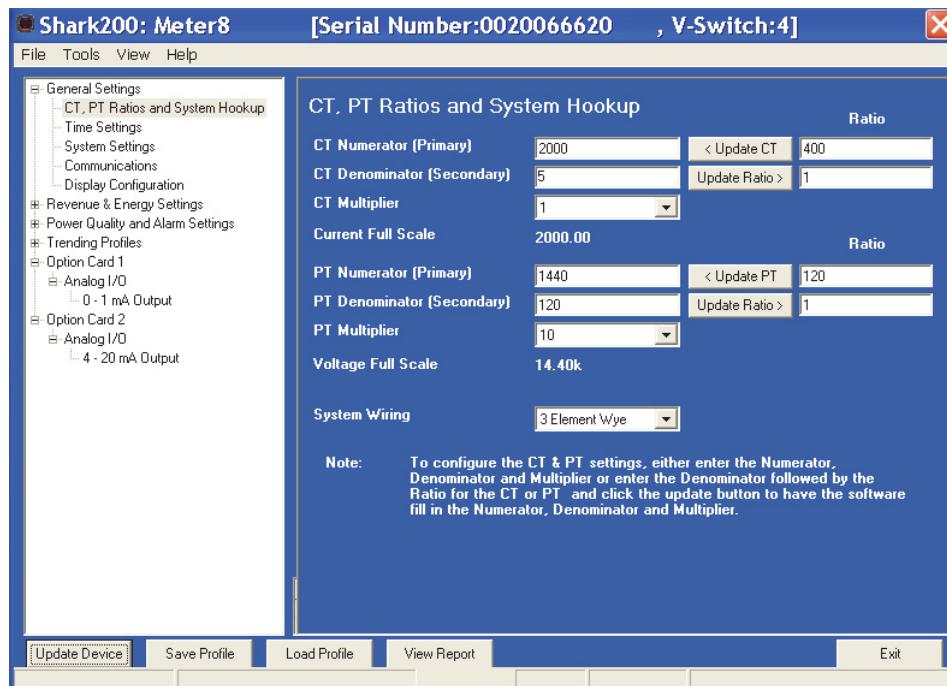

The screen fields and acceptable entries are as follows:

CT Ratios

CT Numerator (Primary): 1 - 9999

CT Denominator (Secondary): 5 or 1 Amp

NOTE: This field is display only.

CT Multiplier: 1, 10 or 100

Current Full Scale: Display only

PT Ratios

PT Numerator (Primary): 1 - 9999

PT Denominator (Secondary): 40 - 600

PT Multiplier: 1, 10, 100, or 1000

Voltage Full Scale: Display only

System Wiring

3 Element Wye; 2.5 Element Wye; 2 CT Delta

NOTE: Voltage Full Scale = PT Numerator x PT Multiplier

Example:

A 14400/120 PT would be entered as:

PT Numerator: 1440

PT Denominator: 120

Multiplier: 10

This example would display a 14.40kV.

Example CT Settings:

200/5 Amps: Set the Ct-n value for 200, Ct-Multiplier value for 1

800/5 Amps: Set the Ct-n value for 800, Ct-Multiplier value for 1

2,000/5 Amps: Set the Ct-n value for 2000, Ct-Multiplier value for 1

10,000/5 Amps: Set the Ct-n value for 1000, Ct-Multiplier value for 10

Example PT Settings:

277/277 Volts: Pt-n value is 277, Pt-d value is 277, Pt-Multiplier is 1

14,400/120 Volts: Pt-n value is 1440, Pt-d value is 120, Pt-Multiplier value is 10

138,000/69 Volts: Pt-n value is 1380, Pt-d value is 69, Pt-Multiplier value is 100

345,000/115 Volts: Pt-n value is 3450, Pt-d value is 115, Pt-Multiplier value is 100


345,000/69 Volts: Pt-n value is 345, Pt-d value is 69, Pt-Multiplier value is 1000

NOTE: Settings are the same for Wye and Delta configurations.

Display Configuration

The settings on this screen determine the display configuration of the meter's faceplate.

NOTE: For a Shark® 200T transducer, the Display Configuration setting does not apply as there is no display.

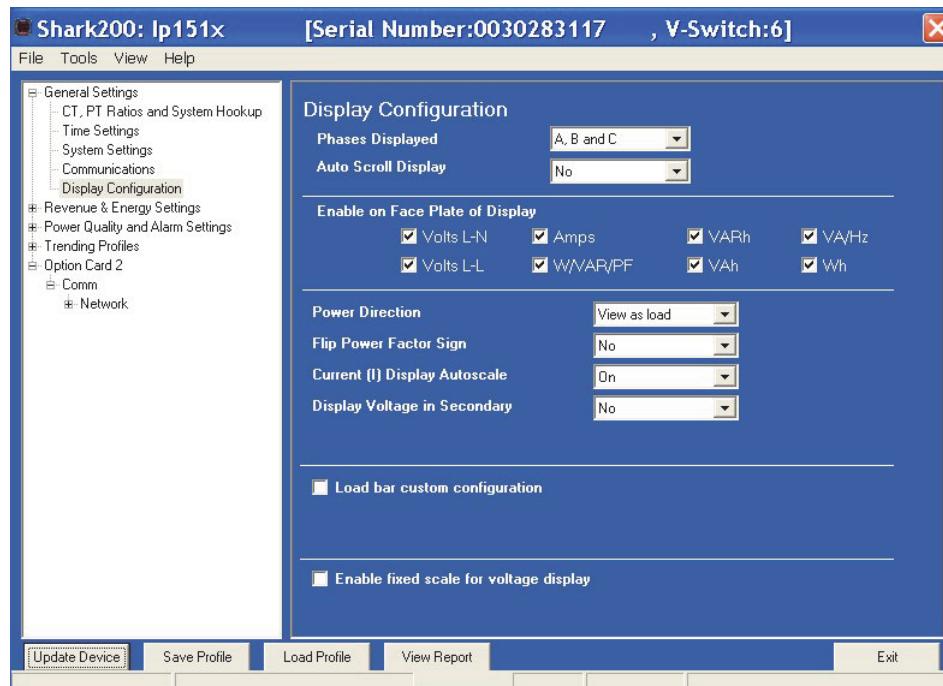

The screen fields and acceptable entries are as follows:

Phases Displayed: A; A and B; A, B, and C. This field determines which phases are displayed on the faceplate. For example, if you select A and B, only those two phases will be displayed on the faceplate.

Auto Scroll Display: Yes or No. This field enables/disables the scrolling of selected readings on the faceplate. If enabled, the readings scroll every 5 seconds.

Enable on Face Plate of Display: Check the boxes of the Readings you want displayed on the faceplate of the meter. You must select at least one reading.

Power Direction: View as Load or View as Generator

Flip Power Factor Sign: Yes or No

Current (I) Display Autoscale: On to apply scaling to the current display or Off (No decimal places)

Display Voltage in Secondary: Yes or No

Load Bar Custom Configuration: To enter scaling for the Load Bar, click the Load Bar Custom Configuration checkbox. Fields display on the screen that allow you to enter a Scaling factor for the display. See the figure below.

<input checked="" type="checkbox"/> Load bar custom configuration	Current Scale	0
Note: The Primary full scale Current for load bar = Current Scale * CT Multiplier	Primary Full Scale	0.00


Enter the scaling factor you want in the Current Scale field. This field is multiplied by the CT Multiplier (set in the CT, PT Ratios, and System Hookup screen) to arrive at the Primary Full Scale. Make sure you set the CT multiplier correctly.

Enable Fixed Scale for Voltage Display: To enter a scaling factor for the Voltage display, click the checkbox next to Enable Fixed Scale for Voltage Display. The screen changes - see the figure below.

<input checked="" type="checkbox"/> Enable fixed scale for voltage display	Decimal points	0 - 9999V
--	----------------	-----------

Select the scaling you want to use from the pull-down menu. The options are: 0, 100.0kV, 10.00kV, or 0kV.

Energy, Power Scaling, and Averaging

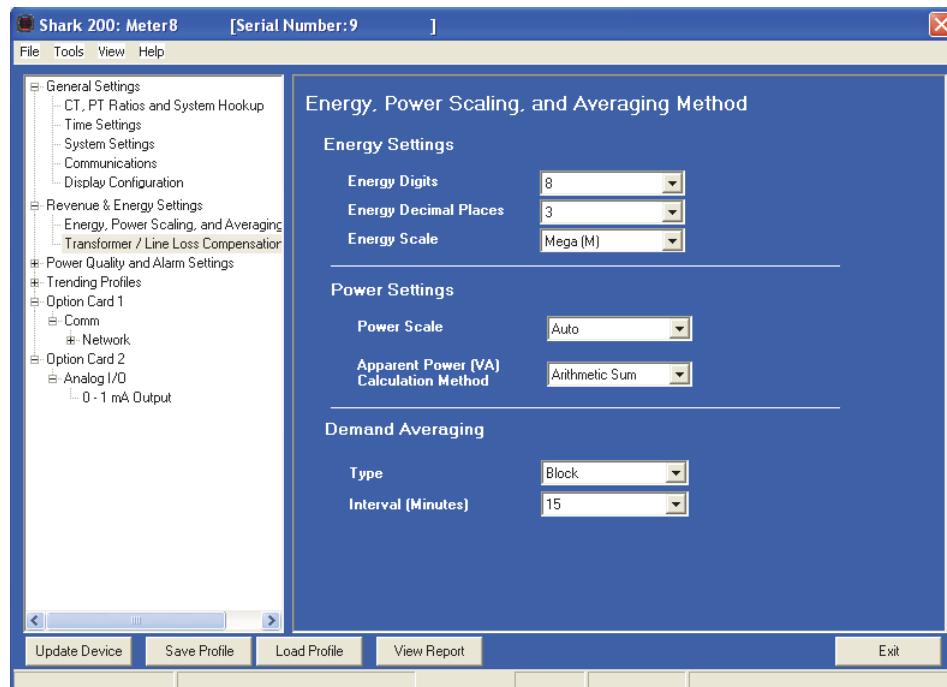

The screen fields and acceptable entries are as follows:

Energy Settings

Energy Digits: 5; 6; 7; 8

Energy Decimal Places: 0 - 6

Energy Scale: unit; kilo (K); Mega (M)

Example: a reading for Digits: 8; Decimals: 3; Scale: K would be formatted as

00123.456k

Power Settings

Power Scale: Auto; unit; kilo (K); Mega (M)

Apparent Power (VA) Calculation Method: Arithmetic Sum; Vector Sum

Demand Averaging

Type: Block or Rolling


Interval (Block demand) or Sub-Interval (Rolling demand) in minutes: 5; 15; 30; 60

Number of Subintervals: 1; 2; 3; 4

Interval Window: This field is display only. It is the product of the values entered in the Sub-Interval and Number of Subintervals fields.

NOTE: You will only see the Number of Subintervals and Interval Window fields if you select Rolling Demand.

System Settings

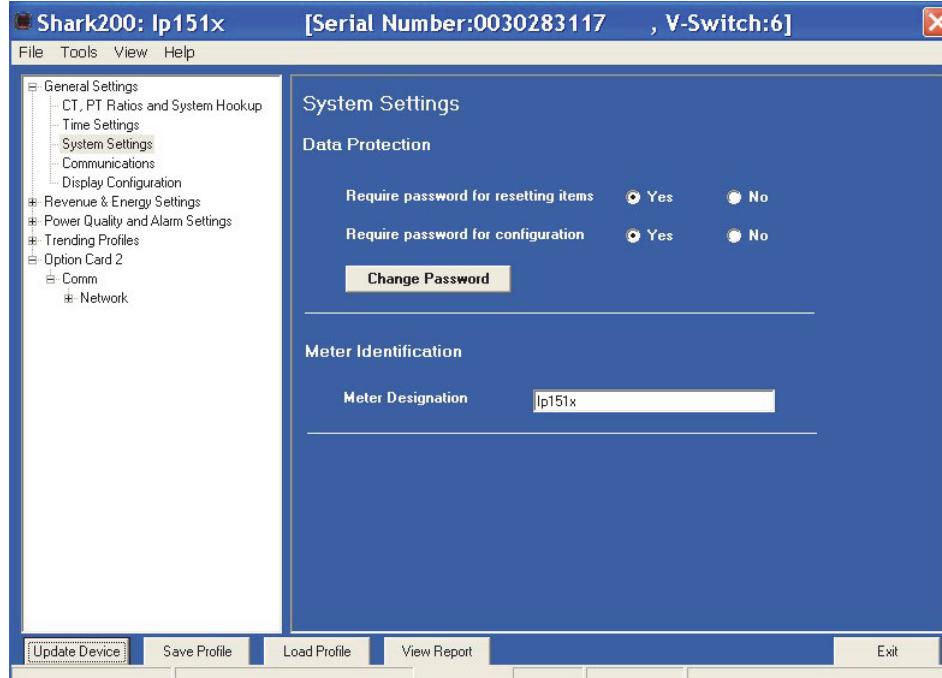

From this screen, you can do the following:

- Enable or disable password for Reset (reset max/min Energy settings, Energy accumulators, and the individual logs) and/or Configuration (Device profile): click the radio button next to Yes or No.

NOTES:

- If you enable a password for reset, you must also enable it for configuration.
- The meter's default is password disabled.
- Enabling Password protection prevents unauthorized tampering with devices. When a user attempts to make a change that is under Password protection, Communicator EXT opens a screen asking for the password. If the correct password is not entered, the change does not take place.

IMPORTANT! You must set up a password before enabling Password protection. Click the **Change** button next to Change Password if you have not already set up a password.

- Change the Password: click the **Change** button. You will see the Enter the New Password screen, shown below.



1. Type in the new password (0 - 9999).
2. Retype the password.
3. Click **Change**. The new password is saved and the meter restarts.


NOTE: If Password protection has already been enabled for configuration and you attempt to change the password, you will see the Enter Password screen after you click **Change**. Enter the old password and click **OK** to proceed with the password change.



- Change the Meter Identification: input a new meter label into the Meter Designation field.

Limits


Limits are transition points used to divide acceptable and unacceptable measurements. When a value goes above or below the limit an out-of-limit condition occurs. Once they are configured, you can view the out-of-Limits (or Alarm) conditions in the Limits log or Limits polling screen. You can also use Limits to trigger relays. See the *Communicator EXT User Manual* for details.

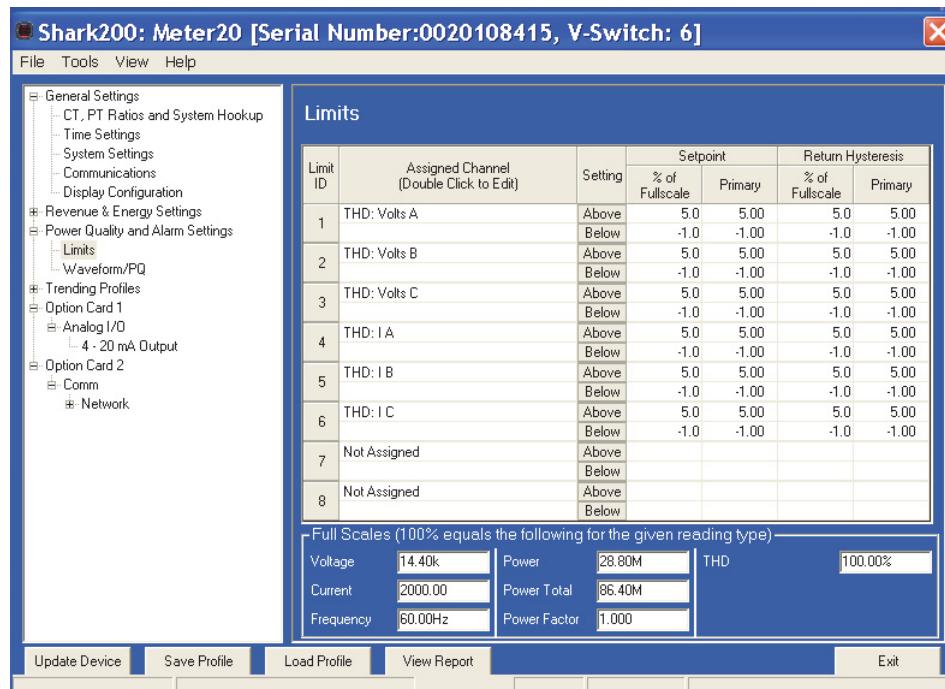

The current settings for Limits are shown in the screen. You can set and configure up to eight Limits for the Shark® 200 meter.

To set up a Limit:

1. Select a Limit by double-clicking on the Assigned Channel field.
2. You will see the screen shown below. Select a Group and an Item for the Limit.

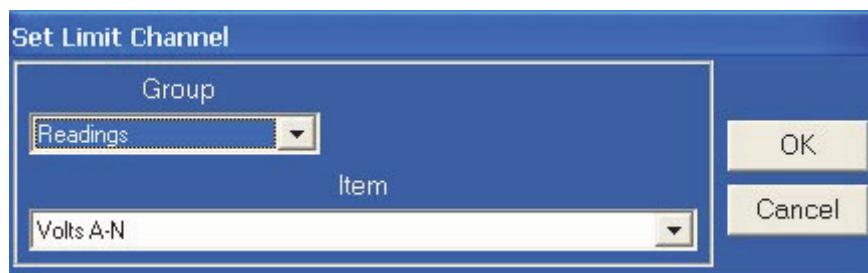

3. Click **OK**.

To configure a Limit:

Double-click on the field to set the following values:

Above and Below Setpoint: % of Full Scale (the point at which the reading goes out of limit)

Examples:

100% of 120V Full Scale = 120V

90% of 120V Full Scale = 108V

Above and Below Return Hysteresis: the point at which the reading goes back within limit (see figure below)


Examples:

Above Setpoint = 110%; Below Setpoint = 90%

(Out of Limit above 132V);(Out of Limit below 108V)

Above Return Hysteresis = 105%; Below Return Hysteresis = 95%

(Stay out of Limit until below 126V)(Stay out of Limit until above 114V)

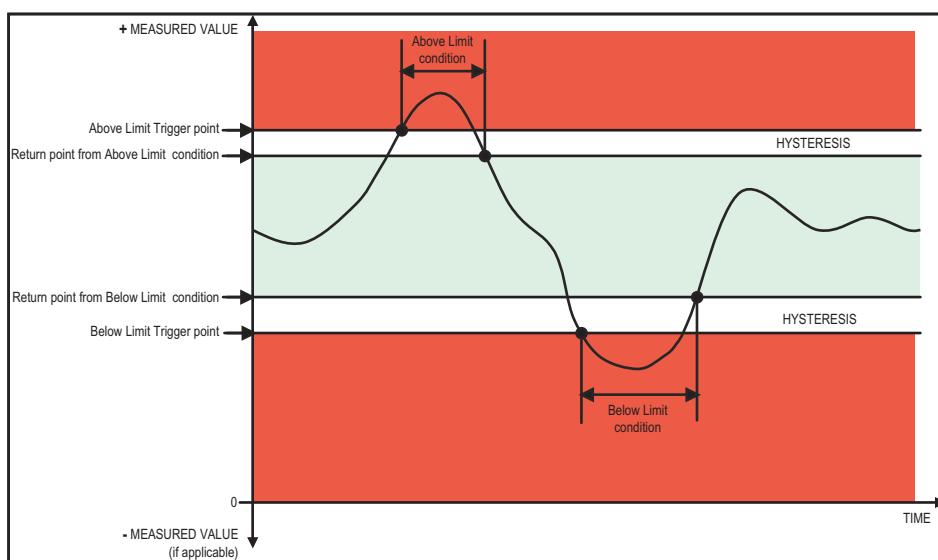

Primary Fields: These fields are display only. They show what the setpoint and return hysteresis value are for each limit.

NOTES:

- If you are entering negative Limits, be aware that the negative value affects the way the above and below Limits function, since negative numbers are processed as signed values.
- If the Above Return Hysteresis is greater than the Above Setpoint, the Above Limit is Disabled; if the Below Return Hysteresis is less than the Below Setpoint, the Below Limit is Disabled. You may want to use this feature to disable either Above or Below Limit conditions for a reading.

IMPORTANT! When you finish making changes to the Device Profile, click **Update Device** to send the new Profile settings to the meter.

NOTE: Refer to Chapter 5 of the *Communicator EXT User Manual* for additional instructions on configuring the Shark® 200 meter settings, including Time Setting, Transformer and Line Loss Compensation, CT and PT Compensation, Ethernet card NTP Time Server Synchronization, Secondary Voltage display, Symmetrical Components, Voltage and Current Unbalance, and scaling Primary readings for use with DNP.

6: Using the Shark® 200 Meter

6.1: Introduction

You can use the Elements and Buttons on the Shark® 200 meter's face to view meter readings, reset and/or configure the meter, and perform related functions. The following sections explain the Elements and Buttons and detail their use.

6.1.1: Understanding Meter Face Elements

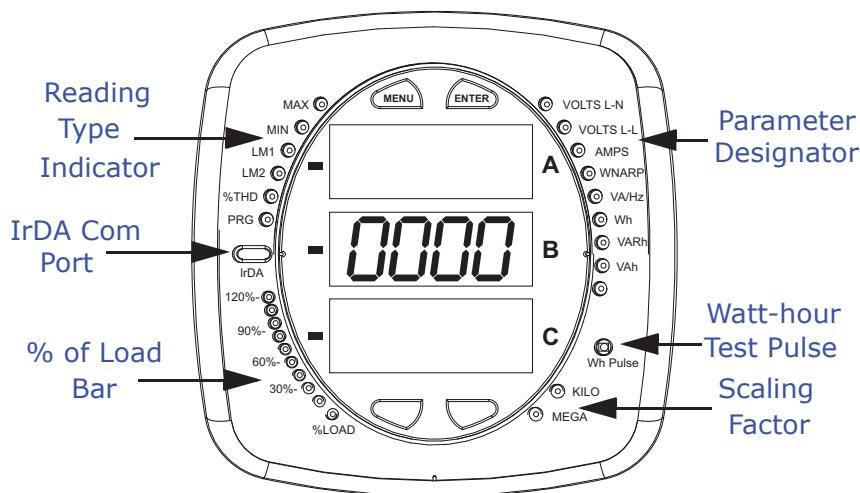


Figure 6.1: Face Plate with Elements

The meter face features the following elements:

- Reading type indicator: e.g., Max
- Parameter designator: e.g., Volts L-N
- Watt-hour test pulse: Energy pulse output to test accuracy
- Scaling factor: Kilo or Mega multiplier of displayed readings
- % of Load bar: Graphic Display of Amps as % of the load (see Section 6.3 for additional information)
- IrDA Communication port: Com 1 port for wireless communication

6.1.2: Understanding Meter Face Buttons

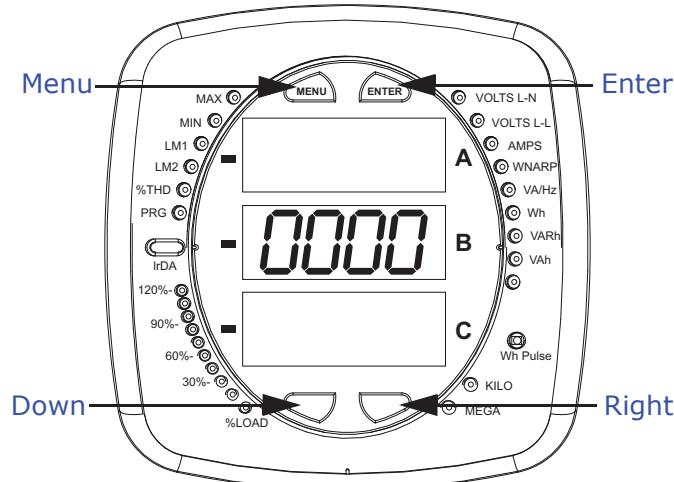


Figure 6.2: Faceplate with Buttons

The meter face has **Menu**, **Enter**, **Down** and **Right** buttons, which let you perform the following functions:

- View meter information
- Enter display modes
- Configure parameters (may be Password protected)
- Perform resets (may be Password protected)
- Perform LED Checks
- Change settings
- View parameter values
- Scroll parameter values
- View Limit states

6.2: Using the Front Panel

You can access four modes using the Shark® 200 meter's front panel buttons:

- Operating mode (Default)
- Reset mode
- Configuration mode
- Information mode - Information mode displays a sequence of screens that show model information, such as Frequency, Amps, V-Switch, etc.

Use the **Menu**, **Enter**, **Down** and **Right** buttons to navigate through each mode and its related screens.

NOTES:

- See Appendix A for the display's Navigation maps.
- The meter can also be configured using software; see Chapter 5 and the *Communicator EXT User Manual* for instructions.

6.2.1: Understanding Startup and Default Displays

Upon powering up, the meter displays a sequence of screens:

- Lamp Test screen where all LEDs are lit
- Lamp Test screen where all digits are lit
- Firmware screen showing the build number
- Error screen (if an error exists)

After startup, if auto-scrolling is enabled, the Shark® 200 meter scrolls the parameter readings on the right side of the front panel. The Kilo or Mega LED lights, showing the scale for the Wh, VARh and VAh readings. Figure 6.3 shows an example of a Wh reading.


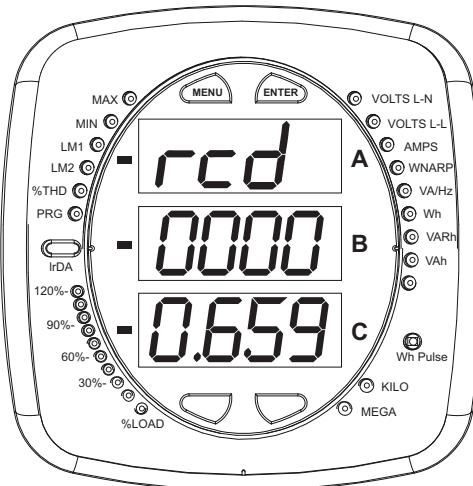


Figure 6.3: Display Showing Watt-hour Reading

The Shark® 200 meter continues to provide scrolling readings until one of the buttons on the front panel is pressed, causing the meter to enter one of the other Modes.

6.2.2: Using the Main Menu

1. Press the **Menu** button. The Main Menu screen appears.
- The Reset: Demand mode (rStd) appears in the A window. Use the Down button to scroll, causing the Reset: Energy (rStE), Configuration (CFG), Operating (OPr), and Information (InFo) modes to move to the A window.
- The mode that is currently flashing in the A window is the “Active” mode, which means it is the mode that can be configured.

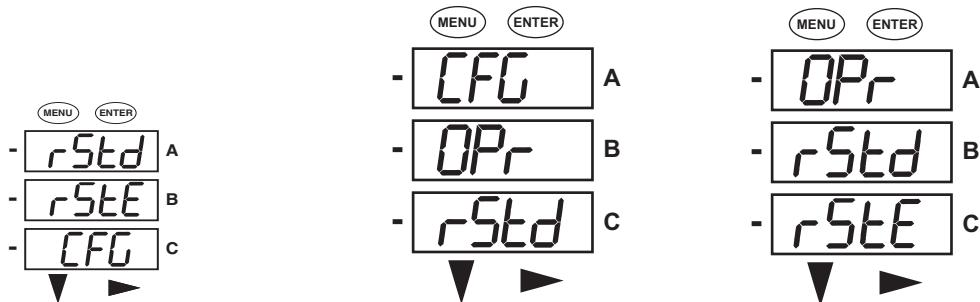

For example: Press Down Twice - CFG moves to A window. Press Down Twice - OPr moves to A window.

2. Press the **Enter** button from the Main Menu to view the Parameters screen for the mode that is currently active.


6.2.3: Using Reset Mode

Reset Mode has two options:

- Reset: Demand (rStd): resets the Max and Min values
- Reset: Energy (rStE): resets the energy accumulator fields

1. Press the **Enter** button while either rStd or rStE is in the A window. The Reset Demand No or Reset Energy No screen appears.

- If you press the **Enter** button again, the Main Menu appears, with the next mode in the A window. (The **Down** button does not affect this screen.)
- If you press the **Right** button, the Reset Demand YES or Reset Energy YES screen appears. Press **Enter** to perform a reset.

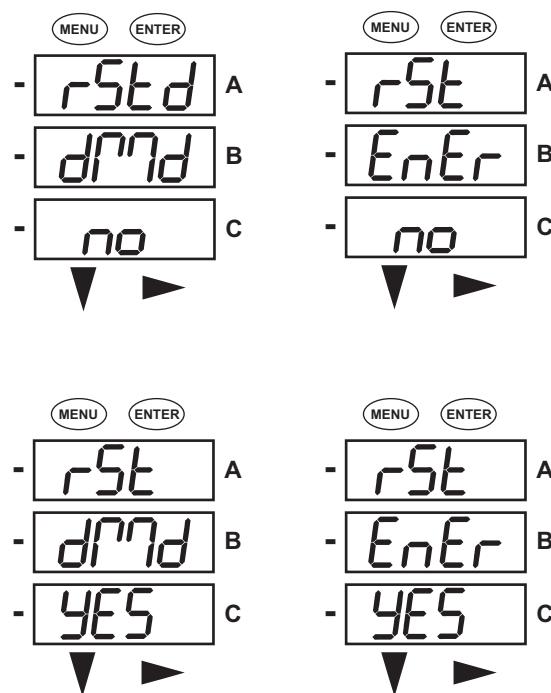

NOTE: If Password protection is enabled for reset, you must enter the four digit password before you can reset the meter. (See Chapter 5 for information on Password protection.) To enter a password, follow the instructions in Section 6.2.4.

CAUTION! Reset Demand YES resets **all** Max and Min values.


2. Once you have performed a reset, the screen displays either "rSt dMd donE" or "rSt EnEr donE" and then resumes auto-scrolling parameters.

6.2.4: Entering a Password

If Password Protection has been enabled in the software for reset and/or configuration (see Chapter 5 for more information), a screen appears requesting a password when you try to reset the meter and/or configure settings through the front panel.

- PASS appears in the A window and 4 dashes appear in the B window; the left-most dash is flashing.
1. Press the **Down** button to scroll numbers from 0 to 9 for the flashing dash. When the correct number appears for that dash, use the **Right** button to move to the next dash.


Example: The left screen, below, shows four dashes. The right screen shows the display after the first two digits of the password have been entered.

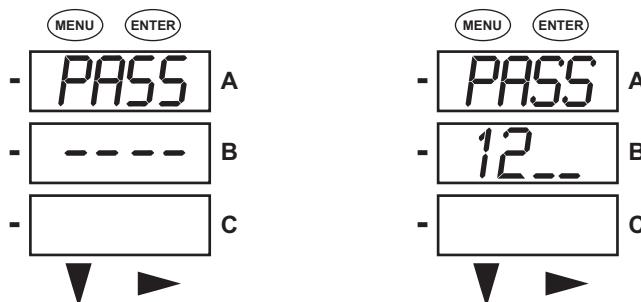

2. When all 4 digits of the password have been selected, press the **Enter** button.

- If you are in Reset mode and you enter the correct password, "rSt dMd donE" or "rSt EnEr donE" appears and the screen resumes auto-scrolling parameters.
- If you are in Configuration mode and you enter the correct password, the display returns to the screen that required a password.
- If you enter an incorrect Password, "PASS ---- FAIL" appears and:

- The previous screen is redisplayed, if you are in Reset mode.
- The previous Operating mode screen is redisplayed, if you are in Configuration mode.

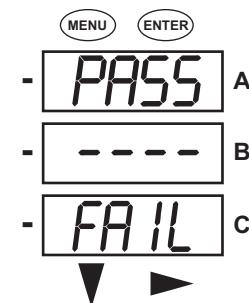


6.2.5: Using Configuration Mode

Configuration mode follows Reset: Energy on the Main Menu.

To access Configuration mode:

1. Press the **Menu** button while the meter is auto-scrolling parameters.
2. Press the **Down** button until the Configuration mode option (CFG) is in the A window.
3. Press the **Enter** button. The configuration Parameters screen appears.
4. Press the **Down** button to scroll through the configuration parameters: Scroll (SCrL), CT, PT, Connection (Cnct) and Port. The parameter currently 'Active,' i.e., configurable, flashes in the A window.
5. Press the **Enter** button to access the Setting screen for the currently active parameter.

NOTE: You can use the **Enter** button to scroll through all of the configuration parameters and their Setting screens, in order.

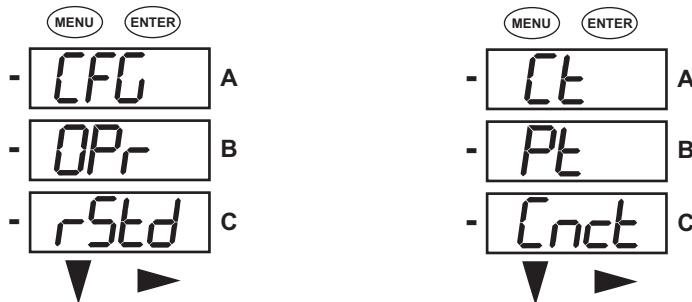

Press **Enter** when CFG is in A window - Parameter screen appears -

Press **Down**- Press **Enter** when
Parameter you want is in A window

6. The parameter screen appears, showing the current settings. To change the settings:

- Use either the **Down** button or the **Right** button to select an option.

- To enter a number value, use the **Down** button to select the number value for a digit and the **Right** button to move to the next digit.

NOTE: When you try to change the current setting and Password protection is enabled for the meter, the Password screen appears. See Section 6.2.4 for instructions on entering a password.


- Once you have entered the new setting, press the **Menu** button twice.
- The Store ALL YES screen appears. You can either:
 - Press the **Enter** button to save the new setting.
 - Press the **Right** button to access the Store ALL no screen; then press the **Enter** button to cancel the Save.
- If you have saved the settings, the Store ALL done screen appears and the meter resets.



Press the **Enter** button to save the settings. Press the **Right** button for Stor All no screen.



Press the **Enter** button to Cancel the Save.

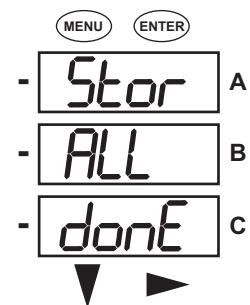

The settings have been saved.





6.2.5.1: Configuring the Scroll Feature

When in auto-scrolling mode, the meter performs a scrolling display, showing each parameter for 7 seconds, with a 1 second pause between parameters. The parameters that the meter displays are determined by the following conditions:

- They have been selected through software (see the *Communicator EXT User Manual* for instructions).
- They are enabled by the installed V-Switch™ key (see Section 2.1.3 for information on V-Switch™ keys).

To enable or disable auto-scrolling:

1. Press the **Enter** button when SCrl is in the A window.
The Scroll YES screen appears.
2. Press either the **Right** or **Down** button if you want to access the Scroll no screen. To return to the Scroll YES screen, press either button.
3. Press the **Enter** button on either the Scroll YES screen (to enable auto-scrolling) or the Scroll no screen (to disable auto-scrolling).
4. The CT- n screen appears (this is the next Configuration mode parameter).

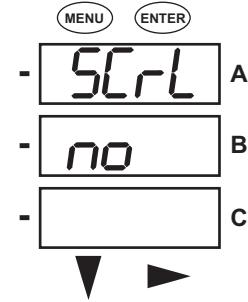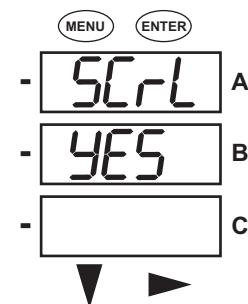

NOTES:

- To exit the screen without changing scrolling options, press the **Menu** button.
- To return to the Main Menu screen, press the **Menu** button twice.
- To return to the scrolling (or non-scrolling) parameters display, press the **Menu** button three times.

6.2.5.2: Configuring CT Setting

The CT Setting has three parts: Ct-n (numerator), Ct-d (denominator), and Ct-S (scaling).

1. Press the **Enter** button when Ct is in the A window. The Ct-n screen appears. You can either:

- Change the value for the CT numerator.
- Access one of the other CT screens by pressing the **Enter** button: press **Enter** once to access the Ct-d screen, twice to access the Ct-S screen.

NOTE: The Ct-d screen is preset to a 5 Amp or 1 Amp value at the factory and cannot be changed.

a. To change the value for the CT numerator:

From the Ct-n screen:

- Use the **Down** button to select the number value for a digit.
- Use the **Right** button to move to the next digit.

b. To change the value for CT scaling:

From the Ct-S screen, use the **Right** button or the **Down** button to choose the scaling you want. The Ct-S setting can be 1, 10, or 100.

NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.

2. When the new setting is entered, press the **Menu** button twice.

3. The Store ALL YES screen appears. Press **Enter** to save the new CT setting.

Example CT Settings:

200/5 Amps: Set the Ct-n value for 200 and the Ct-S value for 1.


800/5 Amps: Set the Ct-n value for 800 and the Ct-S value for 1.

2,000/5 Amps: Set the Ct-n value for 2000 and the Ct-S value for 1.

10,000/5 Amps: Set the Ct-n value for 1000 and the Ct-S value for 10.

NOTES:

- The value for Amps is a product of the Ct-n value and the Ct-S value.
- Ct-n and Ct-S are dictated by primary current; Ct-d is secondary current.

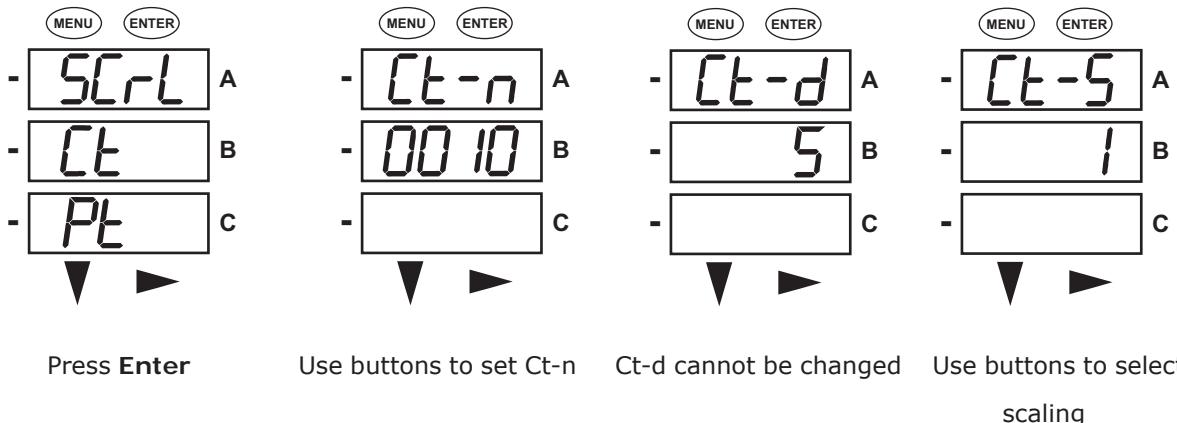

6.2.5.3: Configuring PT Setting

The PT Setting has three parts: Pt-n (numerator), Pt-d (denominator), and Pt-S (scaling).

1. Press the **Enter** button when Pt is in the A window. The PT-n screen appears. You can either:

- Change the value for the PT numerator.
- Access one of the other PT screens by pressing the **Enter** button: press **Enter** once to access the Pt-d screen, twice to access the Pt-S screen.

- a. To change the value for the PT numerator or denominator:

From the Pt-n or Pt-d screen:

- Use the **Down** button to select the number value for a digit.
- Use the **Right** button to move to the next digit.

- b. To change the value for the PT scaling:

From the Pt-S screen, use the **Right** button or the **Down** button to choose the scaling you want. The Pt-S setting can be 1, 10, 100, or 1000.

NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.

2. When the new setting is entered, press the **Menu** button twice.
3. The STOR ALL YES screen appears. Press **Enter** to save the new PT setting.

Example PT Settings:

277/277 Volts: Pt-n value is 277, Pt-d value is 277, Pt-S value is 1.


14,400/120 Volts: Pt-n value is 1440, Pt-d value is 120, Pt-S value is 10.

138,000/69 Volts: Pt-n value is 1380, Pt-d value is 69, Pt-S value is 100.

345,000/115 Volts: Pt-n value is 3450, Pt-d value is 115, Pt-S value is 100.

345,000/69 Volts: Pt-n value is 345, Pt-d value is 69, Pt-S value is 1000.

NOTE: Pt-n and Pt-S are dictated by primary voltage; Pt-d is secondary voltage.

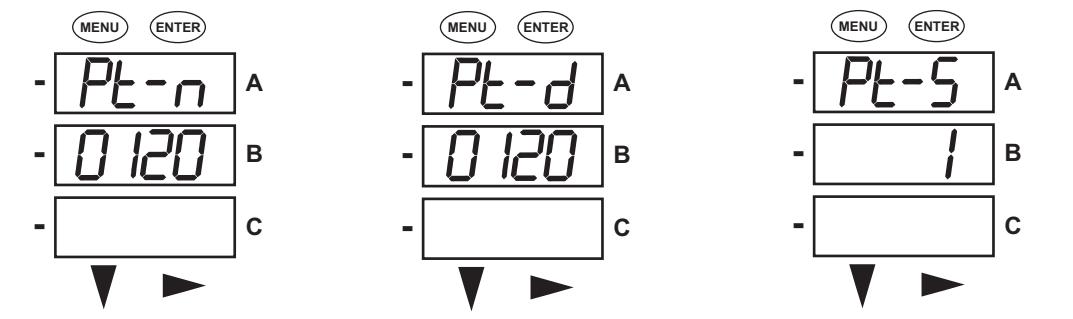

Use buttons to set Pt-n


Use buttons to set Pt-d

Use buttons to select scaling



6.2.5.4: Configuring Connection Setting

1. Press the **Enter** button when Cnct is in the A window. The Cnct screen appears.
2. Press the **Right** button or **Down** button to select a configuration. The choices are:
 - 3 Element Wye (3 EL WYE)
 - 2.5 Element Wye (2.5EL WYE)
 - 2 CT Delta (2 Ct dEL)
- NOTE:** If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.
3. When you have made your selection, press the **Menu** button twice.
4. The STOR ALL YES screen appears. Press **Enter** to save the setting.

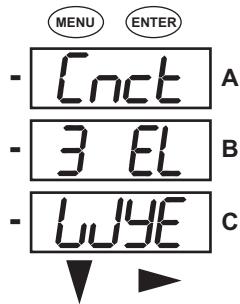

Use buttons to select configuration

6.2.5.5: Configuring Communication Port Setting

Port configuration consists of: Address (a three digit number), Baud Rate (9600; 19200; 38400; or 57600), and Protocol (DNP 3.0; Modbus RTU; or Modbus ASCII).

1. Press the **Enter** button when POrt is in the A window. The Adr (address) screen appears. You can either:
 - Enter the address.
 - Access one of the other Port screens by pressing the **Enter** button: press **Enter** once to access the bAUd screen (Baud Rate), twice to access the Prot screen (Protocol).

a. To enter the Address:

From the Adr screen:

- Use the **Down** button to select the number value for a digit.
- Use the **Right** button to move to the next digit.

b. To select the Baud Rate:

From the bAUd screen, use the **Right** button or the **Down** button to select the setting you want.


c. To select the Protocol:

From the Prot screen, press the **Right** button or the **Down** button to select the setting you want.

NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.

2. When you have finished making your selections, press the **Menu** button twice.

3. The STOR ALL YES screen appears. Press **Enter** to save the settings.

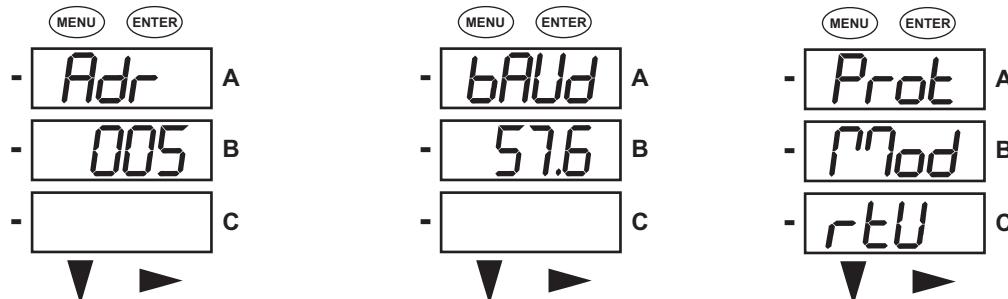

Use buttons to enter Address Use buttons to select Baud Rate Use buttons to select Protocol



6.2.6: Using Operating Mode

Operating mode is the Shark® 200 meter's default mode, that is, the standard front panel display. After starting up, the meter automatically scrolls through the parameter screens, if scrolling is enabled. Each parameter is shown for 7 seconds, with a 1 second pause between parameters. Scrolling is suspended for 3 minutes after any button is pressed.

1. Press the **Down** button to scroll all the parameters in Operating mode. The currently "Active," i.e., displayed, parameter has the Indicator light next to it, on the right face of the meter.
2. Press the **Right** button to view additional readings for that parameter. The table below shows possible readings for Operating Mode. Sheet 2 in Appendix A shows the Operating mode Navigation map.

NOTE: Readings or groups of readings are skipped if not applicable to the meter type or hookup, or if they are disabled in the programmable settings.

OPERATING MODE PARAMETER READINGS

POSSIBLE READINGS


VOLTS L-N	VOLTS_LN	VOLTS_LN_MAX	VOLTS_LN_MIN		VOLTS_LN_THD
VOLTS L-L	VOLTS_LL	VOLTS_LL_MAX	VOLTS_LL_MIN		
AMPS	AMPS	AMPS_NEUTRAL	AMPS_MAX	AMPS_MIN	AMPS_THD
W/VAR/PF	W_VAR_PF	W_VAR_PF_MA_X_POS	W_VAR_PF_MIN_POS	W_VAR_PF_MIN_NEG	
VA/Hz	VA_FREQ	VA_FREQ_MAX	VA_FREQ_MIN		
Wh	KWH_REC	KWH_DEL	KWH_NET	KWH_TOT	
VARh	KVARH_POS	KVARH_NEG	KVARH_NET	KVARH_TOT	
VAh	KVAH				

6.3: Understanding the % of Load Bar

The 10-segment LED bar graph at the bottom left of the Shark® 200 meter's front panel provides a graphic representation of Amps. The segments light according to the load, as shown in the table below.

When the load is over 120% of Full Load, all segments flash "On" (1.5 secs) and "Off" (0.5 secs).

Segments	Load >= % Full Load
none	no load
1	1%
1-2	15%
1-3	30%
1-4	45%
1-5	60%
1-6	72%
1-7	84%
1-8	96%
1-9	108%
1-10	120%
All Blink	>120%

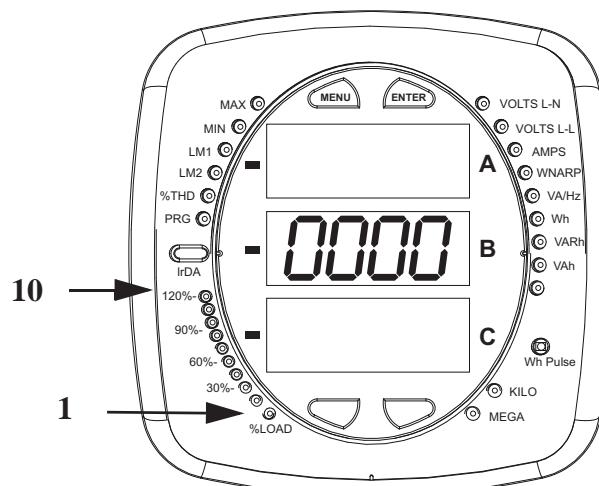

The % of Load bar can be programmed through Communicator EXT - see Section 5.2.2, page 5-14 for instructions.

6.4: Performing Watt-Hour Accuracy Testing (Verification)

To be certified for revenue metering, power providers and utility companies must verify that the billing energy meter performs to the stated accuracy. To confirm the meter's performance and calibration, power providers use field test standards to ensure that the unit's energy measurements are correct. Since the Shark® 200 meter is a traceable revenue meter, it contains a utility grade test pulse that can be used to gate an accuracy standard. This is an essential feature required of all billing grade meters.

- Refer to Figure 6.5 for an example of how this process works.
- Refer to Table 6.1 for the Wh/Pulse constants for accuracy testing.

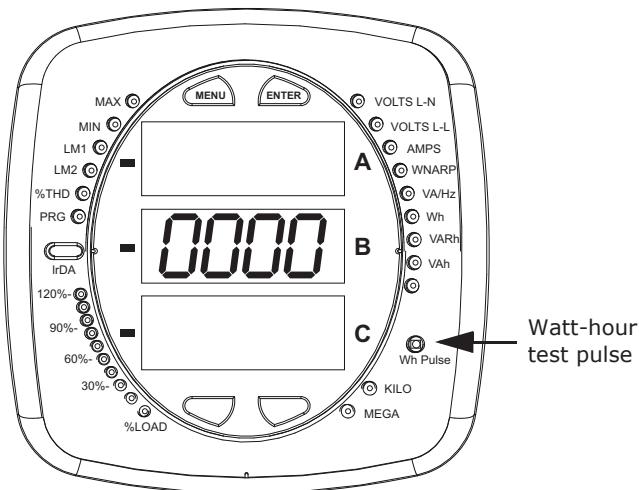


Figure 6.4: Watt-hour Test Pulse

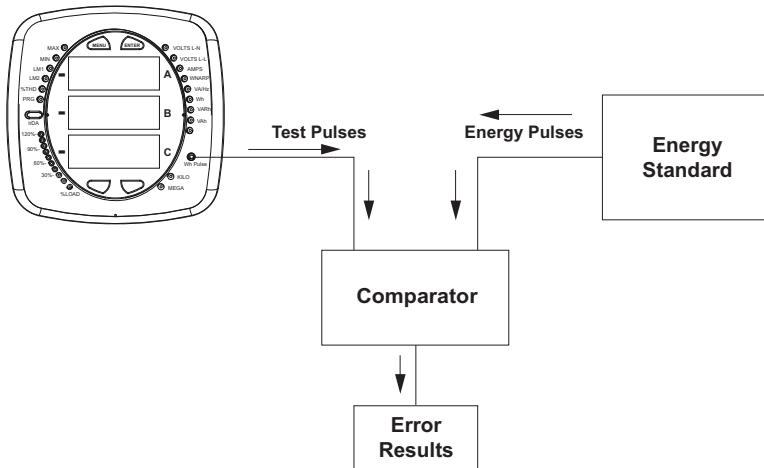


Figure 6.5: Using the Watt-hour Test Pulse

Input Voltage Level	Class 10 Models	Class 2 Models
Below 150V	0.500017776	0.1000035555
Above 150V	2.000071103	0.400014221

Table 6.1: Infrared & KYZ Pulse Constants for Accuracy Testing - Kh Watt-hour per pulse

NOTES:

- Minimum pulse width is 90 milliseconds.
- Refer to Chapter 2, Section 2.2, for Wh Pulse specifications.

7: Using the I/O Option Cards

7.1: Overview

The Shark® 200 meter offers extensive I/O expandability. Using the two universal Option Card slots, the unit can be easily configured to accept new I/O Option cards even after installation, without your needing to remove the meter. The Shark® 200 meter auto-detects any installed Option cards. Up to 2 cards of any type outlined in this chapter can be used per meter.

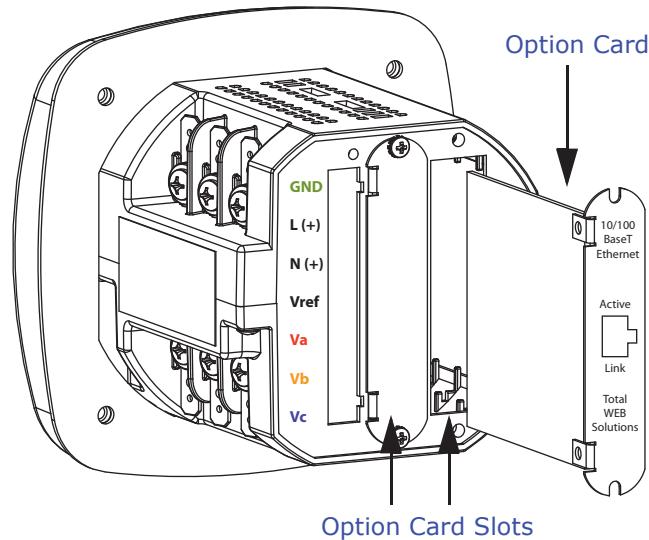


Figure 7.1: Shark® 200 Meter Back, Showing Option Card Slots and I/O Card

7.2: Installing Option Cards

The Option cards are inserted in one of the two Option Card slots in the back of the Shark® 200 meter.

NOTE: Remove Voltage inputs and power supply terminal to the meter before performing card installation.

1. Remove the screws at the top and the bottom of the Option Card slot covers.
2. There is a plastic "track" on the top and the bottom of the slot. The Option card fits into this track.

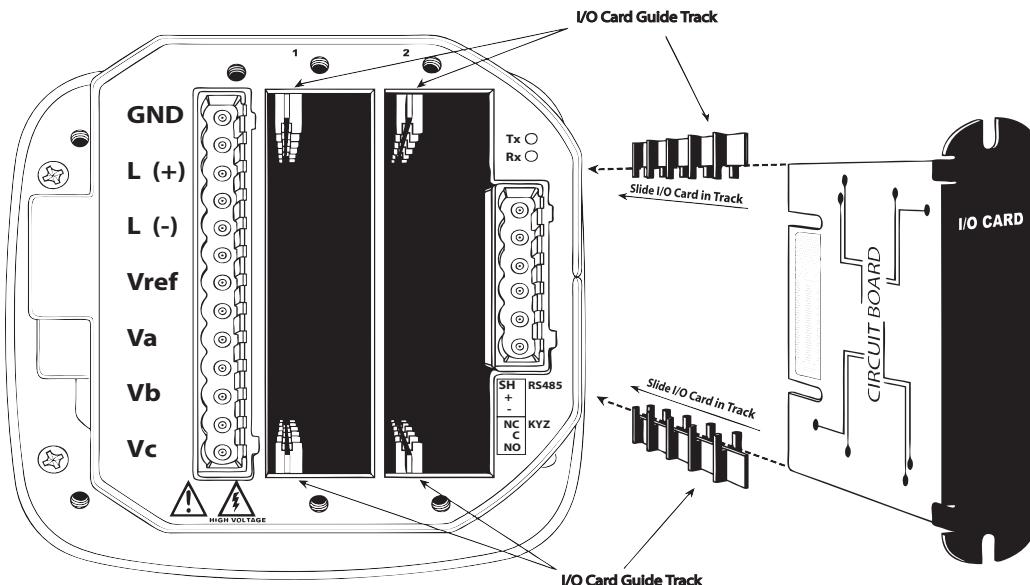


Figure 7.2: Detail of Guide Track



For safety, remove ALL these connections before installing Option cards: GND, L+, L-, Vref, Va, Vb, Vc.

3. Slide the card inside the plastic track and insert it into the slot. You will hear a click when the card is fully inserted. Be careful, it is easy to miss the guide track.

CAUTIONS!

- Make sure the I/O card is inserted properly into the track to avoid damaging the card's components.
- For proper card fit, and to avoid damaging the unit, insert components in the following order:
 - a. Option card 1
 - b. Option card 2
 - c. Detachable terminal block 1
 - d. Detachable terminal block 2
 - e. Communication connection for Port 2

7.3: Configuring Option Cards

CAUTION! FOR PROPER OPERATION, RESET ALL PARAMETERS IN THE UNIT AFTER HARDWARE MODIFICATION.

The Shark® 200 meter auto-detects any Option cards installed in it. You configure the Option cards through Communicator EXT software. Refer to Chapter 5 of the *Communicator EXT User Manual* for detailed instructions.

The following sections describe the available Option cards.

7.4: 1mA Output Card (1mAOS)

The 1mA card transmits a standardized bi-directional 0-1mA signal. This signal is linearly proportional to real-time quantities measured by the Shark® 200 meter. The outputs are electrically isolated from the main unit.

7.4.1: Specifications:

The technical specifications at 25° C at 5kΩ load are as follows:

Number of outputs:	4 single ended
Power consumption:	1.2W internal
Signal output range:	(-1.2 to +1.2)mA
Max. load impedance:	10k
Hardware resolution:	12 bits
Effective resolution:	14 bits with 2.5kHz PWM
Update rate per channel:	100ms
Output accuracy:	± 0.1 % of output range (2.4mA)
Load regulation	± 0.06 % of output range (2.4mA) load step of 5k @ ± 1mA
Temperature coefficient	± 30nA/° C
Isolation:	AC 2500V system to outputs
Reset/Default output value:	0mA

The general specifications are as follows:

Operating temperature:	(-20 to +70)° C
Storage temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.6oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External connection:	AWG 12-26/(0.29 - 3.31) mm ²
	5 pin, 0.200" pluggable terminal block

7.4.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed Option card during power up. If you have not programmed a configuration for the card, the unit defaults to the following outputs:

Channel 1	+Watts, +1800 Watts => +1mA
	-Watts, - 1800 Watts => -1mA
Channel 2	+VARs, +1800 VARs => +1mA
	- VARs, -1800 VARs => -1mA
Channel 3	Phase A Voltage WYE, 300 Volts => +1mA
	Phase A Voltage Delta, 600 Volts => +1mA
Channel 4	Phase A Current, 10 Amps => +1mA

7.4.3: Wiring Diagram

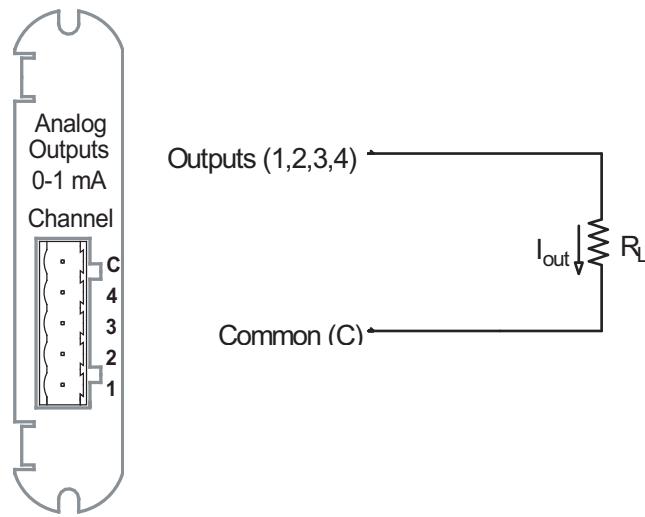


Figure 7.3: 4-Channel 0 - 1mA Output Card

7.5: 20mA Output Card (20mAOS)

The 20mA card transmits a standardized 0-20 mA signal. This signal is linearly proportional to real-time quantities measured by the Shark® 200 meter. The current sources need to be loop powered. The outputs are electrically isolated from the main unit.

7.5.1: Specifications

The technical specifications at 25° C at 500Ω load are as follows:

Number of outputs:	4 single ended
Power consumption:	1W internal
Signal output range:	(0 to 24)mA
Max. load impedance:	850 @ 24VDC
Hardware resolution:	12 bits
Effective resolution:	14 bits with 2.5kHz PWM
Update rate per channel:	100ms
Output accuracy:	± 0.1% of output range (24mA)
Load regulation:	± 0.03% of output range (24mA) load step of 200 @ 20mA
Temperature coefficient	± 300n A/°C
Isolation:	AC 2500V system to outputs
Maximum loop voltage:	28Vdc max.
Internal voltage drop:	3.4VDC @ 24mA
Reset/Default output value:	12mA

The general specifications are as follows:

Operating temperature:	(-20 to +70)° C
Storage temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity interference:	EN61000-4-2
Weight:	1.6oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External connection:	AWG 12-26/(0.129 - 3.31)mm ²
	5 pin, 0.200" pluggable terminal block

7.5.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed Option card during power up. If you have not programmed a configuration for the card, the unit defaults to the following outputs:

Channel 1	+Watts, +1800 Watts => 20mA
	-Watts, -1800 Watts => 4mA
	0 Watts => 12mA
Channel 2	+VARs, +1800 VARs => 20mA
	- VARs, -1800 VARs => 4mA
	0 VARs => 12mA
Channel 3	Phase A Voltage WYE, 300 Volts => 20mA
	0 Volts => 4 mA
	Phase A Voltage Delta, 600 Volts => 20mA
Channel 4	Phase A Current, 10 Amps => 20mA
	0 Phase A Current, 0 Amps => 4 mA

7.5.3: Wiring Diagram

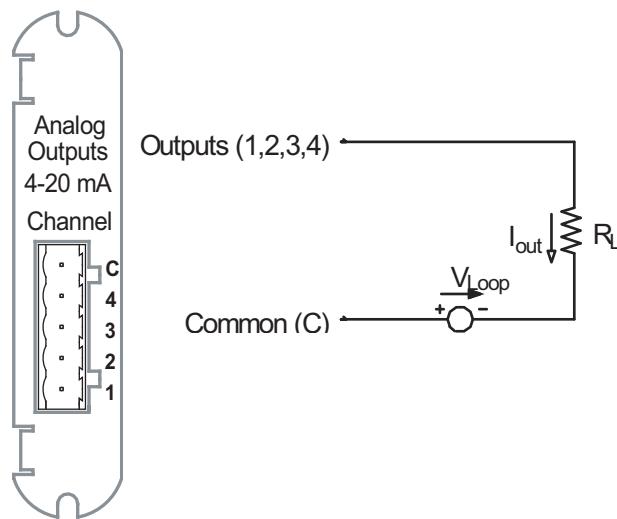


Figure 7.4: 4-Channel 0 - 20mA Output Card

7.6: Digital Output (Relay Contact) / Digital Input Card (RO1S)

The Digital Output/Input card is a combination of relay contact outputs for load switching and dry/wet contact sensing digital inputs. The outputs are electrically isolated from the inputs and from the main unit.

7.6.1: Specifications

The technical specifications at 25° C are as follows:

Power consumption: 0.320W internal

Relay outputs:

Number of outputs: 2

Contact type: Changeover (SPDT)

Relay type: Mechanically latching

Switching voltage: AC 250V / DC 30V

Switching power: 1250VA / 150W

Switching current: 5A

Switching rate max.: 10/s

Mechanical life: 5×10^7 switching operations

Electrical life: 10^5 switching operations at rated current

Breakdown voltage: AC 1000V between open contacts

Isolation: AC 3000V / 5000V surge system to contacts

Reset/Power down state: No change - last state is retained

Inputs:

Number of Inputs: 2

Sensing type: Wet or dry contact status detection

Wetting voltage: DC (12-24)V, internally generated

Input current:	2.5mA – constant current regulated
Minimum input voltage:	0V (input shorted to common)
Maximum input voltage:	DC 150V (diode protected against polarity reversal)
Filtering:	De-bouncing with 50ms delay time
Detection scan rate:	100ms
Isolation:	AC 2500V system to inputs

The general specifications are as follows:

Operating temperature:	(-20 to +70)° C
Storage temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.5oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External Connection:	AWG 12-26/(0.129 - 3.31)mm ² 9 pin, 0.200" pluggable terminal block

7.6.2: Wiring Diagram

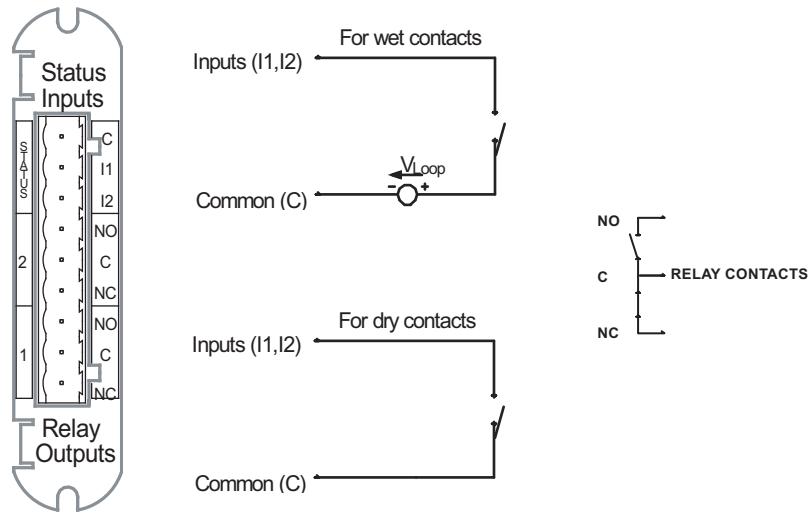


Figure 7.5: Relay Contact (2) / Status Input (2) Card

7.7: Pulse Output (Solid State Relay Contacts) / Digital Input Card (P01S)

The Pulse Output/Digital Input card is a combination of pulse outputs via solid state contacts and dry/wet contact sensing digital inputs. The outputs are electrically isolated from the inputs and from the main unit.

7.7.1: Specifications

The technical specifications at 25° C are as follows:

Power consumption: 0.420W internal

Relay outputs:

Number of outputs: 4

Contact type: Closing (SPST - NO)

Relay type: Solid state

Peak switching voltage: DC ±350V

Continuous load current: 120mA

Peak load current: 350mA for 10ms

On resistance, max.: 35

Leakage current: 1µA@350V

Switching Rate max.: 10/s

Isolation: AC 3750V system to contacts

Reset/Power down state: Open contacts

Inputs:

Number of inputs: 4

Sensing type: Wet or dry contact status detection

Wetting voltage: DC (12-24)V, internally generated

Input current: 2.5mA – constant current regulated



Minimum input voltage:	0V (input shorted to common)
Maximum input voltage:	DC 150V (diode protected against polarity reversal)
Filtering:	De-bouncing with 50ms delay time
Detection scan rate:	100ms
Isolation:	AC 2500V system to inputs

The general specifications are as follows:

Operating Temperature:	(-20 to +70)° C
Storage Temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.3oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External Connection:	AWG 12-26/(0.129 - 3.31)mm ²
	13 pin, 3.5mm pluggable terminal block

7.7.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed Option card during power up. If you have not programmed a configuration for the card, the unit defaults to the following outputs:

Status Inputs	Defaulted to Status Detect
Pulse Outputs	Defaulted to Energy Pulses
Pulse Channel 1	1.8 +Watt-hours per pulse
Pulse Channel 2	1.8 -Watt-hours per pulse

Pulse Channel 3

1.8 +VAR-hours per pulse

Pulse Channel 4

1.8 -VAR-hours per pulse

7.7.3: Wiring Diagram

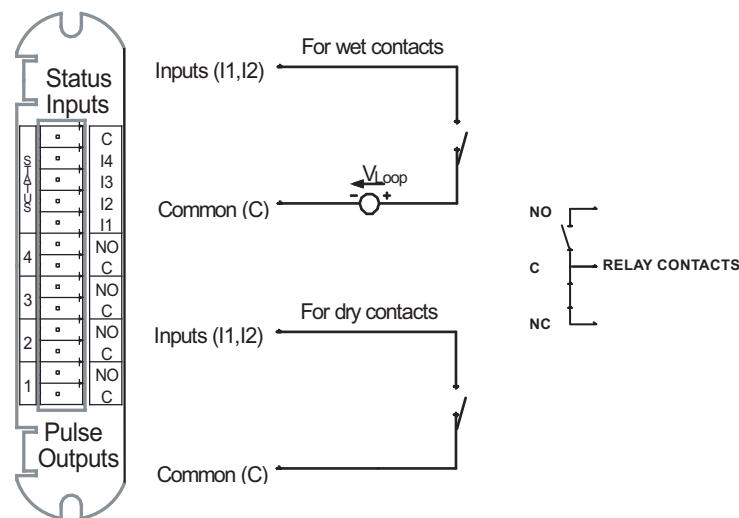


Figure 7.6: Pulse Output (4) / Status Input (4) Card

7.8: Fiber Optic Communication Card (FOSTS; FOVPS)

The Fiber Optic Communication card provides a standard serial communication port via a fiber optic connection. An echo switch is available to enable messages bypassing the unit. This feature can be used in a daisy chained network topology.

7.8.1: Specifications

The technical specifications at 25° C are as follows:

Number of Ports:	1
Power consumption:	0.160W internal
Fiber connection:	ST® (FOSTS) or Versatile Link (FOVPS) – as per order
Optical fiber details:	Multimode
ST® (FOSTS)	50/125 µm, 62.5/125 µm, 100/140 µm, 200µm Hard Clad Silica (HCS®)
Versatile Link (FOVPS):	200µm Hard Clad Silica (HCS®) 1mm Plastic Optical Fiber (POF)
Baud rate:	Up to 57.6kb/s – pre-programmed in the main unit
Diagnostic feature:	LED lamps for TX and RX activity

The general specifications are as follows:

Operating Temperature:	(-20 to +70)° C
Storage Temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.2oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26

Fiber Connection:

ST® (FOST) or Versatile Link (FOVP) – as per order

HCS® is a registered trademark of SpecTran Corporation.

ST® is a registered trademark of AT&T.

7.8.2: Wiring Diagram

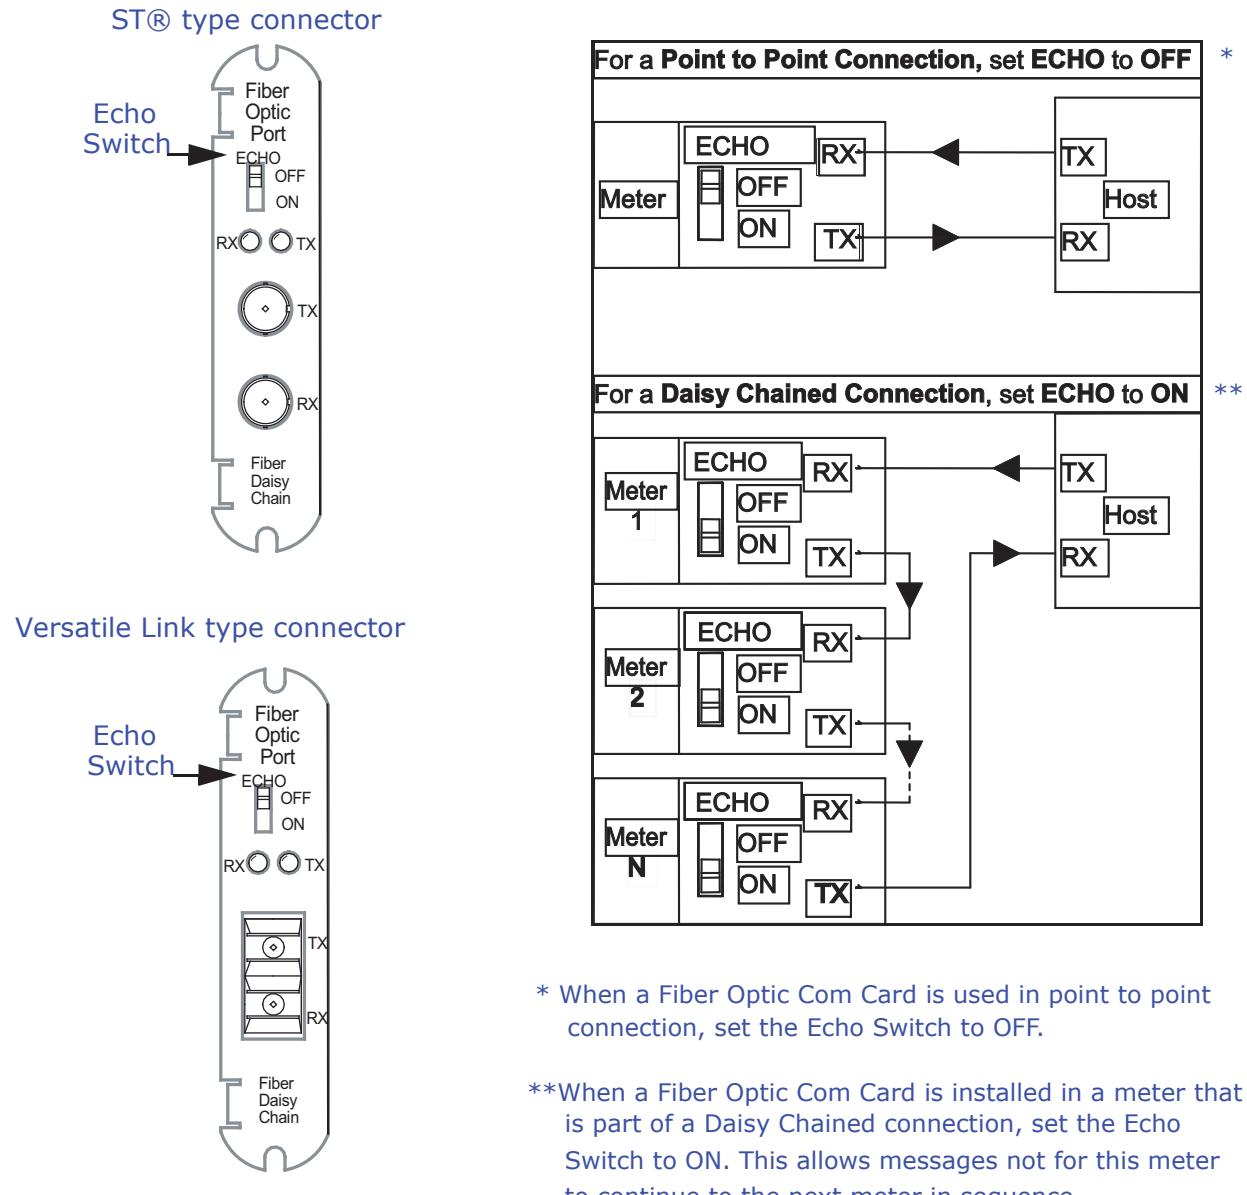


Figure 7.7: Fiber Optic Communication Card

7.9: 10/100BaseT Ethernet Communication Card (INP100S)

The 10/100BaseT Ethernet Communication card provides the Shark® 200 meter with Ethernet capability. See Chapter 8 for details and instructions.

NOTE: Refer to Chapter 5 of the Communicator EXT User's Manual for instructions on performing Network configuration.

7.9.1: Specifications

The technical specifications at 25° C are as follows:

Number of Ports:	1
Power consumption:	2.1W internal
Baud rate:	10/100Mbit
Diagnostic feature:	Status LEDs for LINK and ACTIVE
Number of simultaneous Modbus connections:	12

The general specifications are as follows:

Operating Temperature:	(-20 to +70)° C
Storage Temperature:	(-40 to +80)° C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.7oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
Connection Type:	RJ45 modular (auto-detecting transmit and receive)

7.9.2: Default Configuration

The Shark® 200 meter automatically recognizes the installed Option card during power up. If you have not programmed a configuration for the card, the unit defaults to the following:

IP Address: 10.0.0.2

Subnet Mask: 255.255.255.0

Default Gateway: 0.0.0.0

7.9.3: Wiring Diagram

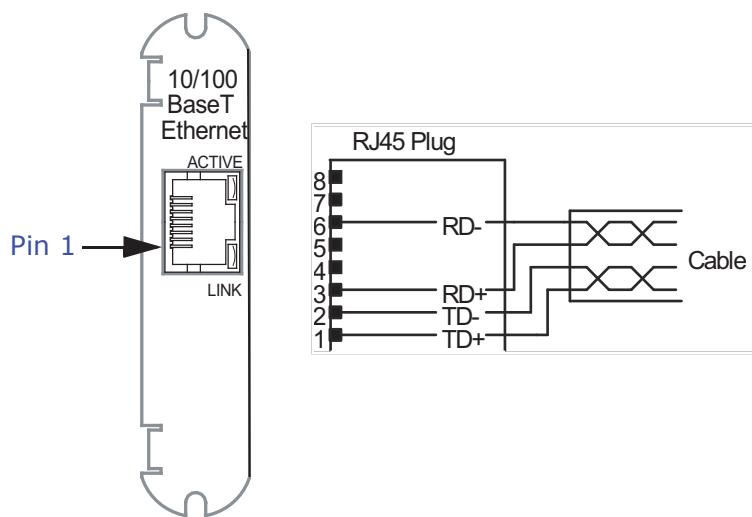


Figure 7.8: 10/100BaseT Ethernet Card

IMPORTANT! The INP100S uses an auto-detecting circuit that automatically switches the transmit and receive in order to properly align communication. Because of this, when you are communicating directly to a meter with a PC or a switch, a straight cable can be used.

8: Using the Ethernet Card (INP100S)

8.1: Overview

When you install the optional Ethernet card in your Shark® 200 meter, you gain the capability of communicating over the Ethernet using EIG's Rapid Response™ technology.

8.2: Hardware Connection

The Ethernet card fits into either of the two Option Card slots in the back of the Shark® 200 meter. Refer to the Chapter 7 for card installation instructions.

Use a standard RJ45 10/100BaseT cable to connect to the Ethernet card. The card auto-detects cable type and will work with either straight or crossover cable.

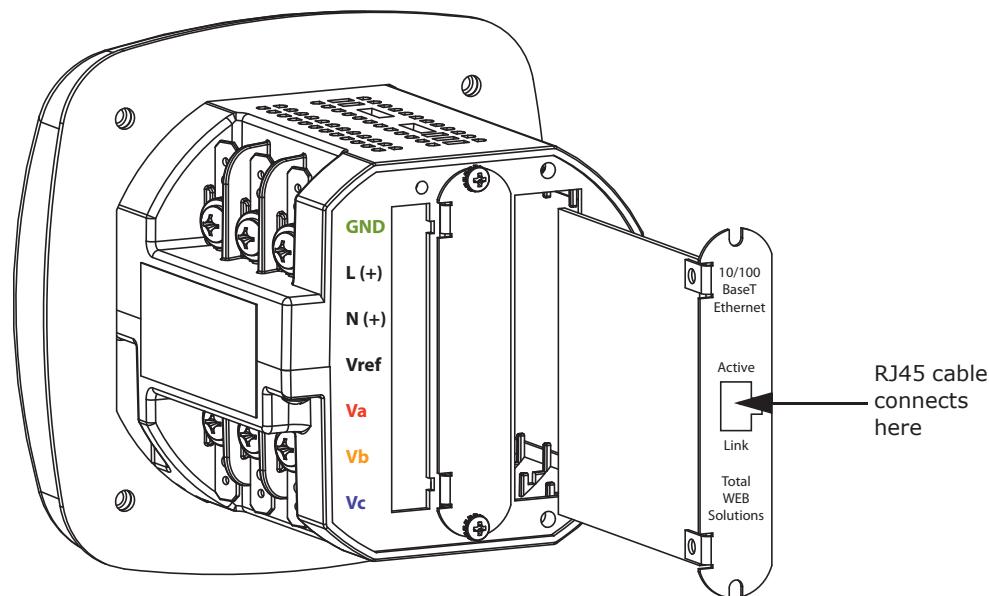


Figure 8.1: Meter with Ethernet Card

8.3: Performing Network Configuration

As with the other Option cards, the Shark® 200 meter auto-detects the presence of an installed Ethernet card. Configure the Ethernet card through Communicator EXT. Refer to Chapter 5 of the *Communicator EXT User Manual* for instructions. You can open the manual online by clicking **Help>Contents** from the Communicator EXT Main screen.

8.4: Ethernet Card Features

The INP100S Ethernet card gives your meter the following capabilities:

- Ethernet communication
- Embedded Web server
- NTP Time Server synchronization

8.4.1: Ethernet Communication

The INP100S enables high-speed Ethernet communication with up to 12 simultaneous connections for Modbus TCP. The card supports a static IP address and is treated like a node on the network.

8.4.2: Embedded Web Server

The INP100S gives the meter a Web server that is viewable over the Ethernet by almost all browsers. The Shark® Series webpages allow you to see the following information for the Shark® 200 meter:

- Voltage and current readings
- Power and Energy readings
- Power quality information
- General meter information

You can also upgrade the Ethernet (Network) card's firmware from the Meter Information web page.

Follow these steps to access the Shark® 200 meter's webpages:

1. Open Internet Explorer or Firefox from your PC, Android© or I-Phone©.
2. Type the Ethernet Card's IP address in the address bar, preceded by "http://".

For example: http://172.20.167.99

3. You will see the Shark® Series Introduction web page shown below.



4. To view Voltage and current readings, click **Volts/Amps** on the left side of the web page. You will see the webpage shown below.

	Instantaneous	Maximum	Minimum
Volts A-N	14381.0	14462.8	0.0
Volts B-N	14402.2	14410.2	0.0
Volts C-N	14547.5	14593.3	0.0
Volts A-B	23395.3	23413.6	0.0
Volts B-C	27095.2	27063.7	0.0
Volts C-A	24136.2	24162.8	0.0
Frequency	60.1	60.1	0.0

	Instantaneous	Maximum	Minimum
Amps A	453.9	454.0	0.0
Amps B	405.7	414.2	0.0
Amps C	413.6	424.8	0.0
Amps N (calculated)	195.6	165.1	0.0

5. To view power and Energy readings, click **Power/Energy** on the left side of the webpage. You will see the webpage shown below.

Meter Information:

- Meter Name: Meter9
- Date/Time: 2007-05-10 15:12:22

Real Time:

	Instant	Pos Average	Neg Average
Watts	18.4 M	18.4 M	0.0
VARS	124.7 k	203.2 k	0.0
PF	1.0	1.0	0.0
	Instant	Average	
VA	18.4 M	18.4 M	

Energy:

	Primary
Watt Hours Received	6497.951 M
Watt Hours Delivered	0.0 M
Watt Hours Net	6497.951 M
Watt Hours Total	6497.951 M
VAR Hours Positive	118.006 M
VAR Hours Negative	0.0 M
VAR Hours Net	118.006 M
VAR Hours Total	118.006 M
VA Hours Total	6501.024 M

6. To view power quality information, click **Power Quality** on the left side of the webpage. You will see the webpage shown below

Meter Information:

- Meter Name: Meter9
- Date/Time: 2007-06-01 11:02:46

Graph Icon (points to the icon on the left sidebar)


Voltage / Current:

	% THD	1	3	5	7	9	11	13	15
		Mag.	Mag.	Mag.	Mag.	Mag.	Mag.	Mag.	Mag.
VA	1.87	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VB	1.22	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VC	1.74	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00
IA	1.98	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00
IB	1.21	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00
IC	1.79	99.99	0.00	0.00	0.00	0.00	0.00	0.00	0.00


Phase Angles:

	Voltage		Current
A-B	108.6	A	-3.2
B-C	138.3	B	-2.1
C-A	112.9	C	0.0

7. To view a graphical representation of the Voltage and current magnitudes, click the **Graph** icon in the corner of the Voltage/Current box. You will see the webpage shown below.

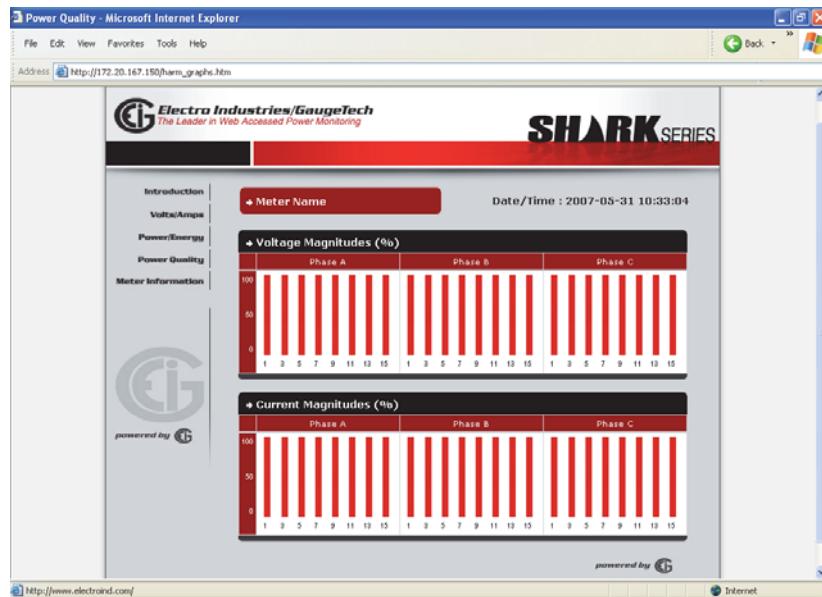

8. Click **Power Quality** on the left side of the webpage to return to the previous webpage.
9. To view meter information, or to upgrade the Network card's firmware, click **Meter Information** on the left side of the webpage. You will see the webpage shown below.

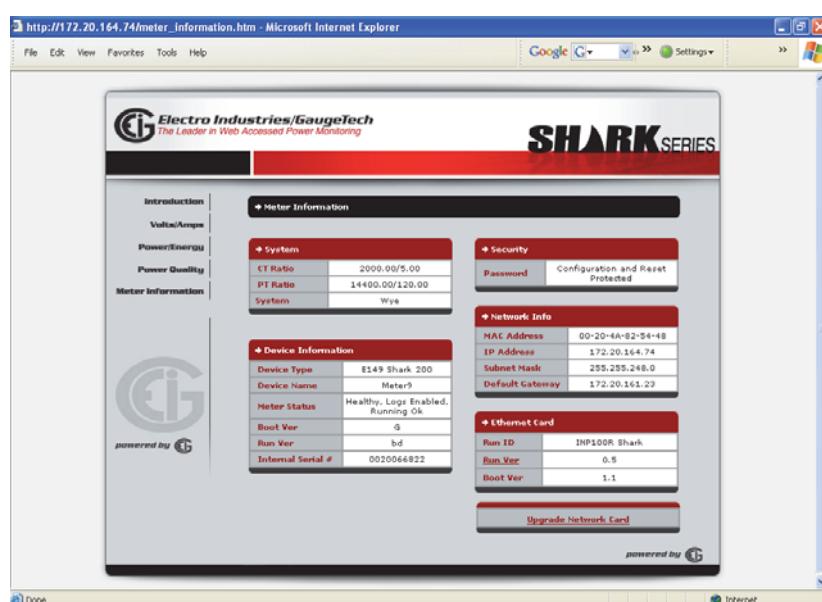

8.4.2.1: Upgrading the Ethernet Card's Firmware

From one of the Shark® 200 meter's webpages:

NOTE: This procedure should only be done with a PC running Internet EXplorer.

1. Click **Meter Information** on the left side of the webpage.
2. Click **Upgrade Network Card** (bottom box on the right). You will see the window shown below.

NOTE: In order to upgrade the Network (Ethernet) Card, you must be using the PC on which the upgrade file is stored.



3. Click the **Browse** button to locate the Upgrade file.
4. Enter the safety code (supplied with the Upgrade file) and the password:
eignet2009.
5. Click **Submit**. The upgrade starts immediately (it may take several minutes to complete). Once the upgrade is complete, you will see a confirmation message.

CAUTION! Note the Warning message on the screen. If there is a power interruption during upgrade, please call EIG's Technical Support department at 516-334-0870 for assistance.

8.4.3: NTP Time Server Synchronization

The INP100S can be configured to perform time synchronization through a Network Time Protocol (NTP) server. This feature lets you synchronize the Shark® 200 meter's real-time clock with this outside source. See Chapter 5 of the *Communicator EXT USer Manual* for configuration instructions (Configuring the Network Card section). You can view the manual online by clicking **Help>Contents** from the Communicator EXT Main screen.

This page intentionally left blank.

9: Data Logging

9.1: Overview

Optional V-Switch™ keys 2-6 (V-2 - V-6) give the Shark® 200 meter additional memory for extensive data logging. The Shark® 200 meter can log historical trends, limit alarms, I/O changes, sequence of events, and waveforms (V-5 and V-6 only). In addition, the meter has a real-time clock that allows all events to be time-stamped when they occur.

9.2: Available Logs

The following logs are available for a Shark® 200 meter equipped with V- 2 - V-4. These meters have 2 MegaBytes of flash memory for data logging.

- Historical Logs: The Shark® 200 meter has three Historical Logs. Each log can be independently programmed with individual trending profiles, that is, each can be used to measure different values. You can program up to 64 parameters per log. You also have the ability to allocate available system resources between the three logs, to increase or decrease the size of the individual historical logs. See Chapter 5 (Configuring Historical Logs and Allocating Historical Log Sectors sections) and Chapter 8 (Viewing Log section) of the *Communicator EXT User Manual* for additional information and instructions.
- Limit/Alarm Log: This log provides the magnitude and duration of events that fall outside of configured acceptable limits. Time stamps and alarm value are provided in the log. Up to 2,048 events can be logged. See Chapter 5 (Configuring Limits section) and Chapter 8 (Shark® 200 Meter Logs section) of the *Communicator EXT User Manual* for additional information and instructions.
- I/O Change Log: This log is unique to the Shark® 200 meter. The I/O Change Log provides a time-stamped record of any Relay Output/Digital Input or Pulse Output/Digital Input Card output or input status changes. Up to 2,048 events can be logged. Refer to Chapter 5 (Configuring Shark® 200 Meter Option Cards section) and Chapter 8 (Shark® 200 Meter Logs section) of the *Communicator EXT User Manual* for additional information and instructions.
- System Events Log: In order to protect critical billing information, the Shark® 200 meter records and logs the following information with a timestamp:

- Demand resets
- Password requests
- System startup
- Energy resets
- Log resets
- Log reads
- Programmable settings changes.

A Shark® 200 meter equipped with V-5 and V-6 has additional memory for data logging: V-5 gives the meter 3 Megabytes of flash memory, and V-6 gives the meter 4 MegaBytes of flash memory. These meters also have waveform recording capabilities, and the following additional log:

- Waveform Log: This event-triggered log records a waveform when a user-programmed value goes out of limit and when the value returns to normal.

All of the Shark® 200 meter Logs can be viewed through the EIG Log Viewer. Refer to Chapter 8 of the *Communicator EXT User Manual* for additional information and instructions regarding Logs and the Log Viewer.

A: Shark® 200 Meter Navigation Maps

A.1: Introduction


You can configure the Shark® 200 meter and perform related tasks using the buttons on the meter face. Chapter 6 contains a description of the buttons on the meter face and instructions for programming the meter using them. The meter can also be programmed using software (see Chapter 5 and the *Communicator EXT User Manual*).


A.2: Navigation Maps (Sheets 1 to 4)


The Shark® 200 meter's Navigation maps begin on the next page. The maps show in detail how to move from one screen to another and from one Display mode to another using the buttons on the face of the meter. All Display modes automatically return to Operating mode after 10 minutes with no user activity.


Shark® 200 Meter Navigation Map Titles:

- Main Menu screens (Sheet 1)
- Operating mode screens (Sheets 2)
- Reset mode screens (Sheet 3)
- Configuration mode screens (Sheet 4)

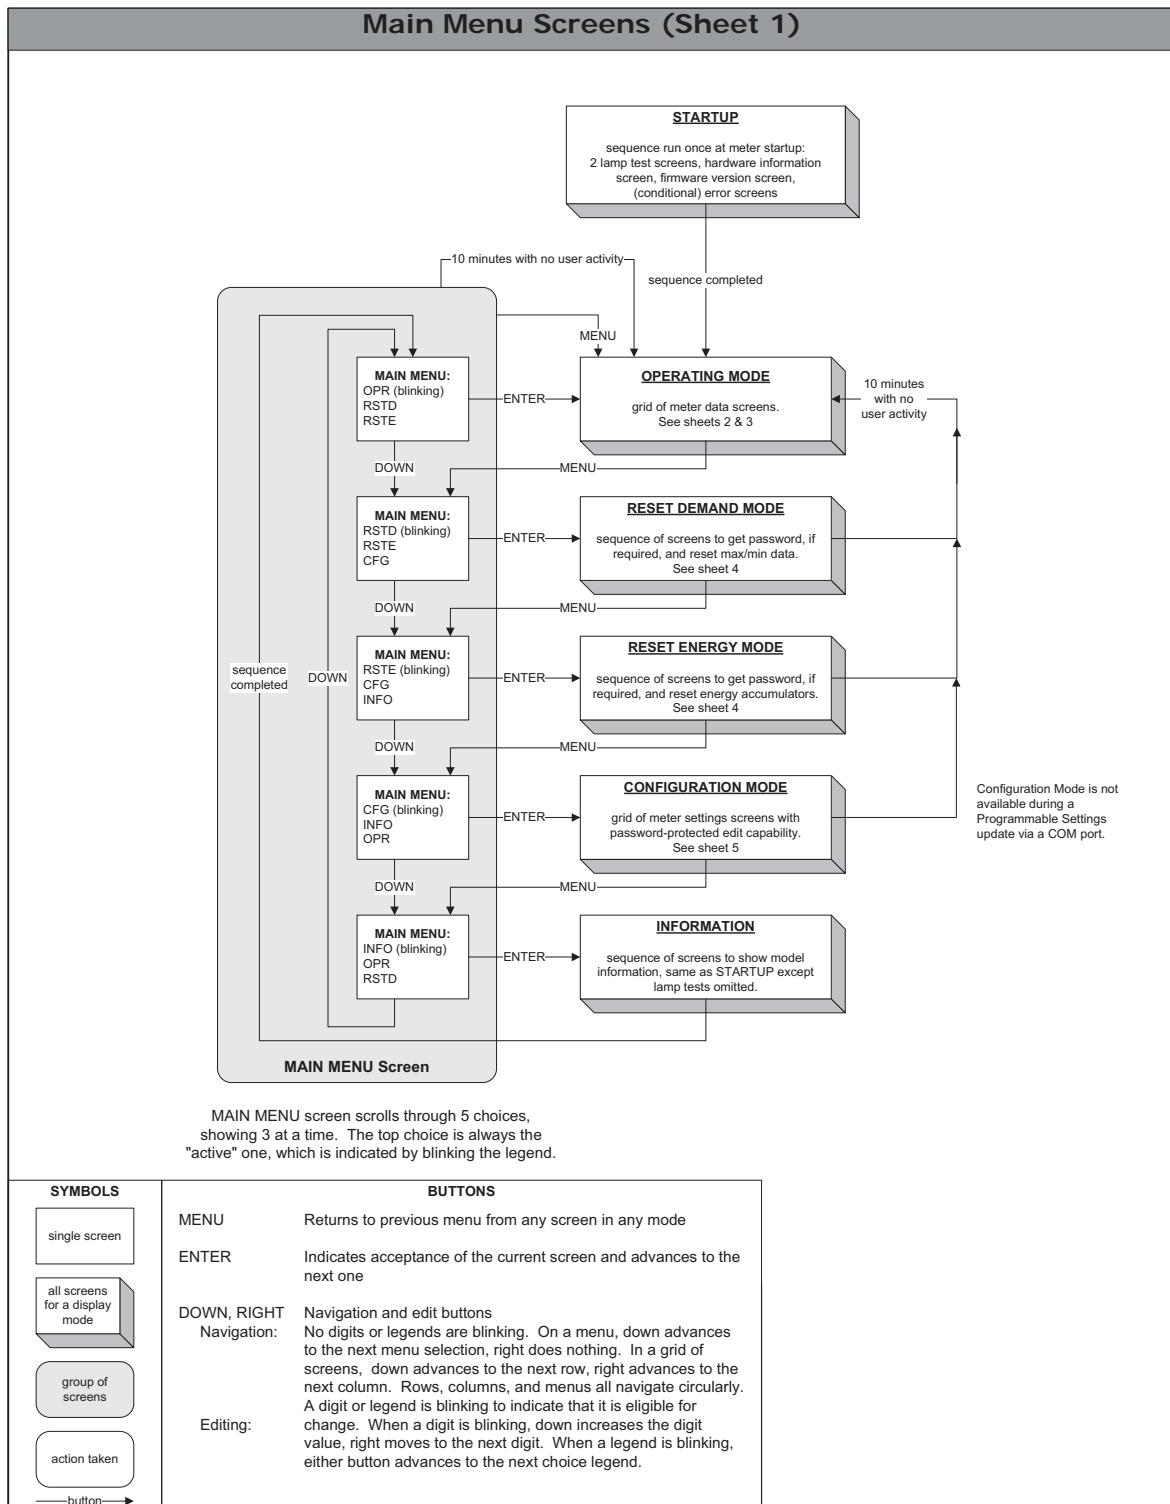

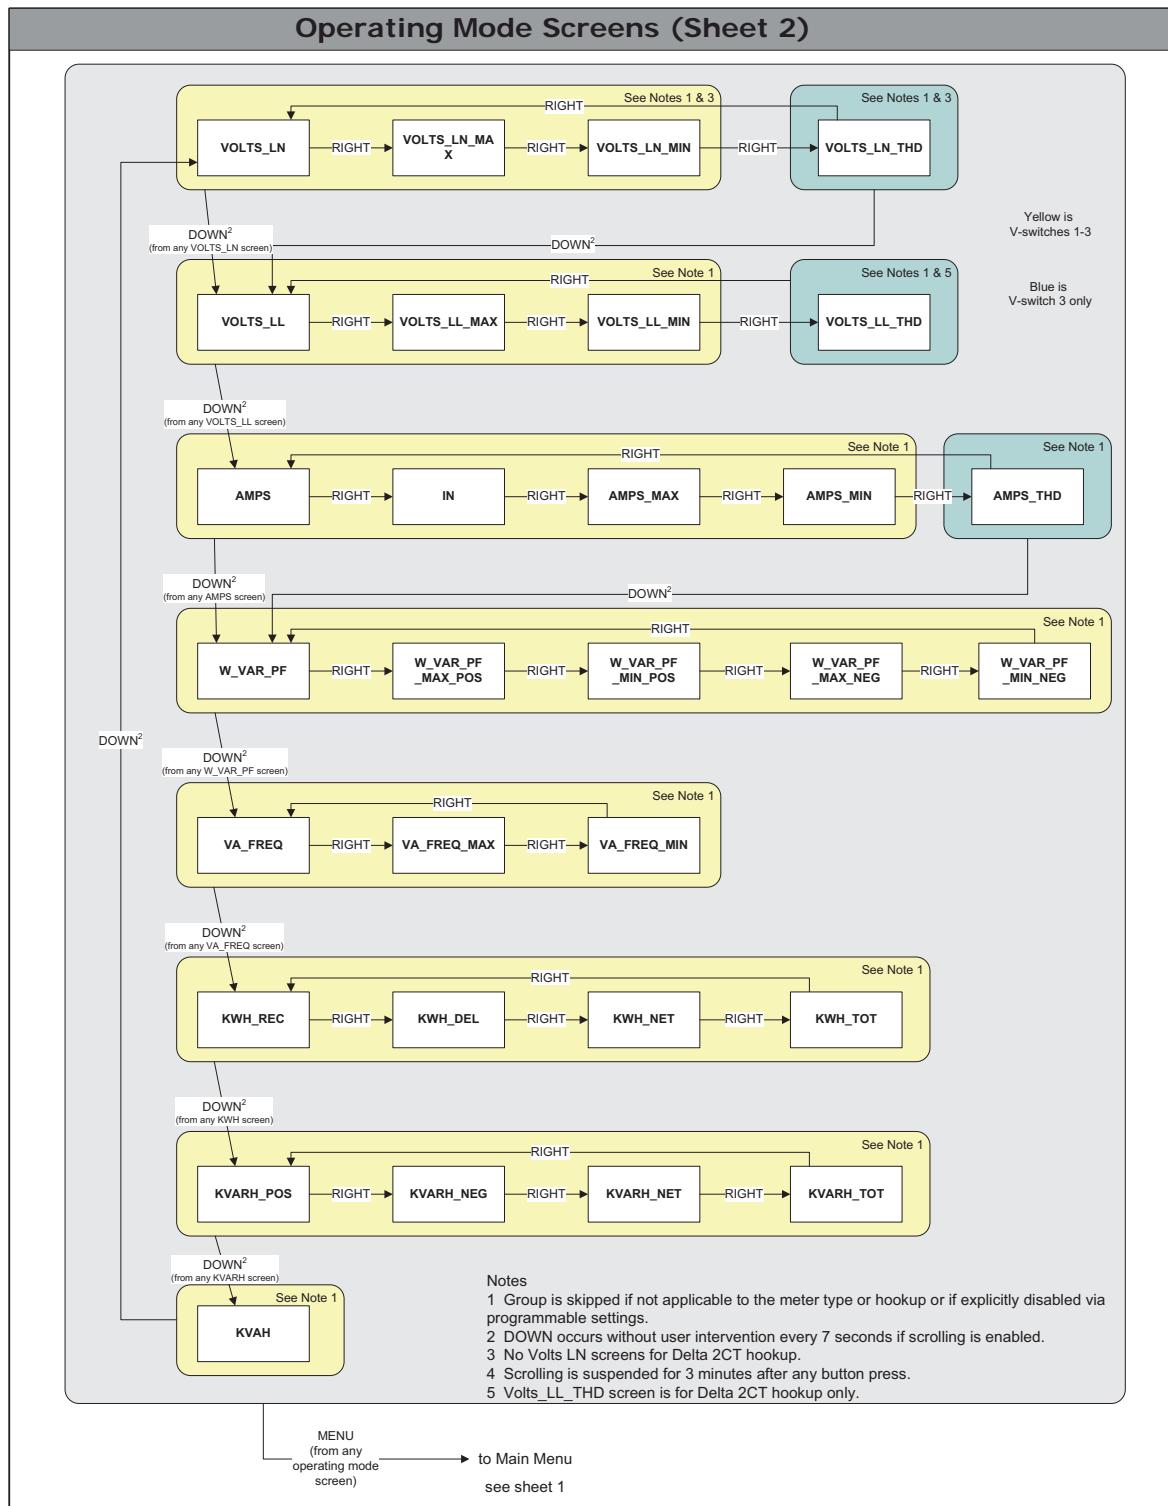

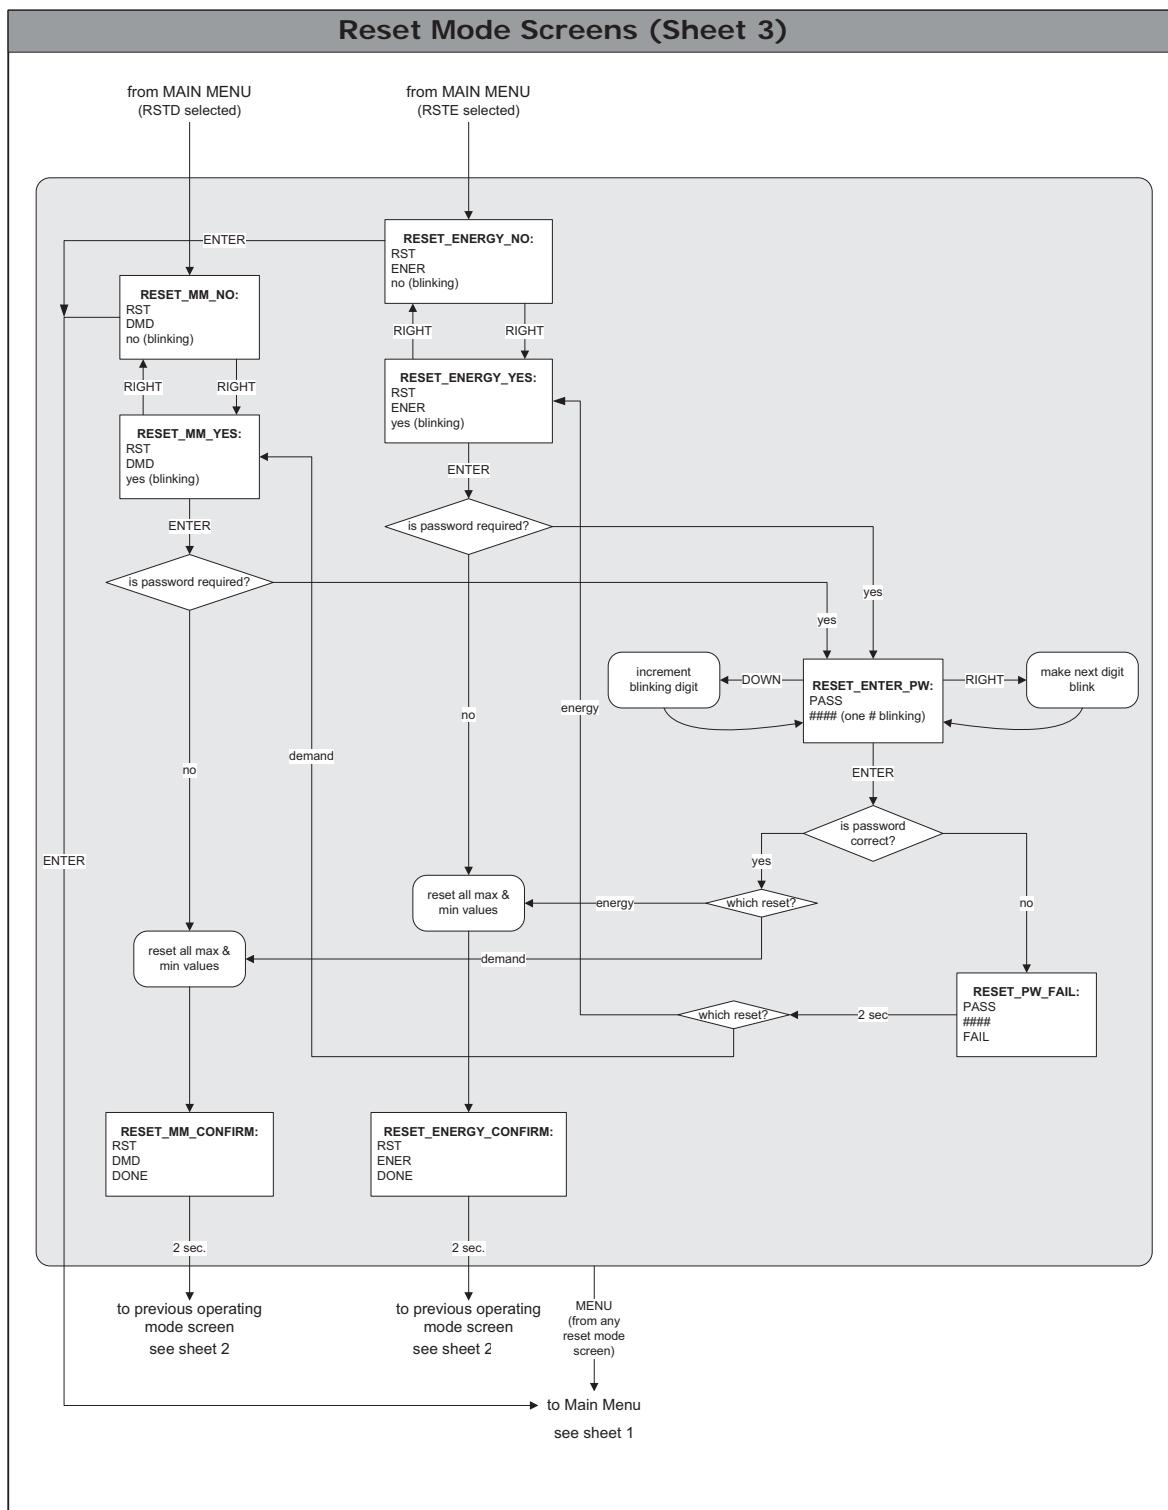

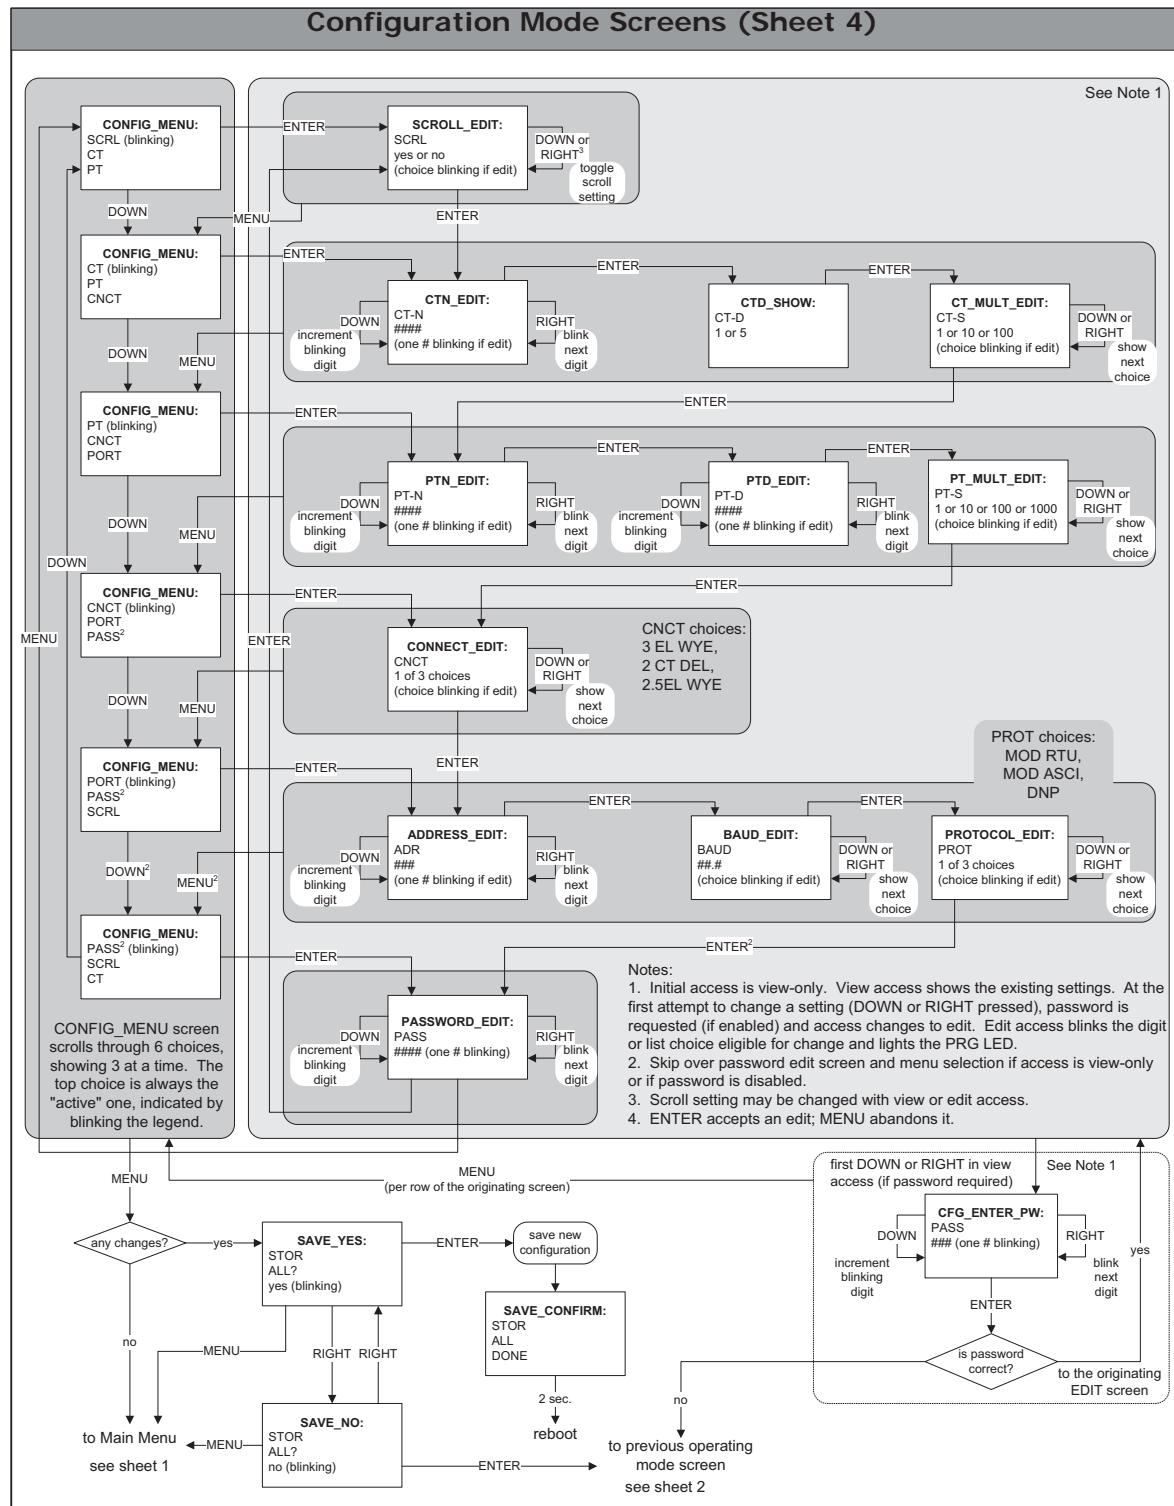

This page intentionally left blank.

B: Modbus Map and Retrieving Logs

B.1: Introduction

The Modbus Map for the Shark® 200 meter gives details and information about the possible readings of the meter and its programming. The Shark® 200 meter can be programmed using the buttons on the face of the meter (Chapter 6), or by using software. For a programming overview, see section 5.2 of this manual. For further details see the *Communicator EXT User Manual*.

B.2: Modbus Register Map Sections

The Shark® 200 meter's Modbus Register Map includes the following sections:

Fixed Data Section, Registers 1- 47, details the Meter's Fixed Information.

Meter Data Section, Registers 1000 - 12031, details the Meter's Readings, including Primary Readings, Energy Block, Demand Block, Phase Angle Block, Status Block, THD Block, Minimum and Maximum in Regular and Time Stamp Blocks, Option Card Blocks, and Accumulators. Operating Mode readings are described in Section 6.2.6.

Commands Section, Registers 20000 - 26011, details the Meter's Resets Block, Programming Block, Other Commands Block and Encryption Block.

Programmable Settings Section, Registers 30000 - 33575, details all the setups you can program to configure your meter.

Secondary Readings Section, Registers 40001 - 40100, details the Meter's Secondary Readings.

Log Retrieval Section, Registers 49997 - 51095, details Log Retrieval. See Section B.5 for instructions on retrieving logs.

B.3: Data Formats

ASCII:	ASCII characters packed 2 per register in high, low order and without any termination characters.
SINT16/UINT16:	16-bit signed/unsigned integer.
SINT32/UINT32:	32-bit signed/unsigned integer spanning 2 registers. The lower-addressed register is the

high order half.

FLOAT: 32-bit IEEE floating point number spanning 2 registers. The lower-addressed register is the high order half (i.e., contains the exponent).

B.4: Floating Point Values

Floating Point Values are represented in the following format:

Register	0															1																
Byte	0								1								0								1							
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Meaning	s	e	e	e	e	e	e	e	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	
	sign	exponent								mantissa																						

The formula to interpret a Floating Point Value is:

$$-1^{\text{sign}} \times 2^{\text{exponent}-127} \times 1.\text{mantissa} = 0x0C4E11DB9$$

$$-1^{\text{sign}} \times 2^{137-127} \times 1.10001000110110111001$$

$$-1 \times 2^{10} \times 1.75871956$$

$$-1800.929$$

Register	0xC4E1															0x01DB9																
Byte	0xC4								0xE1								0x01D								0xB9							
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
	1	1	0	0	0	1	0	0	1	1	1	0	0	0	0	1	0	0	0	1	1	1	0	1	1	0	1	1	1	0	0	
Meaning	s	e	e	e	e	e	e	e	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	
	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	
sign	exponent								mantissa																							
1	0x089 + 137								0b011000010001110110111001																							

Formula Explanation:

C4E11DB9 (hex)

11000100 11100001 00011101 10111001

(binary)

The sign of the mantissa (and therefore the number) is 1, which represents a negative value.

The Exponent is 10001001 (binary) or 137 decimal.

The Exponent is a value in excess 127. So, the Exponent value is 10.

The Mantissa is 11000010001110110111001 binary.

With the implied leading 1, the Mantissa is (1).611DB9 (hex).

The Floating Point Representation is therefore -1.75871956 times 2 to the 10.

Decimal equivalent: -1800.929

NOTES:

- Exponent = the whole number before the decimal point.
- Mantissa = the positive fraction after the decimal point.

B.5: Retrieving Logs Using the Shark® 200 Meter's Modbus Map

This section describes the log interface system of the Shark® 200 meter from a programming point of view. It is intended for Programmers implementing independent drivers for Log Retrieval from the meter. It describes the meaning of the meter's Modbus Registers related to Log Retrieval and Conversion, and details the procedure for retrieving a log's records.

NOTES:

- All references assume the use of Modbus function codes 0x03, 0x06, and 0x10, where each register is a 2 byte MSB (Most Significant Byte) word, except where otherwise noted.
- The carat symbol (^) notation is used to indicate mathematical "power." For example, 2^8 means $2 \times 2 \times 2 \times 2 \times 2 \times 2 \times 2 \times 2$, which equals 256.

B.5.1: Data Formats

Timestamp: Stores a date from 2000 to 2099. Timestamp has a Minimum resolution of 1 second.

Byte	0	1	2	3	4	5
Value	Year	Month	Day	Hour	Minute	Second
Range	0-99 (+2000)	1-12	1-31	0-23	0-59	0-59
Mask	0x7F	0x0F	0x1F	0x1F	0x3F	0x3F

The high bits of each timestamp byte are used as flags to record meter state information at the time of the timestamp. These bits should be masked out, unless needed.

B.5.2: Shark® 200 Meter Logs

The Shark® 200 meter has 6 logs: System Event, Alarm (Limits), 3 Historical, and I/O Change. Each log is described below.

- 1. System Event (0):** The System Event log is used to store events which happen in, and to, the meter. Events include Startup, Reset Commands, Log Retrievals, etc. The System Event Log Record takes 20 bytes, 14 bytes of which are available when the log is retrieved.

Byte	0	1	2	3	4	5	6	7	8	9	10	11	12	13
Value	timestamp					Group	Event	Mod	Chan	Param1	Param2	Param3	Param4	

NOTE: The complete Systems Events table is shown in Section B.5.5, step 1, on page B-19.

- 2. Alarm Log (1):** The Alarm Log records the states of the 8 Limits programmed in the meter.
 - Whenever a limit goes out (above or below), a record is stored with the value that caused the limit to go out.
 - Whenever a limit returns within limit, a record is stored with the "most out of limit" value for that limit while it was out of limit.

The Alarm Log Record uses 16 bytes, 10 bytes of which are available when the log is retrieved.

Byte	0	1	2	3	4	5	6	7	8	9
Value	timestamp				direction	limit#	Value%			

The limit # byte is broken into a type and an ID.

Bit	0	1	2	3	4	5	6	7
Value	type	0	0	0	0	Limit ID		

3. Historical Log 1 (2): The Historical Log records the values of its assigned registers at the programmed interval.

NOTE: See Section B.5.3, Number 1, for details on programming and interpreting the log.

Byte	0	1	2	3	4	5	6	-	-	N
Value	timestamp				values . . .					

4. Historical Log 2 (3): Same as Historical Log 1.

5. Historical Log 3 (4): Same as Historical Log 1.

6. I/O Change Log (5): The I/O Change Log records changes in the input and output of Digital I/O Type Option Cards (Relay and Pulse).

I/O Change Log tables:

Table 1:

Byte	0	1	2	3	4	5	6	7	8	9
Value	Timestamp				Card 1 Changes		Card 1 States		Card 2 Changes	Card 2 States

Card Change Flags:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 Change	Out 3 Change	Out 2 Change	Out 1 Change	In 4 Change	In 3 Change	In 2 Change	In 1 Change

Card Current States:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 State	Out 3 State	Out 2 State	Out 1 State	In 4 State	In 3 State	In 2 State	In 1 State

B.5.3: Block Definitions

This section describes the Modbus Registers involved in retrieving and interpreting a Shark® 200 Meter Log. Other sections refer to certain 'values' contained in this section. See the corresponding value in this section for details.

NOTES:

- "Register" is the Modbus Register Address in 0-based Hexadecimal notation. To convert it to 1-based decimal notation, convert from hex16 to decimal10 and add 1. For example: 0x03E7 = 1000.
- "Size" is the number of Modbus Registers (2 byte) in a block of data.

Historical Log Programmable Settings:

The Historical Logs are programmed using a list of Modbus Registers that will be copied into the Historical Log record. In other words, Historical Log uses a direct copy of the Modbus Registers to control what is recorded at the time of record capture.

To supplement this, the programmable settings for the Historical Logs contain a list of descriptors, which group registers into items. Each item descriptor lists the data type of the item, and the number of bytes for that item. By combining these two lists, the Historical Log record can be interpreted.

For example: Registers 0x03E7 and 0x03E8 are programmed to be recorded by the historical log. The matching descriptor gives the data type as float, and the size as 4 bytes. These registers program the log to record "Primary Readings Volts A-N."

Historical Log Blocks:

Start Register: 0x7917 (Historical Log 1)

0x79D7 (Historical Log 2)

0x7A97 (Historical Log 3)

Block Size: 192 registers per log (384 bytes)

The Historical Log programmable settings are comprised of 3 blocks, one for each log. Each is identical to the others, so only Historical Log 1 is described here. All register addresses in this section are given as the Historical Log 1 address (0x7917).

Each Historical Log Block is composed of 3 sections: The header, the list of registers to log, and the list of item descriptors.

Header:

Registers: 0x7917 - 0x7918

Size: 2 registers

Byte	0	1	2	3
Value	# Registers	# Sectors		Interval

- # Registers: The number of registers to log in the record. The size of the record in memory is [12 + (# Registers x 2)]. The size during normal log retrieval is [6 + (# Registers x 2)]. If this value is 0, the log is disabled. Valid values are {0-117}.
- # Sectors: The number of Flash Sectors allocated to this log. Each sector is 64kb, minus a sector header of 20 bytes. 15 sectors are available for allocation between Historical Logs 1, 2, and 3. The sum of all Historical Logs may be less than 15. If this value is 0, the log is disabled. Valid values are {0-15}.
- Interval: The interval at which the Historical Log's Records are captured. This value is an enumeration:

0x01	1 minute
0x02	3 minute
0x04	5 minute
0x08	10 minute
0x10	15 minute
0x20	30 minute
0x40	60 minute

0x80

End of Interval (EOI) Pulse*

* Setting the interval to EOI causes a record to be logged whenever an EOI pulse event is generated. This is most commonly used in conjunction with the Digital I/O Option Cards.

NOTE: The interval between records will not be even (fixed), and thus should not be used with programs that expect a fixed interval.

Register List:

Registers: 0x7919 - 0x798D

Size: 1 register per list item, 117 list items

The Register List controls what Modbus Registers are recorded in each record of the Historical Log. Since many items, such as Voltage, Energy, etc., take up more than 1 register, multiple registers need to be listed to record those items.

For example: Registers 0x03E7 and 0x03E8 are programmed to be recorded by the historical log. These registers program the log to record "Primary Readings Volts A-N."

- Each unused register item should be set to 0x0000 or 0xFFFF to indicate that it should be ignored.
- The actual size of the record, and the number of items in the register list which are used, is determined by the # registers in the header.
- Each register item is the Modbus Address in the range of 0x0000 to 0xFFFF.

Item Descriptor List:

Registers: 0x798E - 0x79C8

Size: 1 byte per item, 117 bytes (59 registers)

While the Register List describes what to log, the Item Descriptor List describes how to interpret that information. Each descriptor describes a group of register items, and what they mean.

Each descriptor is composed of 2 parts:

- Type: The data type of this descriptor, such as signed integer, IEEE floating point, etc. This is the high nibble of the descriptor byte, with a value in the range of 0-14. If this value is 0xFF, the descriptor should be ignored.

0	ASCII: An ASCII string, or byte array
1	Bitmap: A collection of bit flags
2	Signed Integer: A 2's Complement integer
3	Float: An IEEE floating point
4	Energy: Special Signed Integer, where the value is adjusted by the energy settings in the meter's Programmable Settings.
5	Unsigned Integer
6	Signed Integer 0.1 scale: Special Signed Integer, where the value is divided by 10 to give a 0.1 scale.
7-14	Unused
15	Disabled: used as end list marker.

- Size: The size in bytes of the item described. This number is used to determine the pairing of descriptors with register items.

For example: If the first descriptor is 4 bytes, and the second descriptor is 2 bytes, then the first 2 register items belong to the 1st descriptor, and the 3rd register item belongs to the 2nd descriptor.

NOTE: As can be seen from the example, above, there is not a 1-to-1 relation between the register list and the descriptor list. A single descriptor may refer to multiple register items.

Register Items	Descriptors
0x03C7/ 0x03C8	Float, 4 byte
0x1234	Signed Int, 2 byte

NOTE: The sum of all descriptor sizes must equal the number of bytes in the data portion of the Historical Log record.

Log Status Block:

The Log Status Block describes the current status of the log in question. There is one header block for each of the logs. Each log's header has the following base address:

Log	Base Address
Alarms:	0xC737
System:	0xC747
Historical 1:	0xC757
Historical 2:	0xC767
Historical 3:	0xC777
I/O Change:	0xC787

Bytes	Value	Type	Range	# Bytes
0-3	Max Records	UINT32	0 to 4,294,967,294	4
4-7	Number of Records Used	UINT32	1 to 4,294,967,294	4
8-9	Record Size in Bytes	UINT16	4 to 250	2
10-11	Log Availability	UINT16		2
12-17	Timestamp, First Record	TSTAMP	1Jan2000 - 31Dec2099	6
18-23	Timestamp, Last Record	TSTAMP	1Jan2000 - 31Dec2099	6
24-31	Reserved			8

- Max Records: The maximum number of records the log can hold given the record size, and sector allocation. The data type is an unsigned integer from 0 - 2^{32} .
- Records Used: The number of records stored in the log. This number will equal the Max Records when the log has filled. This value will be set to 1 when the log is reset. The data type is an unsigned integer from 1 - 2^{32} .

NOTE: The first record in every log before it has rolled over is a "dummy" record, filled with all 0xFF's. When the log is filled and rolls over, this record is overwritten.

- Record Size: The number of bytes in this record, including the timestamp. The data type is an unsigned integer in the range of 14 - 242.
- Log Availability: A flag indicating if the log is available for retrieval, or if it is in use by another port.

0	Log Available for retrieval
1	In use by COM1 (IrDA)
2	In use by COM2 (RS485)
3	In use by COM3 (Option Card 1)
4	In use by COM4 (Option Card 2)
0xFFFF	Log Not Available - the log cannot be retrieved. This indicates that the log is disabled.

NOTE: To query the port by which you are currently connected, use the Port ID register:

Register: 0x1193

Size: 1 register

Description: A value from 1-4, which enumerates the port that the requestor is currently connected on.

NOTES:

- When Log Retrieval is engaged, the Log Availability value will be set to the port that engaged the log. The Log Availability value will stay the same until either the log has been disengaged, or 5 minutes have passed with no activity. It will then reset to 0 (available).
- Each log can only be retrieved by one port at a time.
- Only one log at a time can be retrieved.

- First Timestamp: Timestamp of the oldest record.
- Last Timestamp: Timestamp of the newest record.

Log Retrieval Block:

The Log Retrieval Block is the main interface for retrieving logs. It is comprised of 2 parts: the header and the window. The header is used to program the particular data the meter presents when a log window is requested. The window is a sliding block of data that can be used to access any record in the specified log.

Session Com Port: The Shark® 200 meter's Com Port which is currently retrieving logs. Only one Com Port can retrieve logs at any one time.

Registers:	0xC34E - 0xC34E
Size:	1 register
0	No Session Active
1	COM1 (IrDA)
2	COM2 (RS-485)
3	COM3 (Communications Capable Option Card 1)
4	COM4 (Communications Capable Option Card 2)

To get the current Com Port, see the NOTE on querying the port, on the previous page.

Log Retrieval Header:

The Log Retrieval Header is used to program the log to be retrieved, the record(s) of that log to be accessed, and other settings concerning the log retrieval.

Registers:	0xC34F - 0xC350
Size:	2 registers

Bytes	Value	Type	Format	Description	# Bytes
0-1	Log Number, Enable, Scope	UINT16	nnnnnnnn eeeeeeee	nnnnnnnn - log to retrieve, e - retrieval session enable eeeeeeee - retrieval mode	2
2-3	Records per Window, Number of Repeats	UINT16	wwwwwwww nnnnnnnn	wwwwww - www - records per window, nnnnnnnn - repeat count	2

- Log Number: The log to be retrieved. Write this value to set which log is being retrieved.

0 System Events

1 Alarms

2 Historical Log 1

3 Historical Log 2

4 Historical Log 3

5 I/O Change Log

- Enable: This value sets if a log retrieval session is engaged (locked for retrieval) or disengaged (unlocked, read for another to engage). Write this value with 1(enable) to begin log retrieval. Write this value with 0(disable) to end log retrieval.

0 Disable

1 Enable

- Scope: Sets the amount of data to be retrieved for each record. The default should be 0 (normal).

0 Normal

1

Timestamp Only

2

Image

- Normal [0]: The default record. Contains a 6-byte timestamp at the beginning, then N data bytes for the record data.
- Timestamp [1]: The record only contains the 6-byte timestamp. This is most useful to determine a range of available data for non-interval based logs, such as Alarms and System Events.
- Image [2]: The full record, as it is stored in memory. Contains a 2-byte checksum, 4-byte sequence number, 6-byte timestamp, and then N data bytes for the record data.
- Records Per Window: The number of records that fit evenly into a window. This value is set-able, as less than a full window may be used. This number tells the retrieving program how many records to expect to find in the window.

$(\text{RecPerWindow} \times \text{RecSize}) = \# \text{bytes used in the window.}$

This value should be $((123 \times 2) \downarrow \text{recSize})$, rounded down.

For example, with a record size of 30, the $\text{RecPerWindow} = ((123 \times 2) \downarrow 30) = 8.2$
 $\sim = 8$

- Number of Repeats: Specifies the number of repeats to use for the Modbus Function Code 0x23 (35). Since the meter must pre-build the response to each log window request, this value must be set once, and each request must use the same repeat count. Upon reading the last register in the specified window, the record index will increment by the number of repeats, if auto-increment is enabled. Section B.5.4.2 has additional information on Function Code 0x23.

0

Disables auto-increment

1

No Repeat count, each request will only get 1 window.

2-8

2-8 windows returned for each Function Code 0x23 request.



Bytes	Value	Type	Format	Description	# Bytes
0-3	Offset of First Record in Window	UINT32	sssssss nnnnnnnn nnnnnnnn nnnnnnnn	sssssss - window status nn...nn - 24-bit record index number.	4
4-249	Log Retrieve Window	UINT16			246

Log Retrieval Window Block:

The Log Retrieval Window block is used to program the data you want to retrieve from the log. It also provides the interface used to retrieve that data.

Registers: 0xC351 - 0xC3CD

Size: 125 registers

- Window Status: The status of the current window. Since the time to prepare a window may exceed an acceptable modbus delay (1 second), this acts as a state flag, signifying when the window is ready for retrieval. When this value indicates that the window is not ready, the data in the window should be ignored. Window Status is Read-only, any writes are ignored.

0 Window is Ready

0xFF Window is Not Ready

- Record Number: The record number of the first record in the data window. Setting this value controls which records will be available in the data window.
 - When the log is engaged, the first (oldest) record is "latched." This means that record number 0 will always point to the oldest record at the time of latching, until the log is disengaged (unlocked).
 - To retrieve the entire log using auto-increment, set this value to 0, and retrieve the window repeatedly, until all records have been retrieved.

NOTES:

- When auto-increment is enabled, this value will automatically increment so that the window will "page" through the records, increasing by RecordsPerWindow each time that the last register in the window is read.
- When auto-increment is not enabled, this value must be written-to manually, for each window to be retrieved.
- Log Retrieval Data Window: The actual data of the records, arranged according to the above settings.

B.5.4: Log Retrieval

Log Retrieval is accomplished in 3 basic steps:

1. Engage the log.
2. Retrieve each of the records.
3. Disengage the log.

B.5.4.1: Auto-Increment

In EIG's traditional Modbus retrieval system, you write the index of the block of data to retrieve, then read that data from a buffer (window). To improve the speed of retrieval, the index can be automatically incremented each time the buffer is read.

In the Shark® 200 meter, when the last register in the data window is read, the record index is incremented by the Records per Window.

B.5.4.2: Modbus Function Code 0x23**QUERY**

<u>Field Name</u>	<u>Example (Hex)</u>
Slave Address	01
Function	23
Starting Address Hi	C3
Starting Address Lo	51

# Points Hi	00
# Points Lo	7D
Repeat Count	04

Function Code 0x23 is a user defined Modbus function code, which has a format similar to Function Code 0x03, except for the inclusion of a "repeat count." The repeat count (RC) is used to indicate that the same N registers should be read RC number of times. (See the Number of Repeats bullet on page B-14.)

NOTES:

- By itself this feature would not provide any advantage, as the same data will be returned RC times. However, when used with auto-incrementing, this function condenses up to 8 requests into 1 request, which decreases communication time, as fewer transactions are being made.
- In the Shark® 200 meter repeat counts are limited to 8 times for Modbus RTU, and 4 times for Modbus ASCII.

The response for Function Code 0x23 is the same as for Function Code 0x03, with the data blocks in sequence.

IMPORTANT! Before using function code 0x23, always check to see if the current connection supports it. Some relay devices do not support user defined function codes; if that is the case, the message will stall. Other devices don't support 8 repeat counts.

B.5.4.3: Log Retrieval Procedure

The following procedure documents how to retrieve a single log from the oldest record to the newest record, using the "normal" record type (see **Scope**). All logs are retrieved using the same method. See Section B.5.4.4 for a Log Retrieval example.

NOTES:

- This example uses auto-increment.
- In this example, Function Code 0x23 is not used.
- You will find referenced topics in Section B.5.3. Block Definitions.

- Modbus Register numbers are listed in brackets.

1. Engage the Log:

a. Read the Log Status Block.

- i.. Read the contents of the specific logs' status block [0xC737+, 16 reg] (see Log Headers).
- ii. Store the # of Records Used, the Record Size, and the Log Availability.
- iii. If the Log Availability is not 0, stop Log Retrieval; this log is not available at this time. If Log Availability is 0, proceed to step 1b (Engage the log).

This step is done to ensure that the log is available for retrieval, as well as retrieving information for later use.

b. Engage the log: write log to engage to Log Number, 1 to Enable, and the desired mode to Scope (default 0 (Normal)) [0xC34F, 1 reg]. This is best done as a single-register write.

This step will latch the first (oldest) record to index 0, and lock the log so that only this port can retrieve the log, until it is disengaged.

c. Verify the log is engaged: read the contents of the specific logs' status block [0xC737+, 16 reg] again to see if the log is engaged for the current port (see Log Availability). If the Log is not engaged for the current port, repeat step 1b (Engage the log).

d. Write the retrieval information.

i. Compute the number of records per window, as follows:

$$\text{RecordsPerWindow} = (246 \setminus \text{RecordSize})$$

- If using 0x23, set the repeat count to 2-8. Otherwise, set it to 1.
- Since we are starting from the beginning for retrieval, the first record index is 0.

- ii. Write the Records per window, the Number of repeats (1), and Record Index (0) [0xC350, 3 reg].

This step tells the Shark® 200 meter what data to return in the window.

2. Retrieve the records:

- a. Read the record index and window: read the record index, and the data window [0xC351, 125 reg].
 - If the meter Returns a Slave Busy Exception, repeat the request.
 - If the Window Status is 0xFF, repeat the request.
 - If the Window Status is 0, go to step 2b (Verify record index).

NOTES:

- We read the index and window in 1 request to minimize communication time, and to ensure that the record index matches the data in the data window returned.
 - Space in the window after the last specified record (RecordSize x Records-PerWindow) is padded with 0xFF, and can be safely discarded.
- b. Verify that the record index incremented by Records Per Window. The record index of the retrieved window is the index of the first record in the window. This value will increase by Records Per Window each time the window is read, so it should be 0, N, N x 2, N x 3 . . . for each window retrieved.
 - If the record index matches the expected record index, go to step 2c (Compute next expected record index).
 - If the record index does not match the expected record index, then go to step 1d (Write the retrieval information), where the record index will be the same as the expected record index. This will tell the Shark® 200 meter to repeat the records you were expecting.
 - c. Compute next Expected Record Index.

- If there are no remaining records after the current record window, go to step 3 (Disengage the log).
 - Compute the next expected record index by adding Records Per Window, to the current expected record index. If this value is greater than the number of records, re-size the window so it only contains the remaining records and go to step 1d (Write the retrieval information), where the Records Per Window will be the same as the remaining records.
3. Disengage the log: write the Log Number (of log being disengaged) to the Log Index and 0 to the Enable bit [0xC34F, 1 reg].

B.5.4.4: Log Retrieval Example

The following example illustrates a log retrieval session. The example makes the following assumptions:

- Log Retrieved is Historical Log 1 (Log Index 2).
- Auto-Incrementing is used.
- Function Code 0x23 is not used (Repeat Count of 1).
- The Log contains Volts-AN, Volts-BN, Volts-CN (12 bytes).
- 100 Records are available (0-99).
- COM Port 2 (RS485) is being used (see Log Availability).
- There are no Errors.
- Retrieval is starting at Record Index 0 (oldest record).
- Protocol used is Modbus RTU. The checksum is left off for simplicity.
- The Shark® 200 meter is at device address 1.
- No new records are recorded to the log during the log retrieval process.

1. Read [0xC757, 16 reg], Historical Log 1 Header Block.

Send: 0103 C757 0010

Command:

Register Address: 0xC757

Registers: 16

Receive: 010320 00000100 00000064 0012 0000
060717101511 060718101511
0000000000000000

Data:

Max Records: 0x100 = 256 records maximum.

Num Records: 0x64 = 100 records currently logged.

Record Size: 0x12 = 18 bytes per record.

Log Availability: 0x00 = 0, not in use, available for retrieval.

First Timestamp: 0x060717101511 = July 23, 2006, 16:21:17

Last Timestamp: 0x060717101511 = July 24, 2006, 16:21:17

NOTE: This indicates that Historical Log 1 is available for retrieval.

2. Write 0x0280 -> [0xC34F, 1 reg], Log Enable.

Send: 0106 C34F 0280

Command:

Register Address: 0xC34F

Registers: 1 (Write Single Register Command)

Data:

Log Number: 2 (Historical Log 1)

Enable: 1 (Engage log)

Scope: 0 (Normal Mode)

Receive: 0106C34F0280 (echo)

NOTE: This engages the log for use on this COM Port, and latches the oldest record as record index 0.

3. Read [0xC757, 16 reg], Availability is 0.

Send: 0103 C757 0010

Command:

Register Address: 0xC757

Registers: 16

Receive: 010320 00000100 00000064 0012 0002

060717101511 060718101511

0000000000000000

Data:

Max Records: 0x100 = 256 records maximum.

Num Records: 0x64 = 100 records currently logged.

Record Size: 0x12 = 18 bytes per record.

Log Availability: 0x02 = 2, In use by COM2, RS485 (the current port)

First Timestamp: 0x060717101511 = July 23, 2006, 16:21:17

Last Timestamp: 0x060717101511 = July 24, 2006, 16:21:17

NOTE: This indicates that the log has been engaged properly in step 2. Proceed to retrieve the log.

4. Compute #RecPerWin as $(246 \setminus 18) = 13$. Write 0x0D01 0000 0000 -> [0xC350, 3 reg] Write Retrieval Info. Set Current Index as 0.

Send: 0110 C350 0003 06 0D01 00 000000

Command:

Register Address: 0xC350

Registers: 3, 6 bytes

Data:

Records per Window: 13. Since the window is 246 bytes, and the record is 18 bytes, $246 \setminus 18 = 13.66$, which means that 13 records evenly fit into a single window. This is 234 bytes, which means later on, we only need to read 234 bytes (117 registers) of the window to retrieve the records.

of Repeats: 1. We are using auto-increment (so not 0), but not function code 0x23.

Window Status: 0 (ignore)

Record Index: 0, start at the first record.

Receive: 0110C3500003 (command ok)

NOTES:

- This sets up the window for retrieval; now we can start retrieving the records.
- As noted above, we compute the records per window as $246 \setminus 18 = 13.66$, which is rounded to 13 records per window. This allows the minimum number of requests to be made to the meter, which increases retrieval speed.

5. Read [0xC351, 125 reg], first 2 reg is status/index, last 123 reg is window data.
Status OK.

Send: 0103 C351 007D

Command:

Register Address: 0xC351

Registers: 0x7D, 125 registers

Receive: 0103FA 00000000
060717101511FFFFFFFFFFFFFFF
06071710160042FAAACF42FAAD1842FAA9A8 . . .

Data:

Window Status: 0x00 = the window is ready.

Index: 0x00 = 0, The window starts with the 0'th record, which is the oldest record.

Record 0: The next 18 bytes is the 0'th record (filler).

Timestamp: 0x060717101511, = July 23, 2006, 16:21:17

Data: This record is the "filler" record. It is used by the meter so that there is never 0 records. It should be ignored. It can be identified by the data being all 0xFF.

NOTE: Once a log has rolled over, the 0'th record will be a valid record, and the filler record will disappear.

Record 1: The next 18 bytes is the 1'st record.

Timestamp: 0x060717101600 July 23, 2006, 16:22:00

Data:

Volts AN: 0x42FAACF, float = 125.33~

Volts BN: 0x42FAAD18, float = 125.33~

Volts CN: 0x42FAA9A8, float = 125.33~

. . . 13 records

NOTES:

- This retrieves the actual window. Repeat this command as many times as necessary to retrieve all of the records when auto-increment is enabled.
- Note the filler record. When a log is reset (cleared) in the meter, the meter always adds a first "filler" record, so that there is always at least 1 record in the log. This "filler" record can be identified by the data being all 0xFF, and it being index 0. If a record has all 0xFF for data, the timestamp is valid, and the index is NOT 0, then the record is legitimate.
- When the "filler" record is logged, its timestamp may not be "on the interval." The next record taken will be on the next "proper interval," adjusted to the hour. For example, if the interval is 1 minute, the first "real" record will be taken on the next minute (no seconds). If the interval is 15 minutes, the next record will be taken at :15, :30, :45, or :00 - whichever of those values is next in sequence.

6. Compare the index with Current Index.

NOTES:

- The Current Index is 0 at this point, and the record index retrieved in step 5 is 0: thus we go to step 8.
- If the Current Index and the record index do not match, go to step 7. The data that was received in the window may be invalid, and should be discarded.

7. Write the Current Index to [0xC351, 2 reg].

Send: 0110 C351 0002 04 00 00000D

Command:

Register Address: 0xC351

Registers: 2, 4 bytes

Data:

Window Status:

0 (ignore)

Record Index:

0x0D = 13, start at the 14th record.

Receive:

0110C3510002 (command ok)

NOTES:

- This step manually sets the record index, and is primarily used when an out-of-order record index is returned on a read (step 6).
 - The example assumes that the second window retrieval failed somehow, and we need to recover by requesting the records starting at index 13 again.
8. For each record in the retrieved window, copy and save the data for later interpretation.
9. Increment Current Index by RecordsPerWindow.

NOTES:

- This is the step that determines how much more of the log we need to retrieve.
 - On the first N passes, Records Per Window should be 13 (as computed in step 4), and the current index should be a multiple of that (0, 13, 26, . . .). This amount will decrease when we reach the end (see step 10).
 - If the current index is greater than or equal to the number of records (in this case 100), then all records have been retrieved; go to step 12. Otherwise, go to step 10 to check if we are nearing the end of the records.
10. If number records - current index < RecordsPerWindow, decrease to match.

NOTES:

- Here we bounds-check the current index, so we don't exceed the records available.
- If the number of remaining records (#records - current index) is less than the Records per Window, then the next window is the last, and contains less than a full window of records. Make records per window equal to remaining records

(#records-current index). In this example, this occurs when current index is 91 (the 8'th window). There are now 9 records available (100-91), so make Records per Window equal 9.

11. Repeat steps 5 through 10.

NOTES:

- Go back to step 5, where a couple of values have changed.

Pass	CurIndex	FirstRecIndex	RecPerWindow
0	0	0	13
1	13	13	13
2	26	26	13
3	39	39	13
4	52	52	13
5	65	65	13
6	78	78	13
7	91	91	9
8	100	-----	-----

- At pass 8, since Current Index is equal to the number of records (100), log retrieval should stop; go to step 12 (see step 9 Notes).

12. No more records available, clean up.

13. Write 0x0000 -> [0xC34F, 1 reg], disengage the log.

Send: 0106 C34F 0000

Command:

Register Address: 0xC34F

Registers: 1 (Write Single Register Command)

Data:

Log Number: 0 (ignore)

Enable: 0 (Disengage log)

Scope: 0 (ignore)

Receive: 0106C34F0000 (echo)

NOTES:

- This disengages the log, allowing it to be retrieved by other COM ports.
- The log will automatically disengage if no log retrieval action is taken for 5 minutes.

B.5.5: Log Record Interpretation

The records of each log are composed of a 6 byte timestamp, and N data. The content of the data portion depends on the log.

System Event Record:

Byte	0	1	2	3	4	5	6	7	8	9	10	11	12	13
Value	timestamp					Group	Event	Mod	Chan	Param1	Param2	Param3	Param4	

Size: 14 bytes (20 bytes image).

Data: The System Event data is 8 bytes; each byte is an enumerated value.

- Group: Group of the event.
- Event: Event within a group.
- Modifier: Additional information about the event, such as number of sectors or log number.
- Channel: The port of the Shark® 200 meter that caused the event.

0 Firmware

1 COM 1 (IrDA)

2	COM 2 (RS485)
3	COM 3 (Option Card 1)
4	COM 4 (Option Card 2)
7	User (Face Plate)

Param 1-4: These are defined for each event (see table below).

NOTE: The System Log Record is 20 bytes, consisting of the Record Header (12 bytes) and Payload (8 bytes). The Timestamp (6 bytes) is in the header. Typically, software will retrieve only the timestamp and payload, yielding a 14-byte record. The table below shows all defined payloads.

Group (Event group)	Event (Event within group)	Mod (Event modifier)	Channel (1-4 for COMs, 7 for USER, 0 for FW)	Parm1	Parm2	Parm3	Parm4	Comments
0								Startup
	0	0	0	FW version				Meter Run Firmware Startup
	1	slot#	0	class ID	card status	0xFF	0xFF	Option Card Using Default Settings
<hr/>								
1								Log Activity
	1	log#	1-4	0xFF	0xFF	0xFF	0xFF	Reset
	2	log#	1-4	0xFF	0xFF	0xFF	0xFF	Log Retrieval Begin
	3	log#	0-4	0xFF	0xFF	0xFF	0xFF	Log Retrieval End
<hr/>								
2								Clock Activity
	1	0	1-4	0xFF	0xFF	0xFF	0xFF	Clock Changed
	2	0	0	0xFF	0xFF	0xFF	0xFF	Daylight Time On
	3	0	0	0xFF	0xFF	0xFF	0xFF	Daylight Time Off
<hr/>								
3								System Resets

	1	0	0-4, 7	OxFF	OxFF	OxFF	OxFF	Max & Min Reset
	2	0	0-4, 7	OxFF	OxFF	OxFF	OxFF	Energy Reset
	3	slot#	0-4	1 (inputs) or 2 (outputs)	OxFF	OxFF	OxFF	Accumulators Reset
4								Settings Activity
	1	0	1-4, 7	OxFF	OxFF	OxFF	OxFF	Password Changed
	2	0	1-4	OxFF	OxFF	OxFF	OxFF	V-switch Changed
	3	0	1-4, 7	OxFF	OxFF	OxFF	OxFF	Programmable Settings Changed
	4	0	1-4, 7	OxFF	OxFF	OxFF	OxFF	Measurement Stopped
5								Boot Activity
	1	0	1-4	FW version				Exit to Boot
6								Error Reporting & Recovery
	4	log #	0	OxFF	OxFF	OxFF	OxFF	Log Babbling Detected
	5	log #	0	# records discarded		time in seconds		Babbling Log Periodic Summary
	6	log #	0	# records discarded		time in seconds		Log Babbling End Detected
	7	sector#	0	error count		stimulus	OxFF	Flash Sector Error
	8	0	0	OxFF	OxFF	OxFF	OxFF	Flash Error Counters Reset
	9	0	0	OxFF	OxFF	OxFF	OxFF	Flash Job Queue Overflow
0x88								
	1	sector#	0	log #	OxFF	OxFF	OxFF	acquire sector
	2	sector#	0	log #	OxFF	OxFF	OxFF	release sector

	3	sector#	0	erase count				erase sector
	4	log#	0	0xFF				write log start record

- log# values: 0 = system log, 1 = alarms log, 2-4 = historical logs 1-3, 5 = I/O change log
- sector# values: 0-63
- slot# values: 1-2

NOTES:

- Stimulus for a flash sector error indicates what the flash was doing when the error occurred: 1 = acquire sector, 2 = startup, 3 = empty sector, 4 = release sector, 5 = write data
- Flash error counters are reset to zero in the unlikely event that both copies in EEPROM are corrupted.
- A "babbling log" is one that is saving records faster than the meter can handle long term. Onset of babbling occurs when a log fills a flash sector in less than an hour. For as long as babbling persists, a summary of records discarded is logged every 60 minutes. Normal logging resumes when there have been no new append attempts for 30 seconds.
- Logging of diagnostic records may be suppressed via a bit in programmable settings.

Alarm Record:

Byte	0	1	2	3	4	5	6	7	8	9
Value	timestamp						direction	limit#	Value%	

Size: 10 bytes (16 bytes image)

Data: The Alarm record data is 4 bytes, and specifies which limit the event occurred on, and the direction of the event (going out of limit, or coming back into limit).

- Direction: The direction of the alarm event: whether this record indicates the limit going out, or coming back into limit.

1 Going out of limit

2 Coming back into limit

Bit	0	1	2	3	4	5	6	7
Value	type	0	0	0	0	Limit ID		

- Limit Type: Each limit (1-8) has both an above condition and a below condition. Limit Type indicates which of those the record represents.

0 High Limit

1 Low Limit

- Limit ID: The specific limit this record represents. A value in the range 0-7, Limit ID represents Limits 1-8. The specific details for this limit are stored in the programmable settings.

- Value: Depends on the Direction:

- If the record is "Going out of limit," this is the value of the limit when the "Out" condition occurred.
- If the record is "Coming back into limit," this is the "worst" value of the limit during the period of being "out": for High (above) limits, this is the highest value during the "out" period; for Low (below) limits, this is the lowest value during the "out" period.

Byte	0	1	2	3	4	5	6	7	8	9
Value	Identifier	Above Setpoint	Above Hyst.	Below Setpoint	Below Hyst.					

Interpretation of Alarm Data:

To interpret the data from the alarm records, you need the limit data from the Programmable Settings [0x754B, 40 registers].

There are 8 limits, each with an Above Setpoint, and a Below Setpoint. Each setpoint also has a threshold (hysteresis), which is the value at which the limit returns "into"

limit after the setpoint has been exceeded. This prevents "babbling" limits, which can be caused by the limit value fluttering over the setpoint, causing it to go in and out of limit continuously.

- Identifier: The first modbus register of the value that is being watched by this limit.
While any modbus register is valid, only values that can have a Full Scale will be used by the Shark® 200 meter.
- Above Setpoint: The percent of the Full Scale above which the value for this limit will be considered "out."
 - Valid in the range of -200.0% to +200.0%
 - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. For example, 105.2% = 1052.)
- Above Hysteresis: The percent of the Full Scale below which the limit will return "into" limit, if it is out. If this value is above the Above Setpoint, this Above limit will be disabled.
 - Valid in the range of -200.0% to +200.0%.
 - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. For example, 104.1% = 1041.)
- Below Setpoint: The percent of the Full Scale below which the value for this limit will be considered "out."
 - Valid in the range of -200.0% to +200.0%.
 - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. For example, 93.5% = 935.)
- Below Hysteresis: The percent of the Full Scale above which the limit will return "into" limit, if it is out. If this value is below the Below Setpoint, this Below limit will be disabled.
 - Valid in the range of -200.0% to +200.0%.

- Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. For example, 94.9% = 949.)

NOTES:

- The Full Scale is the "nominal" value for each of the different types of readings. To compute the Full Scale, use the following formulas:

Current	[CT Numerator] x [CT Multiplier]
Voltage	[PT Numerator] x [PT Multiplier]
Power 3-Phase (WYE)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x 3
Power 3-Phase (Delta)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x 3 x sqrt(3)
Power Single Phase (WYE)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier]
Power Single Phase (Delta)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x sqrt(3)
Frequency (Calibrated at 60 Hz)	60
Frequency (Calibrated at 50 Hz)	50
Power Factor	1.0
THD, Harmonics	100.0%
Angles	180°

- To interpret a limit alarm fully, you need both the start and end record (for duration).
- There are a few special conditions related to limits:
 - When the meter powers up, it detects limits from scratch. This means that multiple "out of limit" records can be in sequence with no "into limit" records. Cross- reference the System Events for Power Up events.
 - This also means that if a limit is "out," and it goes back in during the power off condition, no "into limit" record will be recorded.

- The "worst" value of the "into limit" record follows the above restrictions; it only represents the values since power up. Any values before the power up condition are lost.

Historical Log Record:

Byte	0	1	2	3	4	5	6	-	-	N
Value	timestamp						values . . .			

Size: 6+2 x N bytes (12+2 x N bytes), where N is the number of registers stored.

Data: The Historical Log Record data is 2 x N bytes, which contains snapshots of the values of the associated registers at the time the record was taken. Since the meter uses specific registers to log, with no knowledge of the data it contains, the Programmable Settings need to be used to interpret the data in the record. See Historical Logs Programmable Settings for details.

I/O Change Record:

I/O Change Log tables:

Byte	0	1	2	3	4	5	6	7	8	9	
Value	Timestamp					Card 1 Changes		Card 1 States		Card 2 Changes	Card 2 States

Card Change Flags:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 Change	Out 3 Change	Out 2 Change	Out 1 Change	In 4 Change	In 3 Change	In 2 Change	In 1 Change

Card Current States:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 State	Out 3 State	Out 2 State	Out 1 State	In 4 State	In 3 State	In 2 State	In 1 State

Size: 10 bytes (16 bytes)

Data: The states of the relay and digital inputs at the time of capture for both Option cards 1 and 2. If the option card does not support I/O Change Records (no card or not a Digital Option Card), the value will be 0.

NOTES:

- An I/O Change log record will be taken for each Relay and Digital Input that has been configured in the Programmable Settings to record when its state changes.
- When any one configured Relay or Digital Input changes, the values of all Relays and Digital Inputs are recorded, even if they are not so configured.

B.5.6: Examples**Log Retrieval Section:**

```

send: 01 03 75 40 00 08 - Meter designation
recv: 01 03 10 4D 65 74 72 65 44 65 73 69 6E 67 5F 20 20 20 20 00 00

send: :01 03 C7 57 00 10 - Historical Log 1 status block
recv: :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 00 06 08 17 51 08
        00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 03 79 17 00 40 - Historical Log 1 PS settings
recv: :01 03 80 13 01 00 01 23 75 23 76 23 77 1F 3F 1F 40 1F 41 1F
        42 1F 43 1F 44 06 0B 06 0C 06 0D 06 0E 17 75 17 76 17 77 18
        67 18 68 18 69 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 03 79 57 00 40 - ""
recv: :01 03 80 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 62 62 62 34 34 34 44
        44 62 62 62 62 62 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 03 75 35 00 01 - Energy PS settings
recv: :01 03 02 83 31 00 00

send: :01 03 11 93 00 01 - Connected Port ID
recv: :01 03 02 00 02 00 00

send: :01 03 C7 57 00 10 - Historical Log 1 status block
recv: :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 00 06 08 17 51 08
        00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

```
send: :01 03 C3 4F 00 01 - Log Retrieval header
recv: :01 03 02 FF FF 00 00

send: :01 10 C3 4F 00 04 08 02 80 05 01 00 00 00 00 - Engage the log
recv: :01 10 C3 4F 00 04

send: :01 03 C7 57 00 10 - Historical Log 1 status block
recv: :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 02 06 08 17 51 08
          00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 10 C3 51 00 02 04 00 00 00 00 - Set the retrieval index
recv: :01 10 C3 51 00 02

send: :01 03 C3 51 00 40 - Read first half of window
recv: :01 03 80 00 00 00 00 06 08 17 51 08 00 00 19 00 2F 27 0F 00
          00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 03
          E8 00 01 00 05 00 00 00 00 00 00 00 06 08 17 51 09 00 00 19 00
          2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00 06 08 17 51 0A
          00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 00 00 00 03 E8 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 03 C3 91 00 30 - Read second half of window
recv: :01 03 60 00 05 00 00 00 00 00 00 06 08 17 51 0B 00 00 19 00
          2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00 06 08 17 51 0C
          00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 00 00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00 00 00 00 00 00
          00

send: :01 03 C3 51 00 40 - Read first half of last window
recv: :01 03 80 00 00 05 19 06 08 18 4E 35 00 00 19 00 2F 27 0F 00
          00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 03
          E8 00 01 00 04 00 00 00 00 00 00 00 06 08 18 4E 36 00 00 19 00
          2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00 00 06 08 18 4E 37
          00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 00 00 00 00 03 E8 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

send: :01 03 C3 91 00 30 - Read second half of last window
recv: :01 03 60 00 05 00 00 00 00 00 00 06 08 18 4E 38 00 00 19 00
          2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00 00 06 08 18 4E 39
          00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
          00 00 00 00 00 00 00 03 E8 00 00 00 00 05 00 00 00 00 00 00 00 00 00 00 00
          00

send: :01 06 C3 4F 00 00 - Disengage the log
```

recv: :01 06 C3 4F 00 00

Sample Historical Log 1 Record:

Historical Log 1 Record and Programmable Settings

```
13|01|00 01|23 75|23 76|23 77|1F 3F 1F 40|1F 41
1F 42|1F 43 1F 44|06 0B 06 0C|06 0D 06 0E|17 75|
17 76|17 77|18 67|18 68|18 69|00 00 . . . .
62 62 62 34 34 34 44 44 62 62 62 62 62 . . .
```

These are the Item Values:	These are the Type and Size:	These are the Descriptions:
13		- # registers
01		- # sectors
01		- interval
23 75	6 2	- (SINT 2 byte) Volts A THD Maximum
23 76	6 2	- (SINT 2 byte) Volts B THD Maximum
23 77	6 2	- (SINT 2 byte) Volts C THD Maximum
1F 3F 1F 40	3 4	- (Float 4 byte) Volts A Minimum
1F 41 1F 42	3 4	- (Float 4 byte) Volts B Minimum
1F 43 1F 44	3 4	- (Float 4 byte) Volts C Minimum
06 0B 06 0C	4 4	- (Energy 4 byte) VARhr Negative Phase A
06 0D 06 0E	4 4	- (Energy 4 byte) VARhr Negative Phase B
17 75	6 2	- (SINT 2 byte) Volts A 1 st Harmonic Magnitude
17 76	6 2	- (SINT 2 byte) Volts A 2 nd Harmonic Magnitude
17 77	6 2	- (SINT 2 byte) Volts A 3 rd Harmonic Magnitude
18 67	6 2	- (SINT 2 byte) Ib 3 rd Harmonic Magnitude
18 68	6 2	- (SINT 2 byte) Ib 4 th Harmonic Magnitude
18 69	6 2	- (SINT 2 byte) Ib 5 th Harmonic Magnitude

Sample Record

```
06 08 17 51 08 00|00 19|00 2F|27 0F|00 00 00 00|00
00 00 00|00 00 00|00 00 00 00|00 00 00 00|03 E8|
00 01|00 05|00 00|00 00 00 . . .
```

11 08 17 51 08 00	- August 23, 2011 17:08:00
00 19	- 2.5%
00 2F	- 4.7%
27 0F	- 999.9% (indicates the value isn't valid)
00 00 00 00	- 0

00 00 00 00	- 0
00 00 00 00	- 0
00 00 00 00	- 0
00 00 00 00	- 0
03 E8	- 100.0% (Fundamental)
00 01	- 0.1%
00 05	- 0.5%
00 00	- 0.0%
00 00	- 0.0%
00 00	- 0.0%

B.6: Important Note Concerning the Shark ® 200 Meter's Modbus Map

In depicting Modbus Registers (Addresses), the Shark® 200 meter's Modbus map uses Holding Registers only.

B.6.1: Hex Representation

The representation shown in the table below is used by developers of Modbus drivers and libraries, SEL 2020/2030 programmers and Firmware Developers. The Shark ® meter's Modbus map also uses this representation.

Hex	Description
0008 - 000F	Meter Serial Number

B.6.2: Decimal Representation

The Shark ® meter's Modbus map defines Holding Registers as (4X) registers. Many popular SCADA and HMI packages and their Modbus drivers have user interfaces that require users to enter these Registers starting at 40001. So instead of entering two separate values, one for register type and one for the actual register, they have been combined into one number.

The Shark ® 200 meter's Modbus map uses a shorthand version to depict the decimal fields, i.e., not all of the digits required for entry into the SCADA package UI are shown. For example:

You need to display the meter's serial number in your SCADA application. The Shark ® 200 meter's Modbus map shows the following information for meter serial number:

Decimal	Description
9 - 16	Meter Serial Number

In order to retrieve the meter's serial number, enter 40009 into the SCADA UI as the starting register, and 8 as the number of registers.

- In order to work with SCADA and Driver packages that use the 40001 to 49999 method for requesting holding registers, take 40000 and add the value of the register (Address) in the decimal column of the Modbus Map. Then enter the number (e.g., 4009) into the UI as the starting register.
- For SCADA and Driver packages that use the 400001 to 465536 method for requesting holding registers take 400000 and add the value of the register (Address) in the decimal column of the Modbus Map. Then enter the number (e.g., 400009) into the UI as the starting register. The drivers for these packages strip off the leading four and subtract 1 from the remaining value. This final value is used as the starting register or register to be included when building the actual modbus message.

B.7: Modbus Register Map (MM-1 to MM-40)

The Shark® 200 meter's Modbus Register Map begins on the following page.

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Fixed Data Section							
Identification Block							
0000 - 0007	1 - 8	Meter Name	ASCII	16 char	none		read-only
0008 - 000F	9 - 16	Meter Serial Number	ASCII	16 char	none		8
0010 - 0010	17 - 17	Meter Type	UINT16	bit-mapped	-----st: -----vvv	t = transducer model (1=yes, 0=no), s = submeter model (1=yes, 0=no), vvv = V-switch; V1 = Standard 200, V2 = V1 plus logging, V3 = V2 plus THD, V4 = V3 plus relays, V5 = V4 plus waveform capture up to 64 samples/cycle and 3 Meg, V6 = V4 plus waveform capture up to 512 samples/cycle and 4 Meg	1
0011 - 0012	18 - 19	Firmware Version	ASCII	4 char	none		2
0013 - 0013	20 - 20	Map Version	UINT16	0 to 65535	none		1
0014 - 0014	21 - 21	Meter Configuration	UINT16	bit-mapped	-----ccc - -----fffff	ccc = CT denominator (1 or 5), fffff = calibration frequency (60 or 60)	1
0015 - 0015	22 - 22	ASIC Version	UINT16	0-65535	none		1
0016 - 0017	23 - 24	Boot Firmware Version	ASCII	4 char	none		2
0018 - 0018	25 - 25	Option Slot 1 Usage	UINT16	bit-mapped	same as register 10000 (0x270F).		1
0019 - 0019	26 - 26	Option Slot 2 Usage	UINT16	bit-mapped	same as register 11000 (0x2A77)		1
001A - 001D	27 - 30	Meter Type Name	ASCII	8 char	none		4
001E - 0026	31 - 39	Reserved			Reserved		9
0027 - 002E	40 - 47	Reserved			Reserved		8
002F - 0115	48 - 278	Reserved			Reserved		231
0116 - 0130	279 - 305	Integer Readings Block occupies these registers, see below				Reserved	194
0131 - 01F3	306 - 500	Reserved				Reserved	16
01F4 - 0203	501 - 516	Reserved					16

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg.
Readings Block (Integer values)							
Meter Data Section (Note 2)							
0116 - 0116	279 - 279	Volts A-N	UINT16	0 to 9999	volts	1. read-only 1. Use the settings from Programmable settings for scale and decimal point location. (see User Settings Flags) 2. Per phase power and PF have values only for WYE hookups and will be zero for all other hookups. 3. If the reading is 1000 that means that the value is out of range. Please adjust the programmable settings in that case. The display will also show '---' in case of over range.	1
0117 - 0117	280 - 280	Volts B-N	UINT16	0 to 9999	volts		1
0118 - 0118	281 - 281	Volts C-N	UINT16	0 to 9999	volts		1
0119 - 0119	282 - 282	Volts A-B	UINT16	0 to 9999	volts		1
011A - 011A	283 - 283	Volts B-C	UINT16	0 to 9999	volts		1
011B - 011B	284 - 284	Volts C-A	UINT16	0 to 9999	volts		1
011C - 011C	285 - 285	Amps A	UINT16	0 to 9999	amps		1
011D - 011D	286 - 286	Amps B	UINT16	0 to 9999	amps		1
011E - 011E	287 - 287	Amps C	UINT16	-9999 to +9999	amps		1
011F - 011F	288 - 288	Neutral Current	SINT16	-9999 to +9999	watts		1
0120 - 0120	289 - 289	Watts, 3-Ph total	SINT16	-9999 to +9999	VARs	1. Use the settings from Programmable settings for scale and decimal point location. (see User Settings Flags) 2. Per phase power and PF have values only for WYE hookups and will be zero for all other hookups. 3. If the reading is 1000 that means that the value is out of range. Please adjust the programmable settings in that case. The display will also show '---' in case of over range.	1
0121 - 0121	290 - 290	VARs, 3-Ph total	SINT16	-9999 to +9999	VARs		1
0122 - 0122	291 - 291	VAs, 3-Ph total	UINT16	0 to 9999	VAs		1
0123 - 0123	292 - 292	Power Factor, 3-Ph total	UINT16	1000 to +1000	none		1
0124 - 0124	293 - 293	Frequency	UINT16	0 to 9999	Hz		1
0125 - 0125	294 - 294	Watts, Phase A	SINT16	-9999 M to +9999	watts		1
0126 - 0126	295 - 295	Watts, Phase B	SINT16	-9999 M to +9999	watts		1
0127 - 0127	296 - 296	Watts, Phase C	SINT16	-9999 M to +9999	watts		1
0128 - 0128	297 - 297	VARs, Phase A	SINT16	-9999 M to +9999	VARs		1
0129 - 0129	298 - 298	VARs, Phase B	SINT16	-9999 M to +9999	VARs		1
012A - 012A	299 - 299	VARs, Phase C	SINT16	-9999 M to +9999	VARs		1
012B - 012B	300 - 300	VAs, Phase A	UINT16	0 to +9999	VAs	1. Use the settings from Programmable settings for scale and decimal point location. (see User Settings Flags) 2. Per phase power and PF have values only for WYE hookups and will be zero for all other hookups. 3. If the reading is 1000 that means that the value is out of range. Please adjust the programmable settings in that case. The display will also show '---' in case of over range.	1
012C - 012C	301 - 301	VAs, Phase B	UINT16	0 to +9999	VAs		1
012D - 012D	302 - 302	VAs, Phase C	UINT16	0 to +9999	VAs		1
012E - 012E	303 - 303	Power Factor, Phase A	SINT16	-1000 to +1000	none		1
012F - 012F	304 - 304	Power Factor, Phase B	SINT16	-1000 to +1000	none		1
0130 - 0130	305 - 305	Power Factor, Phase C	SINT16	-1000 to +1000	none		1
						Block Size:	27
Primary Readings Block							
03E7 - 03E8	1000 - 1001	Volts A-N	FLOAT	0 to 9999 M	volts	1. read-only 1. Use the settings from Programmable settings for scale and decimal point location. (see User Settings Flags) 2. Per phase power and PF have values only for WYE hookups and will be zero for all other hookups. 3. If the reading is 1000 that means that the value is out of range. Please adjust the programmable settings in that case. The display will also show '---' in case of over range.	2
03E9 - 03EA	1002 - 1003	Volts B-N	FLOAT	0 to 9999 M	volts		2
03EB - 03EC	1004 - 1005	Volts C-N	FLOAT	0 to 9999 M	volts		2
03ED - 03EE	1006 - 1007	Volts A-B	FLOAT	0 to 9999 M	volts		2
03EF - 03F0	1008 - 1009	Volts B-C	FLOAT	0 to 9999 M	volts		2
03F1 - 03F2	1010 - 1011	Volts C-A	FLOAT	0 to 9999 M	volts		2
03F3 - 03F4	1012 - 1013	Amps A	FLOAT	0 to 9999 M	amps		2
03F5 - 03F6	1014 - 1015	Amps B	FLOAT	0 to 9999 M	amps		2
03F7 - 03F8	1016 - 1017	Amps C	FLOAT	0 to 9999 M	amps		2
03F9 - 03FA	1018 - 1019	Watts, 3-Ph total	FLOAT	-9999 M to +9999 M	watts		2
03FB - 03FC	1020 - 1021	VARs, 3-Ph total	FLOAT	-9999 M to +9999 M	VARs		2
03FD - 03FE	1022 - 1023	VAs, 3-Ph total	FLOAT	-9999 M to +9999 M	VAs		2
03FF - 0400	1024 - 1025	Power Factor, 3-Ph total	FLOAT	-100 to +100	none		2
0401 - 0402	1026 - 1027	Frequency	FLOAT	0 to 65.00	Hz		2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
0403 - 0404	1028 - 1029	Neutral Current Watts, Phase A	FLOAT	0 to 9999 M	amps		2
0405 - 0406	1030 - 1031	Watts, Phase B	FLOAT	-99999 M to +99999 M	watts		2
0407 - 0408	1032 - 1033	Watts, Phase C	FLOAT	-99999 M to +99999 M	watts		2
0409 - 040A	1034 - 1035	VARs, Phase A	FLOAT	-99999 M to +99999 M	VARs		2
040B - 040C	1036 - 1037	VARs, Phase A	FLOAT	-99999 M to +99999 M	VARs		2
040D - 040E	1038 - 1039	VARs, Phase B	FLOAT	-99999 M to +99999 M	VARs		2
040F - 0410	1040 - 1041	VARs, Phase C	FLOAT	-99999 M to +99999 M	VARs		2
0411 - 0412	1042 - 1043	VAs, Phase A	FLOAT	99999 M to +99999 M	VAs	Per phase power and PF have values only for WYE hookup and will be zero for all other hookups.	2
0413 - 0414	1044 - 1045	VAs, Phase B	FLOAT	-99999 M to +99999 M	VAs		2
0415 - 0416	1046 - 1047	VAs, Phase C	FLOAT	-99999 M to +99999 M	VAs		2
0417 - 0418	1048 - 1049	Power Factor, Phase A	FLOAT	-1.00 to +1.00	none		2
0419 - 041A	1050 - 1051	Power Factor, Phase B	FLOAT	-1.00 to +1.00	none		2
041B - 041C	1052 - 1053	Power Factor, Phase C	FLOAT	-1.00 to +1.00	none		2
041D - 041E	1054 - 1055	Symmetrical Component Magnitude, 0 Seq	FLOAT	0 to 9999 M	volts		2
041F - 0420	1056 - 1057	Symmetrical Component Magnitude, + Seq	FLOAT	0 to 9999 M	volts	Voltage unbalance per IEC6104-30	2
0421 - 0422	1058 - 1059	Symmetrical Component Phases, 0 Seq	FLOAT	0 to 9999 M	volts		2
0423 - 0423	1060 - 1060	Symmetrical Component Phases, 0 Seq	SINT16	-18000 to +18000	0.1 degree	Values apply only to WYE hookups and will be zero for all other hookups.	1
0424 - 0424	1061 - 1061	Symmetrical Component Phases, + Seq	SINT16	-18000 to +18000	0.1 degree		1
0425 - 0425	1062 - 1062	Symmetrical Component Phases, + Seq	SINT16	-18000 to +18000	0.1 degree		1
0426 - 0426	1063 - 1063	Unbalance, 0 sequence component	UINT16	0 to 65535	0.01%		1
0427 - 0427	1064 - 1064	Unbalance, -sequence component	UINT16	0 to 65535	0.01%		1
0428 - 0428	1065 - 1065	Current Unbalance	UINT16	0 to 20000	0.01%		1
						Block Size:	66
Primary Energy Block							
05DB - 05DC	1500 - 1501	Whours, Received	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received & delivered always have opposite signs	2
05DD - 05DE	1502 - 1503	Wh-hours, Delivered	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received is positive for "view as load", delivered is positive for "view as generator"	2
05DF - 05EO	1504 - 1505	Wh-hours, Net	SINT32	-99999999 to 99999999	Wh per energy format		2
05E1 - 05E2	1506 - 1507	Wh-hours, Total	SINT32	0 to 99999999	Wh per energy format		2
05E3 - 05E4	1508 - 1509	VAR-hours, Positive	SINT32	0 to 99999999	VARh per energy format		2
05E5 - 05E6	1510 - 1511	VAR-hours, Negative	SINT32	0 to 99999999	VARh per energy format		2
05E7 - 05E8	1512 - 1513	VAR-hours, Net	SINT32	-99999999 to 99999999	VARh per energy format	resolution of digit before decimal point = units, kilo, or mega, per energy format	2
05E9 - 05EA	1514 - 1515	VAR-hours, Total	SINT32	0 to 99999999	VARh per energy format	* 5 to 8 digits	2
05EB - 05EC	1516 - 1517	VA-hours, Total	SINT32	0 to 99999999	Vah per energy format		2
05ED - 05EE	1518 - 1519	Wh-hours, Received, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05EF - 05F0	1520 - 1521	Wh-hours, Received, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F1 - 05F2	1522 - 1523	Wh-hours, Received, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F3 - 05F4	1524 - 1525	Wh-hours, Delivered, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F5 - 05F6	1526 - 1527	Wh-hours, Delivered, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F7 - 05F8	1528 - 1529	Wh-hours, Delivered, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
05F9 - 05FA	1530 - 1531	W-hours, Net, Phase A	SINT32	-99999999 to 99999999	Wh per energy format		2
05FB - 05FC	1532 - 1533	W-hours, Net, Phase B	SINT32	-99999999 to 99999999	Wh per energy format		2
05FD - 05FE	1534 - 1535	W-hours, Net, Phase C	SINT32	-99999999 to 99999999	Wh per energy format		2
0600 - 0601	1536 - 1537	W-hours, Total, Phase A	SINT32	0 to 99999999	Wh per energy format		2
0602 - 0603	1538 - 1539	W-hours, Total, Phase B	SINT32	0 to 99999999	Wh per energy format		2
0604 - 0605	1540 - 1541	W-hours, Total, Phase C	SINT32	0 to 99999999	Wh per energy format		2
0606 - 0607	1542 - 1543	VAR-hours, Positive, Phase A	SINT32	0 to 99999999	VARh per energy format		2
0608 - 0609	1544 - 1545	VAR-hours, Positive, Phase B	SINT32	0 to 99999999	VARh per energy format		2
060B - 060C	1546 - 1547	VAR-hours, Positive, Phase C	SINT32	0 to 99999999	VARh per energy format		2
060D - 060E	1548 - 1549	VAR-hours, Negative, Phase A	SINT32	0 to 99999999	VARh per energy format		2
060F - 0610	1550 - 1551	VAR-hours, Negative, Phase B	SINT32	0 to 99999999	VARh per energy format		2
0611 - 0612	1552 - 1553	VAR-hours, Negative, Phase C	SINT32	0 to 99999999	VARh per energy format		2
0613 - 0614	1554 - 1555	VAR-hours, Net, Phase A	SINT32	-99999999 to 99999999	VARh per energy format		2
0615 - 0616	1556 - 1557	VAR-hours, Net, Phase B	SINT32	-99999999 to 99999999	VARh per energy format		2
0617 - 0618	1558 - 1559	VAR-hours, Net, Phase C	SINT32	-99999999 to 99999999	VARh per energy format		2
0619 - 061A	1560 - 1561	VAR-hours, Total, Phase A	SINT32	0 to 99999999	VARh per energy format		2
061B - 061C	1562 - 1563	VAR-hours, Total, Phase B	SINT32	0 to 99999999	VARh per energy format		2
061D - 0620	1564 - 1565	VAR-hours, Total, Phase C	SINT32	0 to 99999999	VARh per energy format		2
061F - 0621	1566 - 1567	VA-hours, Phase A	SINT32	0 to 99999999	VAh per energy format		2
0620 - 0622	1568 - 1569	VA-hours, Phase B	SINT32	0 to 99999999	VAh per energy format		2
	1570 - 1571	VA-hours, Phase C	SINT32	0 to 99999999	VAh per energy format		2
						Block Size:	72
Primary Demand Block							
07CF - 07D0	2000 - 2001	Amps A, Average	FLOAT	0 to 9999 M	amps	read-only	2
07D1 - 07D2	2002 - 2003	Amps B, Average	FLOAT	0 to 9999 M	amps		2
07D3 - 07D4	2004 - 2005	Amps C, Average	FLOAT	0 to 9999 M	amps		2
07D5 - 07D6	2006 - 2007	Positive Watts, 3-Ph, Average	FLOAT	-9999 M to +9999 M	watts		2
07D7 - 07D8	2008 - 2009	Positive VARS, 3-Ph, Average	FLOAT	9999 M to +9999 M	VARS		2
07D9 - 07DA	2010 - 2011	Negative Watts, 3-Ph, Average	FLOAT	-9999 M to +9999 M	watts		2
07DB - 07DC	2012 - 2013	Negative VARS, 3-Ph, Average	FLOAT	-9999 M to +9999 M	VARS		2
07DD - 07DE	2014 - 2015	VAs, 3-Ph, Average	FLOAT	-9999 M to +9999 M	VAs		2
07DF - 07E0	2016 - 2017	Positive PF, 3-Ph, Average	FLOAT	-1.00 to +1.00	none		2
07E1 - 07E2	2018 - 2019	Negative PF, 3-Ph, Average	FLOAT	-1.00 to +1.00	none		2
07E3 - 07E4	2020 - 2021	Neutral Current, Average	FLOAT	0 to 999 M	amps		2
07E5 - 07E6	2022 - 2023	Positive Watts, Phase A, Average	FLOAT	-9999 M to +9999 M	watts		2
07E7 - 07E8	2024 - 2025	Positive Watts, Phase B, Average	FLOAT	-9999 M to +9999 M	watts		2
07E9 - 07EA	2026 - 2027	Positive Watts, Phase C, Average	FLOAT	-9999 M to +9999 M	watts		2
07EB - 07EC	2028 - 2029	Positive VARS, Phase A, Average	FLOAT	-9999 M to +9999 M	VARS		2
07ED - 07EE	2030 - 2031	Positive VARS, Phase B, Average	FLOAT	-9999 M to +9999 M	VARS		2
07EF - 07F0	2032 - 2033	Positive VARS, Phase C, Average	FLOAT	-9999 M to +9999 M	VARS		2
07F1 - 07F2	2034 - 2035	Negative Watts, Phase A, Average	FLOAT	-9999 M to +9999 M	watts		2
07F3 - 07F4	2036 - 2037	Negative Watts, Phase B, Average	FLOAT	-9999 M to +9999 M	watts		2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
07F5 - 07F6	2038 - 2039	Negative Watts, Phase C, Average	FLOAT	-9999 M to +9999 M	watts		2
07F7 - 07F8	2040 - 2041	Negative VArS, Phase A, Average	FLOAT	-9999 M to +9999 M	VArS		2
07F9 - 07FA	2042 - 2043	Negative VArS, Phase B, Average	FLOAT	-9999 M to +9999 M	VArS		2
07FB - 07FC	2044 - 2045	Negative VArS, Phase C, Average	FLOAT	-9999 M to +9999 M	VArS		2
07FD - 07FE	2046 - 2047	VAs, Phase A, Average	FLOAT	-9999 M to +9999 M	VAs		2
07FF - 0800	2048 - 2049	VAs, Phase B, Average	FLOAT	-9999 M to +9999 M	VAs		2
0801 - 0802	2050 - 2051	VAs, Phase C, Average	FLOAT	-9999 M to +9999 M	VAs		2
0803 - 0804	2052 - 2053	Positive PF, Phase A, Average	FLOAT	-1.00 to +1.00	none		2
0805 - 0806	2054 - 2055	Positive PF, Phase B, Average	FLOAT	-1.00 to +1.00	none		2
0807 - 0808	2056 - 2057	Positive PF, Phase C, Average	FLOAT	-1.00 to +1.00	none		2
0809 - 080A	2058 - 2059	Negative PF, Phase A, Average	FLOAT	-1.00 to +1.00	none		2
080B - 080C	2060 - 2061	Negative PF, Phase B, Average	FLOAT	-1.00 to +1.00	none		2
080D - 080E	2062 - 2063	Negative PF, Phase C, Average	FLOAT	-1.00 to +1.00	none		2
						Block Size:	64
Uncompensated Readings Block							
0BB7 - 0BB8	30000 - 30011	Watts, 3-Ph total	FLOAT	-9999 M to +9999 M	watts	read-only	
0BB9 - 0BBA	30022 - 30033	VArS, 3-Ph total	FLOAT	-9999 M to +9999 M	VArS		
0BBB - 0BBC	30044 - 30055	VAs, 3-Ph total	FLOAT	-9999 M to +9999 M	VAs		
0BBD - 0BBE	30066 - 30077	Power Factor, 3-Ph total	FLOAT	-1.00 to +1.00	none		
0BBF - 0BC0	30088 - 30099	Watts, Phase A	FLOAT	-9999 M to +9999 M	watts		
0BC1 - 0BC2	30101 - 30111	Watts, Phase B	FLOAT	-9999 M to +9999 M	watts		
0BC3 - 0BC4	30122 - 30133	Watts, Phase C	FLOAT	-9999 M to +9999 M	watts		
0BC5 - 0BC6	30144 - 30155	VArS, Phase A	FLOAT	-9999 M to +9999 M	VArS		
0BC7 - 0BC8	30166 - 30177	VArS, Phase B	FLOAT	-9999 M to +9999 M	VArS		
0BC9 - 0BCA	30188 - 30199	VArS, Phase C	FLOAT	-9999 M to +9999 M	VArS		
0BCB - 0BCC	30200 - 30211	VAs, Phase A	FLOAT	-9999 M to +9999 M	VAs		
0BCD - 0BCE	30222 - 30233	VAs, Phase B	FLOAT	-9999 M to +9999 M	VAs		
0BCF - 0BD0	30244 - 30255	VAs, Phase C	FLOAT	-9999 M to +9999 M	VAs		
0BD1 - 0BD2	30266 - 30277	Power Factor, Phase A	FLOAT	-1.00 to +1.00	none		
0BD3 - 0BD4	30288 - 30299	Power Factor, Phase B	FLOAT	-1.00 to +1.00	none		
0BD5 - 0BD6	30300 - 30311	Power Factor, Phase C	FLOAT	-1.00 to +1.00	none		

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
0BD7 - 0BD8	3032 - 3033	W-hours, Received	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received & delivered always have opposite signs	2
0BD9 - 0BDA	3034 - 3035	W-hours, Delivered	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received is positive for "view as load", delivered is positive for "view as generator"	2
0BDB - 0BDC	3036 - 3037	W-hours, Net	SINT32	-99999999 to 99999999	Wh per energy format	* 5 to 8 digits	2
0BDD - 0BDE	3038 - 3039	W-hours, Total	SINT32	0 to 99999999	Wh per energy format	* decimal point implied, per energy format	2
0BDF - 0BE0	3040 - 3041	VAR-hours, Positive	SINT32	0 to 99999999	VARh per energy format	* resolution of digit before decimal point = units, kilo, or mega, per energy format	2
0BE1 - 0BE2	3042 - 3043	VAR-hours, Negative	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0BE3 - 0BE4	3044 - 3045	VAR-hours, Net	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0BE5 - 0BE6	3046 - 3047	VAR-hours, Total	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0BE9 - 0BEA	3050 - 3051	VA-hours, Received, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BEB - 0BEC	3052 - 3053	VA-hours, Received, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BED - 0BEE	3054 - 3055	VA-hours, Received, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BEF - 0BF0	3056 - 3057	VA-hours, Delivered, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BF1 - 0BF2	3058 - 3059	VA-hours, Delivered, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BF3 - 0BF4	3060 - 3061	VA-hours, Delivered, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* see note 10	2
0BF5 - 0BF6	3062 - 3063	VA-hours, Net, Phase A	SINT32	-99999999 to 99999999	Wh per energy format	* see note 10	2
0BF7 - 0BF8	3064 - 3065	VA-hours, Net, Phase B	SINT32	-99999999 to 99999999	Wh per energy format	* see note 10	2
0BF9 - 0BF A	3066 - 3067	VA-hours, Net, Phase C	SINT32	-99999999 to 99999999	Wh per energy format	* see note 10	2
0BFB - 0BFC	3068 - 3069	VA-hours, Total, Phase A	SINT32	0 to 99999999	Wh per energy format	* see note 10	2
0BFD - 0BFE	3070 - 3071	VA-hours, Total, Phase B	SINT32	0 to 99999999	Wh per energy format	* see note 10	2
0BFF - 0C00	3072 - 3073	VA-hours, Total, Phase C	SINT32	0 to 99999999	Wh per energy format	* see note 10	2
0C01 - 0C02	3074 - 3075	VAR-hours, Positive, Phase A	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C03 - 0C04	3076 - 3077	VAR-hours, Positive, Phase B	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C05 - 0C06	3078 - 3079	VAR-hours, Positive, Phase C	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C07 - 0C08	3080 - 3081	VAR-hours, Negative, Phase A	SINT32	0 to -99999999	VARh per energy format	* see note 10	2
0C09 - 0C0A	3082 - 3083	VAR-hours, Negative, Phase B	SINT32	0 to -99999999	VARh per energy format	* see note 10	2
0C0B - 0C0C	3084 - 3085	VAR-hours, Negative, Phase C	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0C0D - 0C0E	3086 - 3087	VAR-hours, Net, Phase A	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0C0F - 0C10	3088 - 3089	VAR-hours, Net, Phase B	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0C11 - 0C12	3090 - 3091	VAR-hours, Net, Phase C	SINT32	-99999999 to 99999999	VARh per energy format	* see note 10	2
0C13 - 0C14	3092 - 3093	VAR-hours, Total, Phase A	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C15 - 0C16	3094 - 3095	VAR-hours, Total, Phase B	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C17 - 0C18	3096 - 3097	VAR-hours, Total, Phase C	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
0C19 - 0C1A	3098 - 3099	VA-hours, Phase A	SINT32	0 to 99999999	VAh per energy format	* see note 10	2
0C1B - 0C1C	3100 - 3101	VA-hours, Phase B	SINT32	0 to 99999999	VAh per energy format	* see note 10	2
0C1D - 0C1E	3102 - 3103	VA-hours, Phase C	SINT32	0 to 99999999	VAh per energy format	* see note 10	2
						Block Size:	104

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Modbus Address Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Phase Angle Block							
- 1003	4100 - 4100	Phase A Current	SINT16	-1800 to +1800	0.1 degree	read-only	1
- 1004	4101 - 4101	Phase B Current	SINT16	-1800 to +1800	0.1 degree		1
- 1005	4102 - 4102	Phase C Current	SINT16	-1800 to +1800	0.1 degree		1
- 1006	4103 - 4103	Angle, Volts A-B	SINT16	-1800 to +1800	0.1 degree		1
- 1007	4104 - 4104	Angle, Volts B-C	SINT16	-1800 to +1800	0.1 degree		1
- 1008	4105 - 4105	Angle, Volts C-A	SINT16	-1800 to +1800	0.1 degree		1
						Block Size: 6	
Status Block							
- 1193	4500 - 4500	Port ID	UINT16	1 to 4	none	Identifies which Shark COM port a master is connected to; 1 for COM1, 2 for COM2, etc.	1
- 1194	4501 - 4501	Meter Status	UINT16	bit-mapped	mmmpcc-- tfffeccc		3
- 1195	4502 - 4502	Limits Status	UINT16	bit-mapped	87654321 87654321	high byte is setup 1, 0=in, 1=out low byte is setup 2, 0=in, 1=out see notes 11, 12, 17	1
- 1196	4503 - 4504	Time Since Reset	UINT32	0 to 4294967294	4 msec	wraps around after max count	2
- 1198	4505 - 4507	Meter On Time	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
- 119B	4508 - 4510	Current Date and Time	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
- 119E	4511 - 4511	Click Sync Status	UINT16	bit-mapped	mmmo0 oppe 0000 000s	mmmo0Oppe = configuration per programmable settings (see register 30011, 0x753A) s = status: 1=working properly, 0=not working	1
- 119F	4512 - 4512	Current Day of Week	UINT16	1 to 7	1 day	1=Sun, 2=Mon, etc.	1
						Block Size: 13	
THD Block (Note 13)							
- 176F	6000 - 6000	Volts A-N, %THD	UINT16	0 to 10000	0.01%	read-only	1
- 1770	6001 - 6001	Volts B-N, %THD	UINT16	0 to 10000	0.01%		1
- 1771	6002 - 6002	Volts C-N, %THD	UINT16	0 to 10000	0.01%		1
- 1772	6003 - 6003	Amps A, %THD	UINT16	0 to 10000	0.01%		1
- 1773	6004 - 6004	Amps B, %THD	UINT16	0 to 10000	0.01%		1
- 1774	6005 - 6005	Amps C, %THD	UINT16	0 to 10000	0.01%		1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
1775 - 179C	6006 - 6045	Phase A Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%	In each group of 40 registers, the first register represents the fundamental frequency or first harmonic, the second represents the second harmonic, and so on up to the 40th register which represents the 40th harmonic.	40
179D - 17EC	6046 - 6085	Phase A Current harmonic magnitudes	SINT16	-18000 to +18000	0.1 degree		40
17C5 - 17ED	6086 - 6125	Phase A Current harmonic phases	UINT16	0 to 10000	0.01%		40
17E1 - 1814	6126 - 6165	Phase A Current harmonic phases	SINT16	-18000 to +18000	0.1 degree		40
1815 - 183C	6166 - 6205	Phase B Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%	Harmonic magnitudes are given as % of the fundamental magnitude. Thus the first register in each group of 40 will typically be 9899. A reading of 10000 indicates invalid.	40
183D - 1864	6206 - 6245	Phase B Voltage harmonic magnitudes	SINT16	-18000 to +18000	0.1 degree		40
1865 - 188C	6246 - 6285	Phase B Current harmonic magnitudes	UINT16	0 to 10000	0.01%		40
188D - 18B4	6286 - 6325	Phase B Current harmonic magnitudes	SINT16	-18000 to +18000	0.1 degree		40
18B5 - 18DC	6326 - 6365	Phase C Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%		40
18DD - 1904	6366 - 6405	Phase C Voltage harmonic magnitudes	SINT16	-18000 to +18000	0.1 degree		40
1905 - 192C	6406 - 6445	Phase C Current harmonic magnitudes	UINT16	0 to 10000	0.01%		40
192D - 1954	6446 - 6485	Phase C Current harmonic phases	SINT16	-18000 to +18000	0.1 degree		40
1955 - 1956	6486 - 6486	Wave Scope scale factor for channel Va	UINT16	0 to 32767		Convert individual samples to volts or amps:	1
1956 - 1957	6487 - 6487	Wave Scope scale factors for channels Vb and Ib	UINT16	0 to 32767		V or A = (sample * scale factor) / 1,000,000	2
1959 - 195A	6490 - 6491	Wave Scope scale factors for channels Vc and Ic	UINT16	0 to 32767			2
196B - 199A	6492 - 6559	Wave Scope samples for channel Va	SINT16	-32768 to +32767		Samples update in conjunction with THD and harmonics; samples not available (all zeroes) if THD not available.	64
199B - 199D	6556 - 6619	Wave Scope samples for channel Vb	SINT16	-32768 to +32767			64
199D - 1A1A	6620 - 6683	Wave Scope samples for channel Vb	SINT16	-32768 to +32767			64
1A1B - 1A5A	6684 - 6747	Wave Scope samples for channel Ib	SINT16	-32768 to +32767			64
1A5B - 1A9A	6748 - 6811	Wave Scope samples for channel Vc	SINT16	-32768 to +32767			64
1A9B - 1A9A	6812 - 6875	Wave Scope samples for channel Ic	SINT16	-32768 to +32767			64
Short term Primary Minimum Block						Block Size: 876	
1F27 - 1F28	7976 - 7977	Volts A-N, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts	read-only	2
1F29 - 1F2A	7978 - 7979	Volts B-N, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts		2
1F2B - 1F2C	7980 - 7981	Volts C-N, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts		2
1F2D - 1F2E	7982 - 7983	Volts A-B, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts	Minimum instantaneous value measured during the demand interval before the one most recently completed.	2
1F2F - 1F30	7984 - 7985	Volts B-C, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts		2
1F31 - 1F32	7986 - 7987	Volts C-A, previous Demand Interval Short Term	FLOAT	0 to 9999 M	volts		2
1F33 - 1F34	7988 - 7989	Volts A-N, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F35 - 1F36	7990 - 7991	Volts B-N, Short Term Minimum	FLOAT	0 to 9999 M	volts	Minimum instantaneous value measured during the most recently completed demand interval.	2
1F37 - 1F38	7992 - 7993	Volts C-N, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F39 - 1F3A	7994 - 7995	Volts A-B, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F3B - 1F3C	7996 - 7997	Volts B-C, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F3D - 1F3E	7998 - 7999	Volts C-A, Short Term Minimum	FLOAT	0 to 9999 M	volts	Block Size:	24

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Primary Minimum Block							
1F5F - 1FA0	8000 - 8001	Volts A-N, Minimum	FLOAT	0 to 9999 M	volts		read-only
1F42 - 1F43	8002 - 8003	Volts B-N, Minimum	FLOAT	0 to 9999 M	volts		2
1F44 - 1F45	8004 - 8005	Volts C-N, Minimum	FLOAT	0 to 9999 M	volts		2
1F46 - 1F47	8006 - 8007	Volts A-B, Minimum	FLOAT	0 to 9999 M	volts		2
1F48 - 1F4A	8008 - 8009	Volts B-C, Minimum	FLOAT	0 to 9999 M	volts		2
1F4B - 1F4C	8010 - 8011	Volts C-A, Minimum	FLOAT	0 to 9999 M	volts		2
1F4D - 1F4E	8012 - 8013	Amps A, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F50 - 1F51	8014 - 8015	Amps B, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F52 - 1F53	8016 - 8017	Amps C, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F54 - 1F55	8018 - 8019	Positive Watts, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	watts		2
1F56 - 1F57	8020 - 8021	Positive VARs, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	VARs		2
1F58 - 1F59	8022 - 8023	Negative Watts, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	watts		2
1F5A - 1F5B	8024 - 8025	Negative VARs, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	VARs		2
1F5C - 1F5D	8026 - 8027	VAs, 3-Ph, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F5E - 1F5F	8028 - 8029	Positive Power Factor, 3-Ph, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F60 - 1F61	8030 - 8031	Negative Power Factor, 3-Ph, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F62 - 1F63	8032 - 8033	Frequency, Minimum	FLOAT	0 to 65.00	Hz		2
1F64 - 1F65	8034 - 8035	Neutral Current, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F66 - 1F67	8036 - 8037	Positive Watts, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F68 - 1F69	8038 - 8039	Positive Watts, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F6A - 1F6B	8040 - 8041	Positive Watts, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F6C - 1F6D	8042 - 8043	Positive VARs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6E - 1F6F	8044 - 8045	Positive VARs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6G - 1F6H	8046 - 8047	Positive VARs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6I - 1F6J	8048 - 8049	Negative Watts, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F6K - 1F6L	8050 - 8051	Negative Watts, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F6M - 1F6N	8052 - 8053	Negative Watts, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F6O - 1F6P	8054 - 8055	Negative VARs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6Q - 1F6R	8056 - 8057	Negative VARs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6S - 1F6T	8058 - 8059	Negative VARs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6U - 1F6V	8060 - 8061	VAs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F6W - 1F6X	8062 - 8063	VAs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F6Y - 1F6Z	8064 - 8065	VAs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F61 - 1F62	8066 - 8067	Positive PF, Phase A, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F63 - 1F64	8068 - 8069	Positive PF, Phase B, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F65 - 1F66	8070 - 8071	Positive PF, Phase C, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F67 - 1F68	8072 - 8073	Negative PF, Phase A, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F69 - 1F6A	8074 - 8075	Negative PF, Phase B, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F6B - 1F6C	8076 - 8077	Negative PF, Phase C, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
1F8D - 1F8E	8078 - 8079	Volts A-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F8F - 1F90	8079 - 8080	Volts B-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F91 - 1F92	8081 - 8082	Volts C-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F93 - 1F94	8083 - 8084	Amps A, %THD, Minimum	UINT16	0 to 9999	0.01%		1
		Amps B, %THD, Minimum	UINT16	0 to 9999	0.01%		1
		Amps C, %THD, Minimum	UINT16	0 to 9999	0.01%		1
		Symmetrical Component Magnitude, 0 Seq, Minimum	FLOAT	0 to 9999 M	volts		2
1F95 - 1F96	8086 - 8087	Symmetrical Component Magnitude, + Seq, Minimum	FLOAT	0 to 9999 M	volts		2
1F97 - 1F98	8088 - 8089	Symmetrical Component Magnitude, - Seq, Minimum	FLOAT	0 to 9999 M	volts		2
1F99 - 1F9A	8090 - 8091	Symmetrical Component Phase, 0 Seq, Minimum	SINT16	-18000 to +18000	0.1 degree		1
1F9B - 1F9C	8092 - 8092	Symmetrical Component Phase, + Seq, Minimum	SINT16	-18000 to +18000	0.1 degree		1
1F9D - 1F9E	8094 - 8095	Symmetrical Component Phase, - Seq, Minimum	SINT16	-18000 to +18000	0.1 degree		1
		Unbalance, 0 sequence, Minimum	UINT16	0 to 65535	0.01%		1
		Unbalance, -sequence, Minimum	UINT16	0 to 65535	0.01%		1
		Current Unbalance, Minimum	UINT16	0 to 20000	0.01%		1
					Block Size:	96	
Primary Minimum Timestamp Block							
20CF - 20D1	8400 - 8402	Volts A-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20D2 - 20D4	8403 - 8405	Volts B-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20D5 - 20D7	8406 - 8408	Volts C-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20D8 - 20D9	8409 - 8411	Volts A-B, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20DB - 20DD	8412 - 8414	Volts B-C, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20DE - 20E0	8415 - 8417	Volts C-A, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20E1 - 20E3	8418 - 8420	Amps A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20E4 - 20E6	8421 - 8423	Amps B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20E7 - 20E9	8424 - 8426	Amps C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20EA - 20EC	8427 - 8429	Positive Watts, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20ED - 20EF	8430 - 8432	Positive VARS, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20F0 - 20F2	8433 - 8435	Negative Watts, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20F3 - 20F5	8436 - 8438	Negative VARS, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20F6 - 20F8	8439 - 8441	VAs, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20F9 - 20FB	8442 - 8444	Positive Power Factor, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20FC - 20FE	8445 - 8447	Negative Power Factor, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
20FF - 2101	8448 - 8450	Frequency, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
2102 - 2104	8451 - 8453	Neutral Current, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2100	1sec		3
2105 - 2107	8454 - 8456	Positive Watts, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
2108 - 210A	8457 - 8459	Positive Watts, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
210B - 210D	8460 - 8462	Positive Watts, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3
210E - 2110	8463 - 8465	Positive VARS, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1sec		3

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
2111 - 2113	8466 - 8468	Positive VARs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2114 - 2116	8469 - 8471	Positive VARs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2117 - 2119	8472 - 8474	Negative VARs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
211A - 211C	8475 - 8477	Negative VARs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
211D - 211F	8478 - 8480	Negative VARs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2120 - 2122	8481 - 8483	Negative VARs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2123 - 2125	8484 - 8486	Negative VARs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2126 - 2128	8487 - 8489	Negative VARs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2129 - 212B	8490 - 8492	VAs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
212C - 212E	8493 - 8495	VAs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
212F - 2131	8496 - 8498	VAs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2132 - 2134	8499 - 8501	Positive PF, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2135 - 2137	8502 - 8504	Positive PF, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2138 - 213A	8505 - 8507	Positive PF, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
213B - 213D	8508 - 8510	Negative PF, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
213E - 2140	8511 - 8513	Negative PF, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2141 - 2143	8514 - 8516	Negative PF, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2144 - 2146	8517 - 8519	Volts A-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2147 - 2149	8520 - 8522	Volts B-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
214A - 214C	8523 - 8525	Volts C-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
214D - 214F	8526 - 8528	Amps A, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2150 - 2152	8529 - 8531	Amps B, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2153 - 2155	8532 - 8534	Amps C, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2156 - 2158	8535 - 8537	Symmetrical Comp Magnitude, 0 Seq, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2159 - 215B	8538 - 8540	Symmetrical Comp Magnitude, + Seq, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2165 - 216E	8541 - 8543	Symmetrical Comp Magnitude, - Seq, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2168 - 2170	8553 - 8555	Unbalance, 0 Seq, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2171 - 2173	8556 - 8558	Unbalance, + Seq, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2174 - 2176	8559 - 8561	Current Unbalance, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
						Block Size:	162

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Short term Primary Maximum Block							
230F - 2310	8976 - 8977	Volts A-N, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts		read-only
2311 - 2312	8978 - 8979	Volts B-N, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2313 - 2314	8980 - 8981	Volts C-N, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2315 - 2316	8982 - 8983	Volts A-B, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts	Maximum instantaneous value measured during the demand interval before the one most recently completed.	
2317 - 2318	8984 - 8985	Volts B-C, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2319 - 231A	8986 - 8987	Volts C-A, previous Demand Interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
231B - 231C	8988 - 8989	Volts A-N, Maximum	FLOAT	0 to 9999 M	volts		
231D - 231E	8990 - 8991	Volts B-N, Maximum	FLOAT	0 to 9999 M	volts		
232F - 2320	8992 - 8993	Volts C-N, Maximum	FLOAT	0 to 9999 M	volts	Maximum instantaneous value measured during the most recently completed demand interval.	2
2321 - 2322	8994 - 8995	Volts A-B, Maximum	FLOAT	0 to 9999 M	volts		2
2323 - 2324	8996 - 8997	Volts B-C, Maximum	FLOAT	0 to 9999 M	volts		2
2325 - 2326	8998 - 8999	Volts C-A, Maximum	FLOAT	0 to 9999 M	volts		2
Primary Maximum Block							
2327 - 2328	9000 - 9001	Volts A-N, Maximum	FLOAT	0 to 9999 M	volts		read-only
2329 - 232A	9002 - 9003	Volts B-N, Maximum	FLOAT	0 to 9999 M	volts		2
232B - 232C	9004 - 9005	Volts C-N, Maximum	FLOAT	0 to 9999 M	volts		2
232D - 232E	9006 - 9007	Volts A-B, Maximum	FLOAT	0 to 9999 M	volts		2
232F - 232G	9008 - 9009	Volts B-C, Maximum	FLOAT	0 to 9999 M	volts		2
2331 - 2332	9010 - 9011	Volts C-A, Maximum	FLOAT	0 to 9999 M	volts		2
2333 - 2334	9012 - 9013	Amps A, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2335 - 2336	9014 - 9015	Amps B, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2337 - 2338	9016 - 9017	Amps C, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2339 - 233A	9018 - 9019	Positive Watts, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	watts		2
233B - 233C	9020 - 9021	Positive VARs, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	VARs		2
233D - 233E	9022 - 9023	Negative Watts, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	watts		2
233F - 2340	9024 - 9025	Negative VARs, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	VARs		2
2341 - 2342	9026 - 9027	VAs 3-Ph, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2343 - 2344	9028 - 9029	Positive Power Factor, 3-Ph, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2345 - 2346	9030 - 9031	Negative Power Factor, 3-Ph, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2347 - 2348	9032 - 9033	Frequency, Maximum	FLOAT	0 to 65.00	Hz		2
2349 - 234A	9034 - 9035	Neutral Current, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
234B - 234C	9036 - 9037	Positive Watts, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
234D - 234E	9038 - 9039	Positive Watts, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
234F - 2350	9040 - 9041	Positive Watts, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
2351 - 2352	9042 - 9043	Positive VARs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2353 - 2354	9044 - 9045	Positive VARs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2355 - 2356	9046 - 9047	Positive VARs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
2357 - 2358	9048 - 9049	Negative Watts, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
2359 - 235A	9050 - 9051	Negative Watts, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
235B - 235C	9052 - 9053	Negative Watts, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
235D - 235E	9054 - 9055	Negative VARs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
235F - 2360	9056 - 9057	Negative VARs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2361 - 2362	9058 - 9059	Negative VARs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2363 - 2364	9060 - 9061	VAs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2365 - 2366	9062 - 9063	VAs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2367 - 2368	9064 - 9065	VAs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2369 - 236A	9066 - 9067	Positive PF, Phase A, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236B - 236C	9068 - 9069	Positive PF, Phase B, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236D - 236E	9070 - 9071	Positive PF, Phase C, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236F - 2370	9072 - 9073	Negative PF, Phase A, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2371 - 2372	9074 - 9075	Negative PF, Phase B, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2373 - 2374	9076 - 9077	Negative PF, Phase C, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2375 - 2376	9078 - 9079	Volts A-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2376 - 2377	9079 - 9079	Volts B-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2377 - 2378	9080 - 9080	Volts C-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2378 - 2379	9081 - 9081	Amps A, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2379 - 237A	9082 - 9082	Amps B, %THD, Maximum	UINT16	0 to 9999	0.01%		1
237A - 237B	9083 - 9083	Amps C, %THD, Maximum	UINT16	0 to 9999	0.01%		1
237B - 237D	9084 - 9086	Symmetrical Component Magnitude, 0 Seq, Maximum	FLOAT	0 to 9999 M	volts		2
237D - 237E	9086 - 9087	Symmetrical Component Magnitude, + Seq, Maximum	FLOAT	0 to 9999 M	volts		2
237F - 2380	9088 - 9089	Symmetrical Component Magnitude, - Seq, Maximum	FLOAT	0 to 9999 M	volts		2
2381 - 2382	9090 - 9090	Symmetrical Component Phase, 0 Seq, Maximum	SINT16	-18000 to +18000	0.1 degree		1
2382 - 2383	9091 - 9091	Symmetrical Component Phase, + Seq, Maximum	SINT16	-18000 to +18000	0.1 degree		1
2383 - 2384	9092 - 9092	Symmetrical Component Phase, - Seq, Maximum	SINT16	-18000 to +18000	0.1 degree		1
2384 - 2385	9093 - 9093	Unbalance, 0 Seq, Maximum	UINT16	0 to 65535	0.01%		1
2385 - 2386	9094 - 9095	Unbalance, + Seq, Maximum	UINT16	0 to 65535	0.01%		1
		Current Unbalance, Maximum	UINT16	0 to 20000	0.01%		1
					Block Size:	96	

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Primary Maximum Timestamp Block							
24B7 - 24B9	9400 - 9402	Volts A-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		read-only
24BA - 24BC	9403 - 9405	Volts B-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24BD - 24BF	9406 - 9408	Volts C-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C0 - 24C2	9409 - 9411	Volts A-B, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C3 - 24C5	9412 - 9414	Volts B-C, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C6 - 24C8	9415 - 9417	Volts C-A, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C9 - 24CB	9418 - 9420	Amps A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24CC - 24CE	9421 - 9423	Amps B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24CF - 24D1	9424 - 9426	Amps C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D2 - 24D4	9427 - 9429	Positive Watts, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D5 - 24D7	9430 - 9432	Positive VARs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D8 - 24DA	9433 - 9435	Negative Watts, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24DB - 24DD	9436 - 9438	Negative VARs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24DE - 24EO	9439 - 9441	VAs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E1 - 24E3	9442 - 9444	Positive Power Factor, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E4 - 24E6	9445 - 9447	Negative Power Factor, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E7 - 24EB	9448 - 9450	Frequency, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24EA - 24EC	9451 - 9453	Neutral Current, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24ED - 24EF	9454 - 9456	Positive Watts, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F0 - 24F2	9457 - 9459	Positive Watts, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F3 - 24F5	9460 - 9462	Positive Watts, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F6 - 24F8	9463 - 9465	Positive VARs, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F9 - 24FB	9466 - 9468	Positive VARs, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24FC - 24FE	9469 - 9471	Positive VARs, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24FF - 2501	9472 - 9474	Negative Watts, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2502 - 2504	9475 - 9477	Negative Watts, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2505 - 2507	9478 - 9480	Negative Watts, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2508 - 250A	9481 - 9483	Negative VARS, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
250B - 250D	9484 - 9486	Negative VARS, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
250E - 2510	9487 - 9489	Negative VARS, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2511 - 2513	9490 - 9492	VAs, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2514 - 2516	9493 - 9495	VAs, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2517 - 2519	9496 - 9498	VAs, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
251A - 251C	9499 - 9501	Positive PF, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
251D - 251F	9502 - 9504	Positive PF, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2520 - 2522	9505 - 9507	Positive PF, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2523 - 2525	9508 - 9510	Negative PF, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2526 - 2528	9511 - 9513	Negative PF, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2529 - 252B	9514 - 9516	Negative PF, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
252C - 252E	9517 - 9519	Volts A-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
252F - 2531	9520 - 9522	Volts B-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2532 - 2534	9523 - 9525	Volts C-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2535 - 2537	9526 - 9528	Amps A, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2538 - 253A	9529 - 9531	Amps B, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
253B - 253D	9532 - 9534	Amps C, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
253E - 2540	9535 - 9537	Symmetrical Comp Magnitude, 0 Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2541 - 2543	9538 - 9540	Symmetrical Comp Magnitude, + Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2544 - 2546	9541 - 9543	Symmetrical Comp Magnitude, - Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2547 - 2549	9544 - 9546	Symmetrical Comp Phase, 0 Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
254A - 254C	9547 - 9549	Symmetrical Comp Phase, + Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
254D - 254F	9550 - 9552	Symmetrical Comp Phase, - Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2550 - 2552	9553 - 9556	Unbalance_0, Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2553 - 2555	9556 - 9558	Unbalance_-Seq, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2556 - 2558	9559 - 9561	Current Unbalance, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
						Block Size:	159
Option Card 1 Section							
Card Identification and Configuration Block (Note 14)							
270F - 270F	10000 - 10000	Class ID and card status	UINT16 bit-mapped	untry-----cccttt	Flags active if bit is set u=unsupported card; n=card need configuration; d=card is using default configuration; v=communication with card is ok	1	
					Field: ccce=class of installed card.		
					Field: lttt=type of card. See note 22.		
2710 - 2710	10001 - 10001	Reserved			Received	1	
2711 - 2718	10002 - 10009	Card name	ASCII	16 char	none	8	
2719 - 2720	10010 - 10017	Serial number	ASCII	16 char	none	8	
2721 - 2722	10018 - 10019	Version	ASCII	4 char	none	2	
					Version in ASCII of the hardware of the installed card.		

Card Identification and Configuration Block (Note 14)

270F - 270F	10000 - 10000	Class ID and card status	UINT16 bit-mapped	untry-----cccttt	Flags active if bit is set u=unsupported card; n=card need configuration; d=card is using default configuration; v=communication with card is ok	1	
					Field: ccce=class of installed card.		
					Field: lttt=type of card. See note 22.		
2710 - 2710	10001 - 10001	Reserved			Received	1	
2711 - 2718	10002 - 10009	Card name	ASCII	16 char	none	8	
2719 - 2720	10010 - 10017	Serial number	ASCII	16 char	none	8	
2721 - 2722	10018 - 10019	Version	ASCII	4 char	none	2	
					Version in ASCII of the hardware of the installed card.		

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
2723 - 2746	10020 - 10055	Reserved	ASCII	4 char	none	Reserved	36
2747 - 2748	10056 - 10057	Firmware Version	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2749 - 274A	10058 - 10059	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
274B - 274E	10060 - 10063	Reserved				Reserved	4
Current Communication Settings for Option Card 1							
274F - 274F	10064 - 10064	Current speed and format	UINT16	bit-mapped	-abcdef -- fghijk:m	Bps: a=57600; b=38400; c=19200; d=14400; e=9600 Stop bits: f: cleared 1 stop bit, set 2 stop bits Parity: g=even; h=odd; i:none Data bits: j=8; k=7; l=6; m=5	Read-only
2750 - 2750	10065 - 10065	Reserved	UINT16	bit-mapped	-----	Reserved	1
2751 - 2751	10066 - 10066	Current protocol	UINT16	bit-mapped	-----	pop-Protocol 100=DNP3; 010=Ascii Modbus; 001=Rtu Modbus	1
2752 - 2752	10067 - 10067	Current reply delay	UINT16	0 to 65535	milliseconds	Delay to reply to a Modbus transaction after receiving it.	1
2753 - 2756	10068 - 10071	Reserved				Reserved	4
Data and Control Blocks for Option Card 1							
2757 - 2790	10072 - 10129	Data and Control Block for Option Card 1. Meaning of registers depends on installed card. - see below				Register assignments depend on which type of card is in the slot. See overlays below	58
						Block Size:	66
Expansions for Data and Control Block for Option Card 1							
Data and Control Block – Digital I/O Relay Card Overlay (Note 15)							
2757 - 2757	10072 - 10072	Digital Input States	UINT16	bit-mapped	-----	Two nibble fields: (2222) for input#2 and (1111) for input #1. Lsb in each nibble is the current state of the input. Msb in each nibble is the oldest registered state.	1
2758 - 2758	10073 - 10073	Digital Relay States	UINT16	bit-mapped	-----	If "a" is "1" then state of Relay#2 is in "c". (1=triped, 0=released). If "b" is "1" then state of Relay#1 is in "d". (1=triped, 0=released).	1
2759 - 2759	10074 - 10074	Turn relay on	UINT16	bit-mapped	-----	Writing a "1" in bit N turns relay N+1 ON (this register is writeable only in privileged session)	1
275A - 275A	10075 - 10075	Turn relay off	UINT16	bit-mapped	-----	Writing a "1" in bit N turns relay N+1 OFF (this register is writeable only in privileged session)	1
275B - 275B	10076 - 10076	TripRelease delay timer for Relay 1	UINT16	0 to 9999	0.1 sec	time to trip or release	1
275C - 275C	10077 - 10077	TripRelease delay timer for Relay 2	UINT16	0 to 9999	0.1 sec	time to trip or release	1
275D - 275E	10078 - 10079	Reserved				Reserved	2

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
275F - 275F	10080 - 10080	Input 1 Accumulator, Scaled	UINT16	0 to 9999		resolution is 1, 10, 100, 1000, 10000, or 100000 counts	1
2760 - 2760	10081 - 10081	Input 2 Accumulator, Scaled	UINT16	0 to 9999		Disabled accumulators always read 0.	1
2761 - 2762	10082 - 10083	Reserved	UINT16			Reserved	1
2763 - 2763	10084 - 10084	Relay 1 Accumulator, Scaled	UINT16	0 to 9999		resolution is 1, 10, 100, 1000, 10000, or 100000 counts	1
2764 - 2764	10085 - 10085	Relay 2 Accumulator, Scaled	UINT16	0 to 9999		Disabled accumulators always read 0.	1
2765 - 2765	10086 - 10129	Reserved	UINT16			Reserved	44
						Block Size:	58
read-only except as indicated							
2757 - 2757	10072 - 10072	Digital Input States	UINT16	bit-mapped	dddd cccc bbbb aaaa	Nibble "dddd" for input#4, "cccc" for input#3, "bbbb" for input#2 and "aaaa" for input#1. Within each field, rightmost bit is the current state (=closed, 0=open), and bits at left are the older states (100ms apart, historical states)	1
						Example: xxxx xxxx xxxx 0011	
						Current state of input#1 is closed, before that it was closed too, before that it was open and the oldest state known is open.	
2758 - 2758	10073 - 10073	Digital Output States	UINT16	bit-mapped	-----	One bit for each output. Bit 4 is for output#4, and bit 1 is for output #1. If a bit is set the output is opened, otherwise it is opened.	1
2759 - 2759	10074 - 10074	Pulse Output Test Select	UINT16	bit-mapped	-----	Write 1 to bit to set its corresponding Pulse Output into test mode. Write 0 to restore it to normal operation. A privileged session is required to write these bits. Reading this register reports the mode for each output (1=under test, 0=normal).	1
275A - 275A	10075 - 10075	Pulse Output Test Power	UINT16	bit-mapped	ddvvvvvv vvvvvvvv	This register is Writable in privileged session only. Simulates constant Power for the Pulse Output under test. Format is same as K1 settings for Pulse Output. "vv" is raw value in W/pulse from 0 to 9999. "dd"=decimal point position: 00=XXXX, 01=XXX, 10=XX, 11=XXX	1
275B - 275E	10076 - 10079	Reserved	UINT16	0 to 9999		Reserved	4
275F - 275F	10080 - 10080	Input 1 Accumulator, Scaled	UINT16	0 to 9999		resolution is 1, 10, 100, 1000, 10000, or 100000 counts	1
2760 - 2760	10081 - 10081	Input 2 Accumulator, Scaled	UINT16	0 to 9999		Disabled accumulators always read 0.	1
2761 - 2761	10082 - 10082	Input 3 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2762 - 2762	10083 - 10083	Input 4 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2763 - 2763	10084 - 10084	Output 1 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2764 - 2764	10085 - 10085	Output 2 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2765 - 2765	10086 - 10086	Output 3 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2766 - 2766	10087 - 10087	Output 4 Accumulator, Scaled	UINT16	0 to 9999		Reserved	1
2767 - 2767	10088 - 10129	Reserved	UINT16			Block Size:	42
							58
read-only							
2757 - 2757	10072 - 10072	Status of card	UINT16	-----cf----		Flag fields: c=calibration not good; f=configuration error	1
2758 - 2760	10073 - 10129	Reserved	UINT16			Reserved	57
						Block Size:	58

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Data and Control Block – Network Card Overlay (Note 15)							
- 2757	10072 - 10072	Card and Network Status	UINT16	bit-mapped	rtp-----stfw=m-1-i	Flags: r=run mode; h=card is healthy; p=using last good known programmable settings Server flags: s=sntp ok; f=ftp ok; w=web server ok; m=modbus tcp ok. IP Status ii: 00=IP not valid yet, 01=IP from D settings; 10=IP from DHCP; 11=using last good known IP.	1 read-only
2758 - 2758	10073 - 10073	Reserved				Reserved	
2759 - 275B	10074 - 10076	MAC address in use by the network card	UINT16	bit-mapped	6 bytes	These 3 registers hold the 6 bytes of the card's ethernet MAC address	3
275C - 275F	10077 - 10080	Current IP Address	UINT16			These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
2760 - 2760	10081 - 10081	Current IP Mask Length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Mab of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
2761 - 2762	10082 - 10083	Firmware Version	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2763 - 2764	10084 - 10085	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2765 - 2790	10086 - 10129	Reserved				Reserved for Extended Nw Status	44
						Block Size:	58
Option Card 2 Section							
Card Identification and Configuration Block (Note 14)							
2AF7 - 2AF7	11000 - 11000	Class ID and card status	UINT16	bit-mapped	undv----ccccffff	Flags active if bit is set: u=unsupported card; n=card need configuration; d=card is using default configuration; v=communication with card is ok Field: cocce=class of installed card. Field: titl=type of card. See note 22.	1 read-only
2AF8 - 2AF8	11001 - 11001	Reserved				Read only	
2AF9 - 2B00	11002 - 11009	Card name	ASCII	16 char	none	ASCI name of the installed card	1
2B01 - 2B08	11010 - 11017	Serial number	ASCII	16 char	none	Serial Number in ASCII of the installed card	8
2B09 - 2B0A	11018 - 11019	Version	ASCII	4 char	none	Version in ASCII of the hardware of the installed card.	2
2B0B - 2B28	11020 - 11055	Reserved				Reserved	36
2B2F - 2B30	11056 - 11057	Firmware Version	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2B31 - 2B32	11058 - 11059	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2B33 - 2B36	11060 - 11063	Reserved				Reserved	4
						Block Size:	64

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Current Communication Settings for Option Card 2							
2B37 - 2B37	11064 - 11064	Current speed and format	UINT16	bit-mapped	-abde -- fgij-klm	Bps: a=57600; b=38400; c=19200; d=14400; e=9600 Stop bits: f cleared 1 stop bit, set 2 stop bits Parity: g=even, h=odd; f=None Data bits: j=8; k=7; l=6; m=5	1
2B38 - 2B38	11065 - 11065	Reserved	UINT16	bit-mapped	-----	Received	1
2B39 - 2B39	11066 - 11066	Current protocol	UINT16	bit-mapped	-----	ppp=protocol 100=DNP3; 010=Ascii Modbus; 001=Rtu Modbus	1
2B3A - 2B3A	11067 - 11067	Current reply delay	UINT16	0 to 65535	milliseconds	Delay to reply a Modbus transaction after receiving it.	1
2B3B - 2B3E	11068 - 11071	Reserved	---	---	---	Reserved	4
Data and Control Blocks for Option Card 2							
2B3F - 2B78	11072 - 11129	Data and Control Block for Option Card 2 Meaning of registers depend on installed card. -- see below	---	---	---	Register assignments depend on which type of card is in the slot. See overlays below.	58
			---	---	---	Block Size:	66
Expansions for Data and Control Block for Option Card 2							
2B5F - 2B5F	11072 - 11072	Digital Input States	UINT16	bit-mapped	-----	read-only except as indicated	1
2B40 - 2B40	11073 - 11073	Digital Relay States	UINT16	bit-mapped	-----	22221111 Two nibble fields: (2222) for input#1 and (1111) for input#1. Lsb in each nibble is the current state of the input. Msb in each nibble is the oldest registered state.	1
2B41 - 2B41	11074 - 11074	Turn relay on	UINT16	bit-mapped	-----	If "a" is 1 then state of Relay#2 is unknown, otherwise state of Relay#2 is in "c"; (=tripped 0=released)	1
2B42 - 2B42	11075 - 11075	Turn relay off	UINT16	bit-mapped	-----	If "b" is 1 then state of Relay#1 is unknown, otherwise state of Relay#1 is in "d"; (=tripped 0=released).	1
2B43 - 2B43	11076 - 11076	Trip/Release delay timer for Relay 1	UINT16	0 to 999	0.1 sec	Writing a 1 in bit N turns relay N+1 ON (this register is writeable only in privileged session)	1
2B44 - 2B44	11077 - 11077	Trip/Release delay timer for Relay 2	UINT16	0 to 999	0.1 sec	Writing a 1 in bit N turns relay N+1 OFF (this register is writeable only in privileged session)	1
2B45 - 2B46	11078 - 11079	Reserved	---	---	---	time to trip or release	1
2B47 - 2B47	11080 - 11080	Input 1 Accumulator, Scaled	UINT16	0 to 999	0.1 sec	Reserved	2
2B48 - 2B48	11081 - 11081	Input 2 Accumulator, Scaled	UINT16	0 to 999	0.1 sec	Disabled accumulators always read 0.	1
2B49 - 2B4A	11082 - 11083	Reserved	---	---	---	Reserved	2
2B4B - 2B4B	11084 - 11084	Relay 1 Accumulator, Scaled	UINT16	0 to 999	0.1 sec	Resolution is 1, 10, 100, 1000, 10000, or 100000 counts	1
2B4C - 2B4C	11085 - 11085	Relay 2 Accumulator, Scaled	UINT16	0 to 999	0.1 sec	Resolution is 1, 10, 100, 1000, 10000, or 100000 counts	1
2B4D - 2B78	11086 - 11129	Reserved	---	---	---	Reserved	44
			---	---	---	Block Size:	58

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg.
Data and Control Block -- Digital I/O Pulse Output Card Overlay (Note 15)							
2B3F - 2B3F	11072 - 11072	Digital Input States	UINT16	bit-mapped	ddddd ccccc bbbbb aaaaaa	Nibble "dddd" for input#4, "cccc" for input#3, "bbbb" for input#2 and "aaaa" for input#1. Within each field, rightmost bit is the current state (1=closed, 0=open), and bits at left are the older states 100ms apart. (historical states) Example: xxxx xxxx xxxx 0011 Current state of input#1 is closed, before that it was closed too, before that it was open and the oldest state known is open.	1
2B40 - 2B40	11073 - 11073	Digital Output States	UINT16	bit-mapped	-----	One bit for each output. Bit 4 is for output#4, and bit 1 is for output #1. If a bit is set the output is closed, otherwise it is opened.	1
2B41 - 2B41	11074 - 11074	Pulse Output Test Select	UINT16	bit-mapped	-----	Write 1 to a bit to set its corresponding Pulse Output into test mode. Write 0 to restore it to normal operation. A privileged session is required to write the bits. Reading this register reports the mode for each output (1=under test, 0=normal).	1
2B42 - 2B42	11075 - 11075	Pulse Output Test Power	UINT16	bit-mapped	ddvvvvvv vvvvvvvv vvvvvvvv	This register is Writable in privileged session only. Simulates constant Power for the Pulse Output under test. Format is same as K1 settings for Pulse Output. "vv" is raw value in W/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11=XXXX.X	1
2B43 - 2B46	11076 - 11079	Reserved	UINT16	0 to 9999	Received	resolution is 1,-10,100,1000, 10000, or 100000 counts	4
2B47 - 2B47	11080 - 11080	Input 1 Accumulator, Scaled	UINT16	0 to 9999		Disabled accumulators always read 0.	1
2B48 - 2B48	11081 - 11081	Input 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B49 - 2B49	11082 - 11082	Input 3 Accumulator, Scaled	UINT16	0 to 9999			1
2B4A - 2B4A	11083 - 11083	Input 4 Accumulator, Scaled	UINT16	0 to 9999			1
2B4B - 2B4B	11084 - 11084	Output 1 Accumulator, Scaled	UINT16	0 to 9999			1
2B4C - 2B4C	11085 - 11085	Output 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B4D - 2B4D	11086 - 11086	Output 3 Accumulator, Scaled	UINT16	0 to 9999			1
2B4E - 2B4E	11087 - 11087	Output 4 Accumulator, Scaled	UINT16	0 to 9999			1
2B4F - 2B4F	11088 - 11129	Reserved	---		Reserved	Block Size: 42	58
Data and Control Block-Analog Out 0-1mA / Analog Out 4-20mA (Note 15)							
2B5F - 2B5F	11072 - 11072	Status of card	UINT16	bit-mapped	-----cf-----	Flag fields: c=calibration not good; f=configuratiion error	1
2B40 - 2B78	11073 - 11129	Reserved	UINT16	---	Reserved	Block Size: 57	58

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Req.
Data and Control Block - Network Card Overlay (Note 15)							
2B3F - 2B3F	11072 - 11072	Card and Network Status	UINT16	0x1P---- s!fw=m=1		Flags: r=run mode, h=card is healthy, p=pusing last good known programmable settings Server flags: s=smp ok; f=ftp ok; w=web server ok; m=modbus cp/fip ok. IP Status ii: 00=P not valid yet, 01=IP from p settings; 10=IP from DHCP; 11=using last good known IP.	1
2B40 - 2B40	11073 - 11073	Reserved	UINT16	bit-mapped	6 bytes	These 3 registers hold the 6 bytes of the card's Ethernet MAC address.	1
2B41 - 2B43	11074 - 11076	MAC address in use by the network card	UINT16	0 to 32		These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
2B44 - 2B47	11077 - 11080	Current IP Address	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 256/256=255:0; a value of 2 would mean 192.0.0.0	1
2B48 - 2B48	11081 - 11081	Current IP Mask Length	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2B49 - 2B4A	11082 - 11083	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2B4B - 2B4C	11084 - 11085	Firmware Version	ASCII	4 char	none	Reserved for Extended Nw Status	44
2B4D - 2B78	11086 - 11129	Reserved				Block Size:	58
Accumulators Block							
2EE0 - 2EE0	12000 - 12001	Option Card 1, Input 1 Accumulator	UINT32	0 to 999999999	number of transitions	These are unscaled counts. See option card section for scaled versions.	2
2EE1 - 2EE6	12002 - 12007	Option Card 1, Inputs 2-4 Accumulators	UINT32	0 to 999999999	number of transitions	Input accumulators count either or both transitions;	6
2EE7 - 2EE8	12008 - 12009	Option Card 1, Output or Relay 1 Accumulator	UINT32	0 to 999999999	number of transitions	Output accumulators count both transitions.	2
2EE9 - 2EEF	12010 - 12015	Option Card 1, Output or Relays 2-4	UINT32	0 to 999999999	number of transitions	Unused accumulators always read 0.	6
2EFF - 2EF6	12016 - 12023	Option Card 2, Inputs Accumulators	UINT32	0 to 999999999	number of transitions		8
2E77 - 2EFE	12024 - 12031	Option Card 2, Outputs Accumulators	UINT32	0 to 999999999	number of transitions		8
						Block Size:	32
Commands Section (Note 4)							
Resets Block (Note 9)							
4E1F - 4E1F	20000 - 20000	Reset Max/Min Blocks	UINT16	password (Note 5)		write-only	1
4E20 - 4E20	20001 - 20001	Reset Energy Accumulators	UINT16	password (Note 5)			1
4E21 - 4E21	20002 - 20002	Reset Alarm Log (Note 21)	UINT16	password (Note 5)		Reply to a reset log command indicates that the command was accepted but not necessarily that the reset is finished. Poll log status block to determine this.	1
4E22 - 4E22	20003 - 20003	Reset System Log (Note 21)	UINT16	password (Note 5)			1
4E23 - 4E23	20004 - 20004	Reset Historical Log 1 (Note 21)	UINT16	password (Note 5)			1
4E24 - 4E24	20005 - 20005	Reset Historical Log 2 (Note 21)	UINT16	password (Note 5)			1
4E25 - 4E25	20006 - 20006	Reset Historical Log 3 (Note 21)	UINT16	password (Note 5)			1
4E26 - 4E26	20007 - 20007	Reset I/O Change Log (Note 21)	UINT16	password (Note 5)			1
4E27 - 4E27	20008 - 20008	Reset Power Quality Log	UINT16	password (Note 5)			1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
4E28 - 4E2B	20009 - 20011	Reset Waveform Capture Log	UINT16	password (Note 5)			1
4E29 - 4EA	20010 - 20011	Reserved				Reserved	2
4E2B - 4E2C	20012 - 20012	Reset Option Card 1 Input Accumulators	UINT16	password (Note 5)			1
4E2C - 4E2D	20013 - 20013	Reset Option Card 1 Output Accumulators	UINT16	password (Note 5)			1
4E2D - 4E2E	20014 - 20014	Reset Option Card 2 Input Accumulators	UINT16	password (Note 5)			1
4E2E - 4E2F	20015 - 20015	Reset Option Card 2 Output Accumulators	UINT16	password (Note 5)			1
						Block Size:	16
Privileged Commands Block							
5207 - 5208	21000 - 21000	Initiate Meter Firmware Reprogramming	UINT16	password (Note 5)			1
5208 - 5209	21001 - 21001	Force Meter Restart	UINT16	password (Note 5)		causes a watchdog reset, always reads 0	1
5209 -	21002 - 21002	Open Privileged Command Session	UINT16	password (Note 5)		meter will process command registers (this register through 'Close Privileged Command Session' register below) for 5 minutes or until the session is closed, whichever comes first.	1
520A - 520A	21003 - 21003	Initiate Programmable Settings Update	UINT16	password (Note 5)			1
520B - 520B	21004 - 21004	Calculate Programmable Settings Checksum (Note 3)	UINT16	0000 to 9999		meter calculates checksum on RAM copy of PS block	1
520C - 520C	21005 - 21005	Programmable Settings Checksum (Note 3)	UINT16	0000 to 9999		read/write checksum register; PS block saved in nonvolatile memory on write (Note 8)	1
520D - 520D	21006 - 21006	Write New Password (Note 3)	UINT16	0000 to 9999		write-only register, always reads zero	1
520E - 520E	21007 - 21007	Terminate Programmable Settings Update (Note 3)	UINT16	any value		meter leaves PS update mode via reset	1
520F - 5211	21008 - 21010	Set Meter Clock	TSTAMP	1Jan2000 - 31Dec2099	1 sec	saved only when 3rd register is written	3
5212 - 5212	21011 - 21011	Manually Trigger Waveform Capture	UINT16	any value		applies to Shark 300 only, returns bus exception if blocked by another capture in progress	1
5213 - 5219	21012 - 21018	Reserved				Reserved	7
521A -	21019 - 21019	Close Privileged Command Session	UINT16	any value		ends an open command session	1
						Block Size:	20
Encryption Block							
658F - 659A	26000 - 26011	Perform a Secure Operation	UINT16			encrypted command to read password or change meter type	12
						Block Size:	12

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Req.
Programmable Settings Section							
write only in RS update mode							
Basic Setups Block							
752F - 752F	30000 - 30000	CT multiplier & denominator	UINT16	bit-mapped	00000000 00000000	high byte is denominator (1 or 5, read-only), low byte is multiplier (1, 10, or 100)	1
7530 - 7530	30001 - 30001	CT numerator	UINT16	1 to 9999	none		1
7531 - 7531	30002 - 30002	PT numerator	UINT16	1 to 9999	none		1
7532 - 7532	30003 - 30003	PT denominator	UINT16	1 to 9999	none		1
7533 - 7533	30004 - 30004	PT multiplier & hookup	UINT16	bit-mapped	00000000 00000000	mm...mm = PT multiplier (1, 10, 100, or 1000) (0=element type[S], 1 = delta 2, CTifSS, 3 = 2.5 element type[S])	1
7534 - 7534	30005 - 30005	Averaging Method	UINT16	bit-mapped	-11111 b---sss	lli = interval (5,15,30,60) b = 0-block or 1-rolling sss = # subintervals (1,2,3,4)	1
7535 - 7535	30006 - 30006	Power & Energy Format	UINT16	bit-mapped	ppppffff feee-dddd	pppp = power scale (0-unit, 3-kilo, 6-mega, 8-auto) ffff = energy digits after decimal point (0-3), applies only if f=1 and pppp is not auto nn = number of energy digits (5-8 --> 0-3) eeee = energy scale (0-unit, 3-kilo, 6-mega) f = decimal point (or power (0=auto-dependent placement, 1=fixed placement per i value)) ddd = energy digits after decimal point (0-6) See note 10.	1
7536 - 7536	30007 - 30007	Operating Mode Screen Enables	UINT16	bit-mapped	-----xx eeeeeeee	eeeeeee = op mode screen rows on/off, rows top to bottom are bits low order to high order x = set to suppress PPF on WVA/PF screens	1
7537 - 7537	30008 - 30008	Daylight Saving On Rule	UINT16	bit-mapped	hhhhhhww -dddmmmm	hhhhhhww -dddmmmm applies only if daylight savings in User Settings Flags = 1, specifies when to make changeover hhhh = hour, 0-23 ww = week, 1-4 for 1 st - 4th, 5 for last ddd = day of week, 1-7 for Sun - Sat mmmm = month, 1-12 Example: 2AM on the 4th Sunday of March hhhh=2, www=4, ddd=1, mmmm=3	1
7538 - 7538	30009 - 30009	Daylight Saving Off Rule	UINT16	bit-mapped	hhhhhhww -ddcmmmm	hhhh = hours, 23 to +23 ww = week, 1-4 for 1 st - 4th, 5 for last ddc = day of month, 1-28 mmmm = month, 1-12 Example: 2AM on the 4th Sunday of March hhhh=2, www=4, ddc=1, mmmm=3	1
7539 - 7539	30010 - 30010	Time Zone UTC offset	UINT16	bit-mapped	z000 0000 hhth hhmm	mm = minutes/15, 0-30, 01=15, 10=30, 11=45 z = Time Zone valid (0=no, 1=yes) i.e. register=0 indicates that time zone is not set while register=0x8000 indicates UTC offset = 0	1
753A - 753A	30011 - 30011	Clock Sync Configuration	UINT16	bit-mapped	0000 0000 mm00 0ppp	e = enable automatic clock sync (0-no, 1=yes) pp = port performing synchronization (2-3 = COM3-COM4) mm = sync method (1=NTP, all other values=no sync)	1
753B - 753B	30012 - 30012	Reserved	UINT16	bit-mapped	-----s	Reserved	1
753C - 753C	30013 - 30013	User Settings 2	UINT16	bit-mapped	-----s	s = display secondary volts (1=yes, 0=no)	1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Modbus Address Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
753D - 753D	30014 - 30014	DNP Options	UINT16	bit-mapped	-- - - - - vN-i -vvvP	p selects primary or secondary values for DNP voltage, (0=secondary, 1-primary) vv sets divisor for voltage scaling i sets divisor for current scaling (0=1, 1=10, 2=i00) ww sets divisor for power scaling in addition to scaling for Kilo (0=1, 1=10, 2=100, 3=1000) Example: 120kV, 500A, 180MW p=1, w=2, i=0, and ww=3 voltage reads 1200, current reads 500, watts reads 180	1
753E - 753E	30015 - 30015	User Settings Flags	UINT16	bit-mapped	vVkgelnm srpd3ywf a	vv = number of digits after decimal point for voltage display 0 - For voltage range (0 - 9999V) 1 - For voltage range (100.0kV - 999.9 kV) 2 - For voltage range (10.00kV - 99.99 kV) 3 - For voltage range (0kV - 9.999 kV) This setting is used only when k=1. k = enable fixed scale for voltage display. g = enable alternate full scale bar graph current (1=on, 0=off) e = enable ct_pf compensation (0=disabled, 1=Enabled). l = fixed scale and format current display 0-normal autoscaled current display 1-always show amps with no decimal places nn = number of phases for voltage & current screen (3=ABC, 2=AB, 1=A, 0=BC)	1
753F - 753F	30016 - 30016	Full Scale Current (for load % bar graph)	UINT16	0 to 9999	none	If non zero and user settings bit 9 is set, this value replaces CT numerator in the full scale current calculation. (See Note 12)	1
7540 - 7547	30017 - 30024	Meter Designation	ASCII	16 char	none	-- - -ddddd -0100110	8
7548 - 7548	30025 - 30025	COM1 setup	UINT16	bit-mapped	-- - -ddddd -ppp-bbbb	dddd = reply delay (* 50 msec) ppp = protocol (1=Modbus RTU, 2=Modbus ASCII, 3=DNP) bbbb = baud rate (1=9600, 2=19200, 4=38400, 6=57600)	1
7549 - 7549	30026 - 30026	COM2 setup	UINT16	bit-mapped	-- - -ddddd -ppp-bbbb		1
754A - 754A	30027 - 30027	COM2 address	UINT16	1 to 247	none	use Modbus address as the identifier (see notes 7, 11, 12)	1
754B - 754B	30028 - 30028	Limit #1 Identifier	UINT16	0 to 65535			1
754C - 754C	30029 - 30029	Limit #1 Out High Setpoint	SINT16	-200.0 to +200.0	0.1% of full scale	Setpoint for the "above" limit (LM1), see notes 11-12.	1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
754D - 754D	30030 - 30030	Limit #1 In High Threshold	SINT16	-200.0 to +200.0	0.1% of full scale	Threshold at which "above" limit clears; normally less than or equal to the "above" setpoint; see notes 11-12.	1
754E - 754E	30031 - 30031	Limit #1 Out Low Setpoint	SINT16	-200.0 to +200.0	0.1% of full scale	Setpoint for the "below" limit (Lm2); see notes 11-12.	1
754F - 754F	30032 - 30032	Limit #1 In Low Threshold	SINT16	-200.0 to +200.0	0.1% of full scale	Threshold at which "below" limit clears; normally greater than or equal to the "below" setpoint; see notes 11-12.	1
7550 - 7554	30033 - 30037	Limit #2	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
7555 - 7559	30038 - 30042	Limit #3	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
755A - 755E	30043 - 30047	Limit #4	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
755F - 7563	30048 - 30052	Limit #5	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
7564 - 7568	30053 - 30057	Limit #6	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
7569 - 756D	30058 - 30062	Limit #7	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
756E - 7572	30063 - 30067	Limit #8	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
7573 - 7582	30068 - 30083	Reserved	Reserved	same as Limit #1	same as Limit #1	same as Limit #1	16
7583 - 75C2	30084 - 30147	Reserved	UINT16	0 to 99.99	0.01%	Reserved	64
75C3 - 75C3	30148 - 30148	watts loss due to iron when watts positive	UINT16	0 to 99.99	0.01%		1
75C4 - 75C4	30149 - 30149	watts loss due to copper when watts positive	UINT16	0 to 99.99	0.01%		1
75C5 - 75C5	30150 - 30150	var loss due to iron when watts positive	UINT16	0 to 99.99	0.01%		1
75C6 - 75C6	30151 - 30151	var loss due to copper when watts positive	UINT16	0 to 99.99	0.01%		1
75C7 - 75C7	30152 - 30152	watts loss due to iron when watts negative	UINT16	0 to 99.99	0.01%		1
75C8 - 75C8	30153 - 30153	watts loss due to copper when watts negative	UINT16	0 to 99.99	0.01%		1
75C9 - 75C9	30154 - 30154	var loss due to iron when watts negative	UINT16	0 to 99.99	0.01%		1
75CA - 75CA	30155 - 30155	var loss due to copper when watts negative	UINT16	0 to 99.99	0.01%		1
75CB - 75CB	30156 - 30156	transformer loss compensation user settings flag	UINT16	bit-mapped	-----CFiWV	C - 0 disable compensation for losses due to copper, 1 enable compensation for losses due to iron, f - 0 disable compensation for losses due to iron, w - 0 add watt compensation, v - 0 subtract watt compensation	1
75CC - 75E5	30157 - 30182	Reserved	UINT16	0-65535		1 subtract var compensation	1
75E6 - 75E6	30183 - 30183	Programmable Settings Update Counter	UINT16	0-65535		1	26
75E7 - 7626	30184 - 30247	Reserved for Software Use	UINT16	0-65535		Increments each time programmable settings are changed; occurs when new checksum is calculated.	1
7627 - 7627	30248 - 30248	A phase PT compensation @ 68V (% error)	SINT16	-15 to 15	0.01%	Reserved	64
7628 - 7628	30249 - 30249	A phase PT compensation @ 120V (% error)	SINT16	-15 to 15	0.01%		1
7629 - 7629	30250 - 30250	A phase PT compensation @ 230V (% error)	SINT16	-15 to 15	0.01%		1
762A - 762A	30251 - 30251	A phase PT compensation @ 480V (% error)	SINT16	-15 to 15	0.01%		1
762B - 762B	30252 - 30255	B phase PT compensation @ 68V, 120V, 230V, 480V (% error)	SINT16	-15 to 15	0.01%		4
762F - 762F	30256 - 30259	C phase PT compensation @ 68V, 120V, 230V, 480V (% error)	SINT16	-15 to 15	0.01%		4

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Modbus Address Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
7633 -	7633	30260 - 30260	A phase CT compensation @ c1 (% error)	SINT16	-15 to 15	0.01%	
7634 -	7634	30261 - 30261	A phase CT compensation @ c2 (% error)	SINT16	-15 to 15	0.01%	
7635 -	7635	30262 - 30262	A phase CT compensation @ c3 (% error)	SINT16	-15 to 15	0.01%	
7636 -	7636	30263 - 30263	A phase CT compensation @ c4 (% error)	SINT16	-15 to 15	0.01%	
7637 -	7637	30264 - 30267	B phase CT compensation @ c1, c2, c3, c4 (% error)	SINT16	-15 to 15	0.01%	
763B -	763E	30268 - 30271	C phase CT compensation @ c1, c2, c3, c4 (% error)	SINT16	-15 to 15	0.01%	
763F -	7642	30272 - 30275	A phase PF compensation @ c1, c2, c3, c4	SINT16	-50 to 50	c4=1A	
7643 -	7646	30276 - 30279	B phase PF compensation @ c1, c2, c3, c4	SINT16	-50 to 50	c4=1A	
7647 -	764A	30280 - 30283	C phase PF compensation @ c1, c2, c3, c4	SINT16	-50 to 50	c4=1A	
<hr/>							
Log Setups Block							
7917 -	7917	31000 - 31000	Historical Log #1 Sizes	UINT16	bit-mapped	eeeeeeeessssssss	
						high byte is number of registers to log in each record (0-19), low byte is number of flash sectors for the log (see note 19)	
						0 in either byte disables the log	
7918 -	7918	31001 - 31001	Historical Log #1 Interval	UINT16	bit-mapped	00000000 1gfedcba	
7919 -	7919	31002 - 31002	Historical Log #1, Register #1, Identifier	UINT16	0 to 65535	only 1 bit set, a=1 min, b=5 min, d=10 min, e=15 min, f=60 min, h=EOI pulse	
791A -	798D	31003 - 31118	Historical Log #1, Register #2 - #17 Identifiers	UINT16	0 to 65536	use Modbus address as the identifier (see note 7)	
798E -	7906	31119 - 31191	Historical Log #1 Software Buffer			same as Register #1 Identifier	116
7907 -	7A96	31192 - 31383	Historical Log #2 Sizes, Interval Registers & Software Buffer			Reserved for software use.	
7A97 -	7B56	31384 - 31575	Historical Log #3 Sizes, Interval Registers & Software Buffer			same as Historical Log #1	192
7B57 -	7B57	31576 - 31607	Waveform Log Sample Rate & Pretrigger	UINT16	bit-mapped	ssssssss PPPPPPPP	
						High byte is samples/60Hz cycle = 5(32), 6(64), 7(128), 8(256), or 9(512)	
						Low byte is number of pretrigger cycles.	
7B58 -	7B58	31577 - 31577	Power Quality Log Triggers	UINT16	bit-mapped	-----8 76543210	
7B59 -	7B59	31578 - 31578	Waveform Log Triggers	UINT16	bit-mapped	-----8 76543210	
7B5A -	7B5A	31579 - 31579	Waveform & PQ Log Sizes	UINT16	bit-mapped	DPRRPPRP wwwwww	
						High byte is number of flash sectors for PQ log	
						Low byte is number of flash sectors for waveform log	
7B5B -	7B5B	31580 - 31580	Reserved			Reserved	
7B5C -	7B5C	31581 - 31581	Channel A Voltage Surge Threshold	UINT16	0 to 99.99	0.01%	
7B5D -	7B5D	31582 - 31582	Channel A Current Surge Threshold	UINT16	0 to 99.99	0.01%	
7B5E -	7B5E	31583 - 31583	Channel A Voltage Sag Threshold	UINT16	0 to 99.99	0.01%	
7B5F -	7B61	31584 - 31586	Reserved			Reserved	
7B62 -	7B67	31587 - 31582	Channel B Surge & Sag Thresholds			Same as Channel A	6
7B68 -	7B6D	31593 - 31588	Channel C Surge & Sag Thresholds			Same as Channel A	6
7B6E -	7B76	31599 - 31607	Reserved			Reserved	9
						Block Size:	608

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Programmable Settings for Option Card 1							
write only in PS update mode							
Option Card 1 Setups Block							
7CF0 - 7CFF	32000 - 32000	Class ID of the Option Card 1 Settings	UINT16	bit-mapped	----- 0000ff	Which class (cccc) and type(lttt) of card the Option Settings for Card 1 apply to. See note 22.	1
7D00 - 7D0E	32001 - 32063	Settings for Option Card 1, First Overlay -- see below					63
7D0F - 7F3E	32064 - 32575	Settings for Option Card 1, Second Overlay -- see below					512
Overlays for Option Card 1 Programmable Settings							
write only in PS update mode							
Settings Registers for any communication capable card, including network and analog cards							
7D00 - 7D00	32001 - 32001	Slave address	UINT16	1-247 (for Modbus) 1-65534 (for DNP)	none	Slave address of the unit. The communication capable card is always a master.	1
7D01 - 7D01	32002 - 32002	Speed and format	UINT16	bit-mapped	-abccde-fghijklm	Set to 0 when an analog board is installed. Bps: =57600; b=38400; c=19200; d=14400; e=9600 Stop bits: cleared 1 stop bit, set 2 stop bits Parity: g=even; h=odd; i=none Data bits: j=8; k=7; l=6; m=5	1
7D02 - 7D02	32003 - 32003	Reserved	UINT16	bit-mapped	-----	Set to 0 when an analog board is installed.	1
7D03 - 7D03	32004 - 32004	Protocol	UINT16	0 to 65535	milliseconds	ppp=100-DNP3; 010=Ascii Modbus; 001=Rtu Modbus Set to 0 when an analog board is installed.	1
7D04 - 7D04	32005 - 32005	Reply delay	UINT16	0 to 65535	milliseconds	Delay to reply to a Modbus transaction after receiving it. Set to 0 when an analog board is installed	1
7D05 - 7D3E	32006 - 32063	Reserved				Reserved	58
First Overlay							
write only in PS update mode							
Settings Registers for Digital I/O Relay Card							
7D00 - 7D00	32001 - 32001	Input#1 - 2 bindings & logging enables	UINT16	bit-mapped	----- 2222 1111	One nibble for each input. Assuming "abcc" as the bits in each nibble: "a": select this input for EO1 (End Of Interval) pulse "b": log this input when pulse is detected "cc": input event trigger mode - Contact sensing method; 00 = none, 01 = open to close, 10 = close to open; 11 = any change. Every input has an associated internal accumulator (See Input Accumulator Scaling), which is incremented every time the input changes according with the trigger mode criteria "cc".	1
7D01 - 7D01	32002 - 32002	Relay #1 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
7D02 - 7D02	32003 - 32003	Relay #1 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
7D03 - 7D08	32004 - 32009	Reserved	UINT16			Set to 0.	6
7D09 - 7D09	32010 - 32010	Relay #2 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
7D0A - 7D0A	32011 - 32011	Relay #2 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
7D0B - 7D20	32012 - 32033	Reserved	UINT16			Set to 0.	22

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
7D21 - 7D21	32034 - 32034	Input Accumulators Scaling	UINT16	-----	22221111	4 bits per input or output accumulator	1
7D22 - 7D22	32035 - 32035	Relay Accumulators Scaling	UINT16	-----	22221111	The nibble informs what should be the scaling of the accumulator. 0=no-scaling, 1=0.1, 2=0.1, 25=1m, 4=1m, 5=0.01m, 6=i, 7=0.1u; the value 15 unusable the accumulator.	1
7D23 - 7D23	33036 - 33036	Fast pulse input selector	UINT16	P-----	-----	Example: suppose that the internal input accumulator #1 is 12345, and its corresponding scaling setting is "001" (3 decimal). Then, the accumulator will be read as: Scaling 3, means 1m or 0.001. Scaled accumulator = 12345 * 0.001 = 12 (Twelve).	1
7D24 - 7D3E	32037 - 32063	Reserved				When value "nnn" is non-zero, it determines which of the card inputs will be a fast pulse detection input. The polarity bit 'P' tells the event to be detected: 1=open-to-close, 0=close-to-open. There is no 'any-change' detection mode.	27
Settings Registers for Digital I/O Pulse Output Card							
7D00 - 7D00	32001 - 32001	Input#1 - 4 bindings & logging enables	UINT16	44443333 22221111	First Overlay	write only in PS update mode	1
						One nibble for each input: Assuming "abc" as the bits in each nibble: "a": select this input for EOI (End Of Interval) pulse sensing. "b": log this input when pulse is detected. "c": input event trigger mode - Contact sensing method; 00 = none, 01 = open to close; 10 = close to open; 11 = any change. Every input has an associated internal accumulator (See Input Accumulator Scaling), which is incremented every time the input changes according with the trigger mode criteria "c".	1
7D01 - 7D01	32002 - 32002	Source for Pulse Output#1	UINT16	----PPP ---vvvv	"ppp" (Phase) : 000 = none, 001 = Phase A, 010 = Phase B, 011 = Phase C, 100 = All Phases, 101 = Pulse from EOI(End Of Interval).	1	
					"vvv" (Value) : 0000= none, 0001= Wh, 0010= +Wh, 0011= -Wh, 0100= Vah, 0101= +Vah, 0110= -Vah, 0111 = VAh, 1000= Received Wh, 1001= Delivered Wh, 1010= Inductive Vah, 1011 = Capacitive Vah	1	
7D02 - 7D02	32003 - 32003	K: [Wh/pulse] factor for Pulse Output#1	UINT16	ddyyyyyy vvvvvvvv	"y" = not scaled energy value per pulse, from 0 to 9999. 'd' = decimal point position: 00=0.XXXX, 01=X.XXX, 10-XX.XX, 11=X.XX.	1	

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
7D03 - 7D04	32004 - 32005	Output#2 Assignment and Kt	UINT16			same as Output #1	2
7D05 - 7D06	32006 - 32007	Output#3 Assignment and Kt	UINT16			same as Output #1	2
7D07 - 7D08	32008 - 32009	Output#4 Assignment and Kt	UINT16			same as Output #1	2
7D09 - 7D0A	32010 - 32010	Input Accumulators Scaling	UINT16	44443333 22221111		Relay Card above	1
7D0A - 7D0B	32011 - 32011	Output Accumulators Scaling	UINT16	44443333 22221111		P-----n---- see Relay Card above	1
7D0B - 7D0B	32012 - 32012	Fast pulse input selector	UINT16	44443333 22221111		When value 'nn' is non-zero, it determines which of the card inputs will be a fast pulse detection input. The polarity bit 'P' tells the event to be detected: 1=open-to-close, 0=close-to-open. There is no 'any-change' detection mode.	1
7D0C - 7D3E	32013 - 32063	Reserved				Reserved	51
Settings Registers for Digital I/O Relay Card							
7D4F - 7D46	32064 - 32071	Input#1 Label	ASCII	16 char		write only in PS update mode	8
7D47 - 7D4E	32072 - 32079	Input#1 Low State Name	ASCII	16 char			8
7D4F - 7D56	32080 - 32087	Input#1 High State Name	ASCII	16 char		same as Input#1	8
7D57 - 7D5E	32088 - 32111	Input#2 Label and State Names				Reserved	24
7D5F - 7D9E	32112 - 32159	Reserved				Reserved	48
7D5F - 7DA6	32160 - 32167	Relay#1 Label	ASCII	16 char			8
7D47 - 7DAE	32168 - 32175	Relay#1 Open State Name	ASCII	16 char			8
7D4F - 7DB6	32176 - 32183	Relay#1 Closed State Name	ASCII	16 char		same as Relay#1	8
7DB7 - 7DCE	32184 - 32207	Relay#2 Label and State Names				Reserved	24
7DCF - 7DFE	32208 - 32245	Reserved				Reserved	48
7DF0 - 7E06	32246 - 32263	Input#1 Accumulator Label	ASCII	16 char			8
7E07 - 7E0E	32264 - 32271	Input#2 Accumulator Label	ASCII	16 char			8
7E0F - 7E1E	32272 - 32287	Reserved				Reserved	16
7E1F - 7E1F	32288 - 32288	Input#1 Accumulator Kt	UINT16	ffff	ffff	Kt power factor for the Pulse Output	1
7E20 - 7E20	32289 - 32289	Input#2 Accumulator Kt	UINT16	ffff	ffff	"nn" is raw power value in Wh/pulse from 0 to 9999, "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11=X.XX.	1
7E21 - 7F5E	32290 - 32575	Reserved				Reserved	208
Settings Registers for Digital I/O Pulse Output Card							
7D5F - 7D46	32064 - 32071	Input#1 Label	ASCII	16 char		write only in PS update mode	8
7D47 - 7D4E	32072 - 32079	Input#1 Low State Name	ASCII	16 char			8
7D4F - 7D56	32080 - 32087	Input#1 High State Name	ASCII	16 char		same as Input#2	8
7D57 - 7D5E	32088 - 32111	Input#2 Label and State Names				same as Input#1	24
7D5F - 7D86	32112 - 32135	Input#3 Label and State Names				same as Input#1	24
7D87 - 7D9E	32136 - 32169	Input#4 Label and State Names				same as Input#1	24
7D5F - 7D46	32170 - 32177	Output#1 Label	ASCII	16 char			8
7D47 - 7D86	32178 - 32183	Output#1 Closed State Name	ASCII	16 char		same as Output#1	8
7DB7 - 7DCE	32184 - 32207	Output#2 Label and State Names				same as Output#1	24
7DCF - 7DE6	32208 - 32231	Output#3 Label and State Names				same as Output#1	24
7DE7 - 7DFE	32232 - 32255	Output#4 Label and State Names				same as Output#1	24
7DFF - 7E06	32256 - 32263	Input#1 Accumulator Label	ASCII	16 char			8

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
7E07 - 7E0E	32264 - 32271	Input#2 Accumulator Label	ASCII	16 char			8
7E0F - 7E16	32272 - 32279	Input#3 Accumulator Label	ASCII	16 char			8
7E17 - 7E1E	32280 - 32287	Input#4 Accumulator Label	ASCII	16 char			8
7E1F - 7E2F	32288 - 32288	Input#1 Accumulator Kt	UINT16	bit-mapped	0xFFFF	KT power factor for the accumulator input	1
7E20 - 7E20	32289 - 32289	Input#2 Accumulator Kt	UINT16	bit-mapped	0x0000	"r" = raw power value in Wh/pulse from 0 to 9999.	1
7E21 - 7E21	32290 - 32290	Input#3 Accumulator Kt	UINT16	bit-mapped	0x0000	"dd=decimal point: 00=0.XXXX, 01=X.XXX,	1
7E22 - 7E22	32291 - 32291	Input#4 Accumulator Kt	UINT16	bit-mapped	0x0000	10=XX.XX, 11=X.XX.	1
7E23 - 7E3E	32292 - 32575	Reserved				Reserved	1
							284
						Block Size:	512
Settings Registers for Analog Out 0-1mA / Analog Out 4-20mA Cards							
Second Overlay							
7C3F - 7D3F	32064 - 32064	Update rate	UINT16	0 to 65535	milliseconds	write only in PMS update mode	1
7D40 - 7D40	32065 - 32065	Channel direction - 1mA Card only!	UINT16	0 to 65535	---	Fixed -- see specifications	1
7D41 - 7D41	32066 - 32066	Format parameter for output #1	UINT16	bit-mapped	---	Full range output for 0-1mA card only; A bit set(1) means full range (-1mA to +1mA); a bit cleared(0) means source only (0mA to +1mA).	1
7D42 - 7D42	32067 - 32067	Source register for Output#1	UINT16	0 to 65535	---	Format of the polled register = float 32; s=signed 32 bit int, b=unsigned 32 bit int, w=signed 16 bit int, e=swab	1
7D43 - 7D44	32068 - 32069	High value of source register for output#1	UINT16	0 to 65535	---	This register should be programmed with the address of the register whose value is to be used for current output. In different words, the current level output of analog board will follow the value of the register addressed here.	1
7D45 - 7D46	32070 - 32071	Low value of source register for output#1	---	Depends on the format parameter	---	Value read from the source register at which Low nominal current will be output. Example for the 4-20mA card, if this register is programmed with 750, then the current output will be 20mA when the value read from the source register is 750.	2
7D47 - 7D4C	32072 - 32077	Analog output#2 format, register, max & min	---	Depends on the format parameter	---	Value read from the source register at which High nominal current will be output. Example for the 4-20mA card, if this register is programmed with 0, then the current output will be 4mA when the value read from the source register is 0.	2
7D4D - 7D52	32078 - 32083	Analog output#3 format, register, max & min	---	---	Same as analog output#1	Same as analog output#1	6
7D53 - 7D58	32084 - 32089	Analog output#4 format, register, max & min	---	---	---	---	6
7D59 - 7F3E	32090 - 322575	Reserved	---	---	---	Reserved	486
						Block Size:	512

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Settings Registers for Network Cards							
7D3F - 7D3F	32064 - 32064	General Options	bit-mapped	----- ---S cwme	Second Overlay	write only in PS update mode	1
7D40 - 7D40	32065 - 32065	DHCP enable	bit-mapped	----- -----d	Servers enable(1) or disable(0) flags: s=Modbus_TCP_server c=Modbus_TCP_client w=Web server ; m=HTTP Modbus RTU for diagnostics. Sleep enabled e=0; sleep disabled e=1.	DHCP: d=1 enabled, d=0 disabled (user must provide IP configuration).	1
7D41 - 7D48	32066 - 32073	Host name label	ASCII	-----	16 bytes (8 registers)		8
7D49 - 7D4C	32074 - 32077	IP card network address	UINT16	0 to 255 (IPv4)	These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.		4
7D4D - 7D4D	32078 - 32078	IP network address mask length	UINT16	0 to 32	Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0		1
7D4E - 7D51	32079 - 32082	IP card network gateway address	UINT16	0 to 255 (IPv4)	These 4 registers hold the 4 numbers that make the IP gateway address on network.		4
7D52 - 7D55	32083 - 32086	IP card network DNS #1 address	UINT16	0 to 255 (IPv4)	IP address of the DNS#1 on the network.		4
7D56 - 7D59	32087 - 32090	IP card network DNS #2 address	UINT16	0 to 255 (IPv4)	IP address of the DNS#2 on the network.		4
7D5A - 7E62	32091 - 32355	Reserved				Write this with 0 to keep future compatibility.	265
7E63 - 7E63	32356 - 32356	FTP Client Flags	bit-mapped	----- -----e	General FTP flags: u: 0=FTP remote address is an URL address, 1=FTP remote address is an IP address. e: 0=FTP disabled, 1=Enabled.		1
7E64 - 7E64	32357 - 32357	Reserved			Set to 0		1
7E65 - 7E64	32358 - 32389	FTP remote server address	ASCII or UINT16		The type of the data in these registers depend on bit 'u' in the FTP Client Flags register. IP portion of the remote FTP server.		32
7E85 - 7E85	32390 - 32390	FTP remote port	UINT16		IP portion of the remote FTP server.		1
7E86 - 7E85	32391 - 32454	FTP remote directory	ASCII	128 characters	Remote directory where the files to be retrieved are.		64
7EC6 - 7ED5	32455 - 32470	FTP remote username	ASCII	32 characters	Username to access remote FTP		16
7ED6 - 7EE5	32471 - 32485	FTP remote password	ASCII	32 characters	Password to for previous username account.		16
7EE6 - 7F5E	32486 - 32575	Reserved			Set to 0		89
					Block Size:		512
Programmable Settings for Option Card 2							
Option Card 2 Setups Block							
80E7 - 80E7	33000 - 33000	Class ID of the Option Card 2 Settings	UINT16	bit-mapped	----- cocottt	write only in PS update mode Which class (cccc) and type(ttt) of card the Option	1
80E8 - 8126	33001 - 33063	Settings for Option Card 2, First Overlay -- see below				Settings for Card 2 apply to. See note 22	63
8127 - 8326	33064 - 33575	Settings for Option Card 2, Second Overlay -- see below				See overlays below.	512
						Register assignments depend on which type of card is in the slot. See overlays below.	
						Block Size:	576

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Overlays for Option Card 2 Programmable Settings							
Settings Registers for any communication capable card, including network and analog cards							
80E8 - 80E8	33001 - 33001	Slave address	UINT16	1->247 for Modbus 1->05534 (for DNP)	none	write only in PS update mode	1
80E9 - 80E9	33002 - 33002	Speed and format	UINT16	bit-mapped	-abcde-fghi:jklm	Slave address of the unit. The communication capable card is always a master. Set to 0 when an analog board is installed.	1
80EA - 80EA	33003 - 33003	Reserved	UINT16	bit-mapped	Stop bit "r": cleared 1 stop bit, set 2 stop bits Parity: 9=even, h=odd; f=None Data bits: j=8, k=7, l=6, m=5	Bps: #=57600; b=38400; c=19200; d=14400; e=9600 Set to 0 when an analog board is installed.	1
80EB - 80EB	33004 - 33004	Protocol	UINT16	bit-mapped	-----	ppp=100->DNP3; 010=>Rtu Modbus Set to 0 when an analog board is installed.	1
80EC - 80EC	33005 - 33006	Reply delay	UINT16	0 to 65535	milliseconds	Reserved Delay to reply to a Modbus transaction after receiving it. Set to 0 when an analog board is installed	1
80ED - 8126	33006 - 33063	Reserved				Reserved	58
Settings Registers for Digital I/O Relay Card							
80E8 - 80E8	33001 - 33001	Input#1 - 2 bindings & logging enables	UINT16	bit-mapped	-----	First Overlay write only in PS update mode	1
80E9 - 80E9	33002 - 33002	Relay #1 Delay to Operate	UINT16	0.1 second units	-----	One nibble for each input: 'a': assuming 'abcc' as the bits in each nibble: 'a': select this input for EO1 (End Of Interval) pulse sensing. 'b': log this input when pulse is detected 'cc': input event trigger mode - Contact sensing method: 00 = none, 01 = open to close; 10 = close to open; 11 = any change. Every input has an associated internal accumulator (See input Accumulator Scaling), which is incremented every time the input changes according with the trigger mode criteria "cc".	1
80EA - 80EA	33003 - 33003	Relay #1 Delay to Release	UINT16	0.1 second units	-----	Delay to operate the relay since request.	1
80EB - 80F0	33004 - 33009	Reserved	UINT16	0.1 second units	-----	Delay to release the relay since request.	1
80F1 - 80F1	33010 - 33010	Relay #2 Delay to Operate	UINT16	0.1 second units	-----	Set to 0.	6
80F2 - 80F2	33011 - 33011	Relay #2 Delay to Release	UINT16	0.1 second units	-----	Delay to release the relay since request.	1
80F3 - 8108	33012 - 33033	Reserved	UINT16	-----	-----	Set to 0.	22
8109 - 8109	33034 - 33034	Input Accumulators Scaling	UINT16	bit-mapped	-----	The nibble informs what should be the scaling of the accumulator. 0=no-scaling, 1=>0.1, 2=>0.01, 3=>1m, 4=>1m, 5=>0.1m, 6=>1u, 7=>1u; the value 15 isable the accumulator. Example: suppose that the internal input accumulator #1 is 12345, and its corresponding scaling setting is '001' (3 decimal). Then, the accumulator will be read as: Scaling 3, means 1m or 0.001. Scaled accumulator = 12345 * 0.001 = 12 (Twelve).	1
810A - 810A	33035 - 33035	Relay Accumulators Scaling	UINT16	bit-mapped	-----		1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
810B - 810B	33036 - 33036	Fast pulse input selector	UINT16	bit-mapped	P----- = ---mn	When value 'mn' is non-zero, it determines which of the card inputs will be a fast pulse detection input. The polarity bit 'P' tells the event to be detected: 1=open-to-close, 0=close-to-open. There is no "any-change" detection mode.	1
810C - 8126	33037 - 33063	Reserved				Reserved	27
Settings Registers for Digital I/O Pulse Output Card							
80E8 - 80E8	33001 - 33001	Input#1 - 4 bindings & logging enables	UINT16	bit-mapped	44443333 22221111	First Overlay write only in PS update mode	1
80E9 - 80E9	33002 - 33002	Source for Pulse Output#1	UINT16	enumeration	----PBP -----vvvv	"ppp" (Phase): 000 = none, 001 = Phase A, 010 = Phase B, 011 = Phase C, 100 = All Phases, '101 = Pulse from EOI(End Of Interval), "vvvv"(Value) .	1
80EA - 80EA	33003 - 33003	Kt [Wh/pulse] factor for Pulse Output#1	UINT16	bit-mapped	ddyyyyyy vvvvvvvv	"y.y" = not scaled energy value per pulse, from 0 to 9999. 'dd'= decimal point position: 0=0.XXXX, 01=X.XXX, 10-XX.XX, 11=X.XX,	1
80EB - 80EC	33004 - 33005	Output#2 Assignment and Kt	UINT16			same as Output #1	2
80ED - 80EE	33006 - 33007	Output#3 Assignment and Kt	UINT16			same as Output #1	2
80EF - 80F0	33008 - 33009	Output#4 Assignment and Kt	UINT16			same as Output #1	2
80F1 - 80F1	33010 - 33010	Input Accumulators Scaling	UINT16	bit-mapped	44443333 22221111	see Relay Card above	1
80F2 - 80F2	33011 - 33011	Output Accumulators Scaling	UINT16	bit-mapped	44443333 22221111		1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
80F3 - 80F3	33012 - 33012	Fast pulse input selector	UINT16	bit-mapped	P----- = --mn	When value 'mn' is non-zero, it determines which of the card inputs will be a fast pulse detection input. The polarity bit 'P' tells the event to be selected: 1=open-to-close, 0=close-to-open. There is no "any-change" detection mode.	1
80F4 - 8126	33013 - 33063	Reserved				Reserved	51
Settings Registers for Digital I/O Relay Card							
8127 - 812E	33064 - 33071	Input#1 Label	ASCII	16 char		Second Overlay	write only in PS update mode
812F - 8136	33072 - 33079	Input#1 Low State Name	ASCII	16 char			8
8137 - 813E	33080 - 33087	Input#1 High State Name	ASCII	16 char			8
813F - 8156	33088 - 33111	Input#2 Label and State Names				same as Input#1	
8157 - 8186	33112 - 33159	Reserved					24
8187 - 818E	33160 - 33167	Relay#1 Label	ASCII	16 char			48
818F - 8196	33168 - 33175	Relay#1 Open State Name	ASCII	16 char			8
8197 - 819E	33176 - 33183	Relay#1 Closed State Name	ASCII	16 char			8
819F - 81B6	33184 - 33207	Relay#2 Label and State Names				same as Relay#1	
81B7 - 81E6	33208 - 33256	Reserved	ASCII	16 char			48
81E7 - 81EE	33256 - 33263	Input#1 Accumulator Label	ASCII	16 char			8
81EF - 81F6	33264 - 33271	Input#2 Accumulator Label	ASCII	16 char			8
8208 - 8208	33289 - 33289	Input#2 Accumulator Kt	UINT16	bit-mapped	ddyyyyyy vvvvvvvv	Kt power factor for the Pulse Output	1
8209 - 8326	33290 - 33575	Reserved				"y" is raw power value in Wh/pulse from 0 to 9999. "d"=decimal point position: 0=0.XXXX, 0=x.XXX, 10-XXX.XX, 1=x.XXX.	286
Settings Registers for Digital I/O Pulse Output Card							
8127 - 812E	33064 - 33071	Input#1 Label	ASCII	16 char		Second Overlay	write only in PS update mode
812F - 8136	33072 - 33079	Input#1 Low State Name	ASCII	16 char			8
8137 - 813E	33080 - 33087	Input#1 High State Name	ASCII	16 char			8
813F - 8156	33088 - 33111	Input#2 Label and State Names				same as Input#1	
8157 - 816E	33112 - 33135	Input#3 Label and State Names				same as Input#1	
816F - 8186	33136 - 33159	Input#4 Label and State Names				same as Input#1	
8187 - 818E	33160 - 33167	Output#1 Label	ASCII	16 char			8
818F - 8196	33168 - 33175	Output#1 Open State Name	ASCII	16 char			8
8197 - 819E	33176 - 33183	Output#1 Closed State Name	ASCII	16 char			8
819F - 81B6	33184 - 33207	Output#2 Label and State Names				seams as Output#1	
81CE - 81E6	33208 - 33231	Output#3 Label and State Names				seams as Output#1	24
81CF - 81E6	33232 - 33255	Output#4 Label and State Names				seams as Output#1	24
81E7 - 81EE	33256 - 33263	Input#1 Accumulator Label	ASCII	16 char			8
81EF - 81F6	33264 - 33271	Input#2 Accumulator Label	ASCII	16 char			8
81FF - 8206	33272 - 33279	Input#3 Accumulator Label	ASCII	16 char			8
81FF - 8206	33280 - 33287	Input#4 Accumulator Label	ASCII	16 char			8

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg.
8207 -	33288 - 33288	Input#1 Accumulator Kt	UINT16 bit-mapped	0 to 65535 milliseconds	KT power factor for the accumulator input "v"= raw power value in Wh/pulse from 0 to 9899, "id"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.X, 11=X.XXX.		1
8208 -	33289 - 33289	Input#2 Accumulator Kt	UINT16 bit-mapped	0 to 65535 milliseconds	"v"= raw power value in Wh/pulse from 0 to 9899, "id"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.X, 11=X.XXX.		1
8209 -	33290 - 33290	Input#3 Accumulator Kt	UINT16 bit-mapped	0 to 65535 milliseconds	"v"= raw power value in Wh/pulse from 0 to 9899, "id"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.X, 11=X.XXX.		1
820A -	33291 - 33291	Input#4 Accumulator Kt	UINT16 bit-mapped	0 to 65535 milliseconds	"v"= raw power value in Wh/pulse from 0 to 9899, "id"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.X, 11=X.XXX.		1
820B -	33292 - 33575	Reserved				Reserved	284
Settings Registers for Analog Out 0-1mA / Analog Out 4-20mA Cards							
8127 -	33064 - 33064	Update rate	UINT16	0 to 65535	milliseconds	write only in P/S update mode Fixed -- see specifications	
8128 -	33065 - 33065	Channel direction - 1mA Card only!	UINT16 bit-mapped	0 to 65535	millisseconds	Full range output for 0-1mA card only: A bit set(1) means full range (-1mA to +1mA); a bit cleared(0) means source only (0mA to +1mA).	1
8129 -	33066 - 33066	Format parameter for output#1	UINT16 bit-mapped	0 to 65535	---	Format of the polled register:f=float;32;z=signed 32 bit; b=unsigned;32 bit;int:w=signed 16 bit int;	1
812A -	33067 - 33067	Source register for Output#1	UINT16	0 to 65535	---	This register should be programmed with the address of the register whose value is to be used for current output. In different words, the current level output of analog board will follow the value of the register addressed here.	1
812B -	33068 - 33069	High value of source register for output#1			Depends on the format parameter	Value read from the source register at which High nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 750, then the current output will be 20mA when the value read from the source register is 750.	2
812D -	33070 - 33071	Low value of source register for output#1			Depends on the format parameter	Value read from the source register at which Low nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 0, then the current output will be 4mA when the value read from the source register is 0.	2
812F -	33072 - 33077	Analog output#2 format, register, max & min				Same as analog output#1	6
8135 -	33078 - 33083	Analog output#3 format, register, max & min				Same as analog output#1	6
813B -	33084 - 33089	Analog output#4 format, register, max & min				Same as analog output#1	6
8141 -	33090 - 33575	Reserved				Reserved	486
Settings Registers for Network Cards							
8127 -	33064 - 33064	General Options	---	---	---	---	512
8128 -	33065 - 33065	DHCP enable	---	---	---	---	1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
8129 - 8130	33066 - 33073	Host name label	ASCII			16 bytes (8 registers)	8
8131 - 8134	33074 - 33077	IP card network address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
8135 - 8136	33078 - 33078	IP network address mask length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
8136 - 8139	33079 - 33082	IP card network gateway address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers that make the IP gateway address on network.	4
813A - 813D	33083 - 33086	IP card network DNS #1 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#1 on the network.	4
813E - 8141	33087 - 33090	IP card network DNS #2 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#2 on the network.	4
8142 - 824A	33091 - 33355	Reserved	bit-mapped			Write this with 0 to keep future compatibility.	265
824B - 824B	33356 - 33356	FTP Client Flags				General FTP flags: u=FTP remote address is an URL address; 1=FTP remote address is an IP address. e=FTP disabled; 1=E-enabled.	1
824C - 824C	33357 - 33357	Reserved				Received	1
824D - 826C	33358 - 33389	FTP remote server address	ASCII or UINT16			The type of the data in these registers depend on bit 'U' in the FTP Client Flags register. IP address (4 numbers) or URL (64-characters) of the FTP server	32
826D - 826D	33390 - 33390	FTP remote port	UINT16			IP port of the remote FTP server	1
826E - 826D	33391 - 33454	FTP remote directory	ASCII	128 characters		Remote directory where the files to be retrieved are.	64
82AE - 82BD	33455 - 33470	FTP remote username	ASCII	32 characters		Username to access remote FTP	16
82BE - 82CC	33471 - 33485	FTP remote password	ASCII	32 characters		Password to for previous username account.	16
82CD - 8326	33486 - 33575	Reserved				Reserved	89
						Block Size:	512
Secondary Readings Section							
Secondary Block						read-only except as noted	
9C40 - 9C40	40001 - 40001	System Sanity Indicator	UINT16	0 or 1	none	0 indicates proper meter operation	1
9C41 - 9C41	40002 - 40002	Volts A-N	UINT16	2047 to 4095	volts	2047=0, 4095=-150	1
9C42 - 9C42	40003 - 40003	Volts B-N	UINT16	2047 to 4095	volts	volts = 150 * (register - 2047) / 2047	1
9C43 - 9C43	40004 - 40004	Volts C-N	UINT16	2047 to 4095	volts		1
9C44 - 9C44	40005 - 40005	Amps A	UINT16	0 to 4095	amps	0=-10, 2047=0, 4095=+10	1
9C45 - 9C45	40006 - 40006	Amps B	UINT16	0 to 4095	amps	amps = 10 * (register - 2047) / 2047	1
9C46 - 9C46	40007 - 40007	Amps C	UINT16	0 to 4095	amps		1
9C47 - 9C47	40008 - 40008	Watts, 3-Ph total	UINT16	0 to 4095	watts	0=-3000, 2047=0, 4095=+3000	1
9C48 - 9C48	40009 - 40009	VARs, 3-Ph total	UINT16	0 to 4095	VARs	watts, VARs, VAs = 3000 * (register - 2047) / 2047	1
9C49 - 9C49	40010 - 40010	VAs, 3-Ph total	UINT16	2047 to 4095	VAs	1047=-1, 2047=0, 3047=+1	1
9C4A - 9C4A	40011 - 40011	Power Factor, 3-Ph total	UINT16	1047 to 3047	none	pF = (register - 2047) / 1000	1
9C4B - 9C4B	40012 - 40012	Frequency	UINT16	0 to 2730	Hz	0=45 or less, 2047= 2730-65 or more	1
9C4C - 9C4C	40013 - 40013	Volts A-B	UINT16	2047 to 4095	volts	freq = 45 - ((register / 4095) * 30)	1
9C4D - 9C4D	40014 - 40014	Volts B-C	UINT16	2047 to 4095	volts	2047=0, 4095=-300	1
9C4E - 9C4E	40015 - 40015	Volts C-A	UINT16	2047 to 4095	volts	volts = 300 * (register - 2047) / 2047	1

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
9C4F - 9C50	40016 - 40017	CT numerator CT denominator	UINT16	1 to 9999 1..10..100	none none	CT = numerator * multiplier / denominator	1
9C51 - 9C52	40018 - 40019	PT numerator PT denominator	UINT16	1 to 9999 1..10..100..1000	none none	PT = numerator * multiplier / denominator	1
9C53 - 9C54	40020 - 40021	PT multiplier PT denominator	UINT16	1 to 9999	none		1
9C55 - 9C56	40022 - 40023	Wh-hours, Positive	UINT32	0 to 99999999 0..10..99999999	Wh per energy format	* 5 to 8 digits * decimal point implied, per energy format	2
9C57 - 9C58	40024 - 40025	Wh-hours, Negative	UINT32	0 to 99999999 0..10..99999999	Wh per energy format	* resolution of digit before decimal point = units, kilo, or mega, per energy format	2
9C59 - 9C5A	40026 - 40027	VAR-hours, Positive	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C5B - 9C5C	40028 - 40029	VAR-hours, Negative	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C5D - 9C5E	40030 - 40031	VA-hours	UINT32	0 to 99999999 0..10..99999999	VAh per energy format	* see note 10	2
9C5F - 9C60	40032 - 40033	VA-hours, Positive, Phase A	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C61 - 9C62	40034 - 40035	VA-hours, Positive, Phase B	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C63 - 9C64	40036 - 40037	VA-hours, Positive, Phase C	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C65 - 9C66	40038 - 40039	Wh-hours, Negative, Phase A	UINT32	0 to 99999999 0..10..99999999	Wh per energy format		2
9C67 - 9C68	40040 - 40041	Wh-hours, Negative, Phase B	UINT32	0 to 99999999 0..10..99999999	Wh per energy format		2
9C69 - 9C70	40042 - 40043	Wh-hours, Negative, Phase C	UINT32	0 to 99999999 0..10..99999999	Wh per energy format		2
9C71 - 9C72	40044 - 40045	VAR-hours, Positive, Phase A	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C73 - 9C74	40046 - 40047	VAR-hours, Positive, Phase B	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C75 - 9C76	40048 - 40049	VAR-hours, Positive, Phase C	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C77 - 9C78	40050 - 40051	VAR-hours, Negative, Phase A	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C79 - 9C7A	40052 - 40053	VAR-hours, Negative, Phase B	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C7B - 9C7C	40054 - 40055	VAR-hours, Negative, Phase C	UINT32	0 to 99999999 0..10..99999999	VARh per energy format		2
9C7D - 9C7E	40056 - 40057	VA-hours, Phase A	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C7F - 9C80	40058 - 40059	VA-hours, Phase B	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C81 - 9C82	40060 - 40061	VA-hours, Phase C	UINT32	0 to 99999999 0..10..99999999	VAh per energy format		2
9C83 - 9C84	40062 - 40063	Watts, Phase A	UINT16	0 to 4095 0..10..4095	watts		1
9C85 - 9C86	40064 - 40065	Watts, Phase C	UINT16	0 to 4095 0..10..4095	watts		1
9C87 - 9C88	40066 - 40067	VARs, Phase A	UINT16	0 to 4095 0..10..4095	VARs		1
9C89 - 9C90	40068 - 40069	VARs, Phase B	UINT16	0 to 4095 0..10..4095	VARs		1
9C91 - 9C92	40070 - 40071	VARs, Phase C	UINT16	0 to 4095 0..10..4095	VARs		1
9C93 - 9C94	40072 - 40073	Power Factor, Phase A	UINT16	0 to 4095 0..10..4095			1
9C95 - 9C96	40074 - 40075	Power Factor, Phase B	UINT16	0 to 4095 0..10..4095			1
9C97 - 9C98	40076 - 40077	Power Factor, Phase C	UINT16	0 to 4095 0..10..4095			1
9C99 - 9C9A	40078 - 40079	Reserved	N/A	N/A	none	Reserved	26
9C9B - 9C9C	40100 - 40101	Reset Energy Accumulators	UINT16	password (Note 5)	write-only register, always reads as 0		1
					Block Size:	100	

B: Modbus Map and Retrieving Logs

Modbus Address Hex	Decimal	Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg	
Log Retrieval Section								
read/write except as noted								
Log Retrieval Block								
C34C - C34D	49897 - 49898	Log Retrieval Session Duration	UINT32	0 to 4294967294	4 msec	0 if no session active; wraps around after max count	2	
C34E - C34F	49899 - 49900	Log Retrieval Session Com Port	UINT16	0 to 4		0 if no session active, 1-4 for session active on COM1 - COM4	1	
C34F - C350	50000 - 50000	Log Number, Enable, Scope	UINT16	bit-mapped	XXXXXXXX ESSSSSSS	high byte is the log number (0-system, 1-alarm, 2-history1, 3-history2, 4-history3, 5-I/O changes, 10-PQ, 11-waveform is retrieval session enable(1) or disable(0) session is what to retrieve (0-normal record, 1-timestamps only, 2-complete memory image (no data validation if image))	1	
C350 - C352	50001 - 50001	Records per Window or Batch, Record Scope	UINT16	bit-mapped	XXXXXXXX SSSSSSSS	high byte is records per window if s=0 or records per batch if s=1, low byte is number of repeats for function 35 or 0 to suppress auto-incrementing, max number of repeats is 8 (RTU) or 4 (ASCII) total windows, a batch is all the windows	1	
C351 - C352	50002 - 50003	Offset of First Record in Window	UINT32	bit-mapped	XXXXXXXX NNNNNNNN	XXXXXXXX NNNNNNNN	XXXXXXXX SSSSSSSS is window status (0 to 7-window number, 0xFF-not ready), this byte is read-only.	2
C353 - C3CD	50004 - 50126	Log Retrieve Window	UINT16	see comments	none	.nn is a 24-bit record number. The log's first record is latched as a reference point when the session is enabled. This offset is a record index relative to that point. Value provided is the relative index of the whole or partial record that begins the window.	123	
Log Status Block								
read only								
Alarm Log Status Block								
C737 - C738	51000 - 51001	Log Size in Records	UINT32	0 to 4294967294	record		Block Size: 130	
C739 - C73A	51002 - 51003	Number of Records Used	UINT32	1 to 4294967294	record			
C73B - C73C	51004 - 51004	Record Size in Bytes	UINT16	14 to 242	byte			
C73C	51005 - 51006	Log Availability	UINT16	none		0-available, 1-not available, 4=use by COM1-4, 0xFFFF=not available (log size=0)	1	
C73D - C73F	51006 - 51008	Timestamp, First Record	TSTAMP	1Jan2000 - 31Dec2059	1 sec		2	
C740 - C742	51009 - 51011	Timestamp, Last Record	TSTAMP	1Jan2000 - 31Dec2059	1 sec		2	
C743 - C746	51012 - 51015	Reserved				Reserved	4	
C747 - C756	51016 - 51021	System Log Status Block				Individual Log Status Block Size: 16	16	
C757 - C766	51032 - 51047	Historical Log 1 Status Block				same as alarm log status block	16	
C767 - C776	51048 - 51063	Historical Log 2 Status Block				same as alarm log status block	16	
C777 - C786	51064 - 51079	Historical Log 3 Status Block				same as alarm log status block	16	
C787 - C796	51080 - 51095	I/O Change Log Status Block				same as alarm log status block	16	
C797 - C7A6	51096 - 51111	Power Quality Log Status Block				same as alarm log status block	16	
C7A7 - C7B6	51112 - 51127	Waveform Capture Log Status Block				same as alarm log status block	16	
						Block Size: 128		

End of Map

B: Modbus Map and Retrieving Logs

Data Formats	
ASCII	ASCII characters packed 2 per register in high/low order and without any termination characters. For example, "Shark200" would be 4 registers containing 0x5378, 0x6172, 0x6BB32, 0x3030.
SINT16 / UINT16	16-bit signed/unsigned integer.
SINT32 / UINT32	32-bit signed/unsigned integer spanning 2 registers. The lower-addressed register is the high order half.
FLOAT	32-bit IEEE floating point number spanning 2 registers. The lower-addressed register is the high order half (i.e., contains the exponent).
TSTAMP	3 adjacent registers, 2 bytes each. First (lowest-addressed) register high byte is year (0-99), low byte is month (1-12). Middle register high byte is day(1-31), low byte is hour (0-23 plus DST bit). DST (daylight saving time) bit is bit 6 (0x40). Third register high byte is minutes (0-59), low byte is seconds (0-59). For example, 9:35:07AM on October 12, 2049 would be 0x310A, 0x0C49, 0x2307, assuming DST is in effect.
Notes	
1	All registers not explicitly listed in the table read as 0. Writes to these registers will be accepted but won't actually change the register (since it doesn't exist).
2	Meter Data Section items read as 0 until first readings are available or if the meter is not in operating mode. Writes to these registers will be accepted but won't actually change the register.
3	Register valid only in programmable settings update mode. In other modes these registers read as 0 and return an illegal data address exception if a write is attempted.
4	Meter command registers always read as 0. They may be written only when the meter is in a suitable mode. The registers return an illegal data address exception if a write is attempted in an incorrect mode.
5	If the password is incorrect, a valid response is returned but the command is not executed. Use 5555 for the password if passwords are disabled in the programmable settings.
6	M denotes a 1,000,000 multiplier.
7	Each identifier is a Modbus register. For entities that occupy multiple registers (FLOAT, SINT32, etc.) all registers making up the entity must be listed, in ascending order. For example, to log phase A volts, VAs, voltage THD, and VA hours, the register list would be 0x3E7, 0x3E8, 0x411, 0x412, 0x176F, 0x61D, 0x61E and the number of registers (0x79/7 high byte) would be 7.
8	Writing this register causes data to be saved permanently in nonvolatile memory. Reply to the command indicates that it was accepted but not whether or not the save was successful. This can only be determined after the meter has restarted.
9	Reset commands make no sense if the meter state is LIMP. An illegal function exception will be returned.
10	Energy registers should be reset after a format change.
11	Entities to be monitored against limits are identified by Modbus address. Entities occupying multiple Modbus registers, such as floating point values, are identified by the lower register address. If any of the 8 limits is unused, set its identifier to zero. If the indicated Modbus register is not used or is a nonsensical entity for limits, it will behave as an unused limit.
12	There are 2 setpoints per limit, one above and one below the expected range of values. LM1 is the "too high" limit, LM2 is "too low". The entity goes "out of limit" on LM1 when its value is greater than the setpoint. It remains "out of limit" until the value drops below the threshold. LM2 works similarly, in the opposite direction. If limits in only one direction are of interest, set the in threshold on the "wrong" side of the setpoint. Limits are specified as % of full scale, where full scale is automatically set appropriately for the entity being monitored:
	current FS = CT numerator * CT multiplier voltage FS = PT numerator * PT multiplier 3 phase power FS = CT numerator * CT multiplier * PT multiplier * 3 [* SQRT(3) for delta hookup] single phase power FS = CT numerator * CT multiplier * PT multiplier * PT multiplier [* SQRT(3) for delta hookup] frequency FS = 60 (or 50) power factor FS = 1.0 percentage FS = 100.0 angle FS = 180.0
13	THD not available shows 10000 in all THD and harmonic magnitude and phase registers for the channel. THD may be unavailable due to low V or I amplitude, delta hookup (V only), or V-switch setting.
14	Option Card Identification and Configuration Block is an image of the EEPROM on the card
15	A block of data and control registers is allocated for each option slot. Interpretation of the register data depends on what card is in the slot.
16	Measurement states: Off occurs during programmable settings updates; Run is the normal measuring state; Limp indicates that an essential non-volatile memory block is corrupted; and Warmup occurs briefly (approximately 4 seconds) at startup while the readings stabilize. Run state is required for measurement, historical logging, demand interval processing, limit alarm evaluation, min/max comparisons, and THD calculations. Resetting min/max or energy is allowed only in run and off states; warmup will return a busy exception. In limp state, the meter reboots at 5 minute intervals in an effort to clear the problem.
17	Limits evaluation for all entities except demand averages commences immediately after the warmup period. Evaluation for demand averages, maximum demands, and minimum demands commences at the end of the first demand interval after startup.
18	Autoincrementing and function 35 must be used when retrieving waveform logs.
19	Depending on the V-switch setting, there are 15, 29, or 45 flash sectors available in a common pool for distribution among the 3 historical and waveform logs. The pool size, number of sectors for each log, and the number of registers per record together determine the maximum number of records a log can hold.

S = number of sectors assigned to the log.

H = number of Modbus registers to be monitored in each historical record (up to 117).

R = number of bytes per record = $(12 + 2H) / R$ for historical logs

N = number of records per sector = $65536 / R$, rounded down to an integer value (no partial records in a sector)

T = total number of records the log can hold = $S * N$

T = $S * 2$ for the waveform log.

Only 1 input on all digital input cards may be specified as the end-of-interval pulse.

Logs cannot be reset during log retrieval. Waveform log cannot be reset while storing a capture. Busy exception will be returned.

20

Combination of class and type currently defined are:

21 0x23 = Filter cards

0x24 = Network card

0x41 = Relay card

0x42 = Pulse card

0x81 = 0-1mA analog output card

0x82 = 4-20mA analog output card.

22

21

22

C: DNP Mapping

C.1: Overview

This Appendix describes the functionality of the Shark® 200 meter's version of the DNP protocol. A DNP programmer must follow this information in order to retrieve data from the Shark® 200 meter. The DNP used by the Shark 200 is a reduced set of the Distributed Network Protocol Version 3.0 subset 2; it gives enough functionality to get critical measurements from the Shark® 200 meter.

The Shark® 200 meter's DNP version supports Class 0 object/qualifiers 0,1,2,6, only. No event generation is supported. The Shark® 200 meter always acts as a secondary device (slave) in DNP communication.

A new feature allows DNP readings in primary units with user-set scaling for current, voltage, and power. (See Chapter 5 in the *Communicator EXT User Manual* for instructions.)

C.2: Physical Layer

The Shark® 200 meter's DNP version uses serial communication. It can be assigned to Port 2 (RS485 compliant port) or any communication capable option board. Speed and data format is transparent for the Shark® 200 meter's DNP version: they can be set to any supported value. The IrDA port cannot use DNP.

C.3: Data Link Layer

The Shark® 200 meter can be assigned with a value from 1 to 65534 as the target device address. The data link layer follows the standard frame FT3 used by the DNP Version 3.0 protocol, but only 4 functions are implemented: Reset Link, Reset User, Unconfirmed User Data, and Link Status, as depicted in the following table.

Function	Function Code
Reset Link	0
Reset User	1
Unconfirmed User Data	4
Link Status	9

Table C.1: Supported Link Functions

[dst] and [src] are the device address of the Shark® 200 Meter and Master device, respectively. Refer to Section C.7 for more detail on supported frames for the data link layer.

In order to establish a clean communication with the Shark® 200 meter, we recommend that you perform the Reset Link and Reset User functions. The Link Status is not mandatory, but if queried it will be attended to. The inter-character time-out for DNP is 1 second. If this amount of time, or more, elapses between two consecutive characters within a FT3 frame, the frame will be dropped.

C.4: Application Layer

The Shark® 200 meter's DNP version supports the Read function, Write Function, the Direct Operate function and the Direct Operate Unconfirmed function.

- The Read function (code 01) provides a means for reading the critical measurement data from the meter. This function should be posted to read object 60 variation 1, which will read all the available Class 0 objects from the DNP register map. See register map in Section C.6. In order to retrieve all objects with their respective variations, the qualifier must be set to ALL (0x06). See Section C.7 for an example showing a read Class 0 request data from the meter.
- The Write function (code 02) provides a mean for clearing the Device restart bit in the Internal Indicator register only. This is mapped to Object 80, point 0 with variation 1. When clearing the restart device indicator use qualifier 0. Section C.7 shows the supported frames for this function.
- The Direct Operate function (code 05) is intended for resetting the energy counters and the demand counters (minimum and maximum energy registers). These actions are mapped to Object 12, point 0 and point 2, that are seen as a control relay. The relay must be operated (On) in 0 msec and released (Off) in 1 msec only. Qualifiers 0x17 or x28 are supported for writing the energy reset. Sample frames are shown in Section C.7.
- The Direct Operate Unconfirmed (or Unacknowledged) function (code 06) is intended for asking the communication port to switch to Modbus RTU protocol from DNP. This switching is seen as a control relay mapped into Object 12, point 1 in the meter. The relay must be operated with qualifier 0x17, code 3 count 0, with 0 millisecond on and 1 millisecond off, only. After sending this request the current

communication port will accept Modbus RTU frames only. To make this port go back to DNP protocol, the unit must be power-recycled. Section C.7 shows the constructed frame to perform DNP to Modbus RTU protocol change.

C.5: Error Reply

In the case of an unsupported function, or any other recognizable error, an error reply will be generated from the Shark® 200 meter to the Primary station (the requester). The Internal Indicator field will report the type of error: unsupported function or bad parameter.

The broadcast acknowledge and restart bit, are also signaled in the internal indicator but they do not indicate an error condition.

C.6: Shark® 200 Meter's DNP Register Map

Object 10 - Binary Output States

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
10	0	2	Reset Energy Counters	BYTE	Always 1	N/A	None	Read by Class 0 or with qualifier 0, 1, 2, or 6
10	1	2	Change to Modbus RTU Protocol	BYTE	Always 1	N/A	None	Read by Class 0 or with qualifier 0, 1, 2, or 6
10	2	2	Reset Demand Cntrs (Max / Min)	BYTE	Always 1	N/A	None	Read by Class 0 or with qualifier 0, 1, 2, or 6

Object 12 - Control Relay Outputs

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
12	0	1	Reset Energy Counters	N/A	N/A	N/A	none	Responds to Function 5 (Direct Operate), Qualifier Code 17x or 28x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.
12	1	1	Change to Modbus RTU Protocol	N/A	N/A	N/A	none	Responds to Function 6 (Direct Operate - No Ack), Qualifier Code 17x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
12	2	1	Reset Demand Counters (Max / Min)	N/A	N/A	N/A	none	Responds to Function 5 (Direct Operate), Qualifier Code 17x or 28x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.

Object 20 - Binary Counters (Primary Readings) - Read via Class 0 or with qualifier 0, 1, 2, or 6

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
20	0	5	W-hours, Positive	UINT32	0 to 99999999	Multiplier = 10(n-d), where n and d are derived from the energy format. n = 0, 3, or 6 per energy format scale and d = number of decimal places.	Whr	example: energy format = 7.2K and W-hours counter = 1234567 n=3 (K scale), d=2 (2 digits after decimal point), multiplier = 10(3-2) = 101 = 10, so energy is 1234567 * 10 Whrs, or 12345.67 KWhrs
20	1	5	W-hours, Negative	UINT32	0 to 99999999		Whr	
20	2	5	VAR-hours, Positive	UINT32	0 to 99999999		VARhr	
20	3	5	VAR-hours, Negative	UINT32	0 to 99999999		VARhr	
20	4	5	VA-hours, Total	UINT32	0 to 99999999		VAhr	

Object 30 - Analog Inputs (Secondary Readings) - Read via Class 0 or with qualifier 0, 1, 2, or 6

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
30	0	4	Meter Health	sint16	0 or 1	N/A	None	0 = OK
30	1	4	Volts A-N	sint16	0 to 32767	(150 / 32768)	V	Values above 150V secondary read 32767.
30	2	4	Volts B-N	sint16	0 to 32767	(150 / 32768)	V	
30	3	4	Volts C-N	sint16	0 to 32767	(150 / 32768)	V	

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
30	4	4	Volts A-B	sint16	0 to 32767	(300 / 32768)	V	Values above 300V secondary read 32767.
30	5	4	Volts B-C	sint16	0 to 32767	(300 / 32768)	V	
30	6	4	Volts C-A	sint16	0 to 32767	(300 / 32768)	V	
30	7	4	Amps A	sint16	0 to 32767	(10 / 32768)	A	Values above 10A secondary read 32767.
30	8	4	Amps B	sint16	0 to 32767	(10 / 32768)	A	
30	9	4	Amps C	sint16	0 to 32767	(10 / 32768)	A	
30	10	4	Watts, 3-Ph total	sint16	-32768 to +32767	(4500 / 32768)	W	
30	11	4	VARs, 3-Ph total	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	12	4	VAs, 3-Ph total	sint16	0 to +32767	(4500 / 32768)	VA	
30	13	4	Power Factor, 3-Ph total	sint16	-1000 to +1000	0.001	None	
30	14	4	Frequency	sint16	0 to 9999	0.01	Hz	
30	15	4	Positive Watts, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	W	
30	16	4	Positive VARs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	17	4	Negative Watts, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	W	
30	18	4	Negative VARs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	19	4	VAs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VA	
30	20	4	Angle, Phase A Current	sint16	-1800 to +1800	0.1	degree	
30	21	4	Angle, Phase B Current	sint16	-1800 to +1800	0.1	degree	
30	22	4	Angle, Phase C Current	sint16	-1800 to +1800	0.1	degree	

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
30	23	4	Angle, Volts A-B	sint16	-1800 to +1800	0.1	degree	
30	24	4	Angle, Volts B-C	sint16	-1800 to +1800	0.1	degree	
30	25	4	Angle, Volts C-A	sint16	-1800 to +1800	0.1	degree	
30	26	4	CT numerator	sint16	1 to 9999	N/A	none	CT ratio = (numerator * multiplier) / denominator
30	27	4	CT multiplier	sint16	1, 10, or 100	N/A	none	
30	28	4	CT denominator	sint16	1 or 5	N/A	none	
30	29	4	PT numerator	SINT16	1 to 9999	N/A	none	PT ratio = (numerator * multiplier) / denominator
30	30	4	PT multiplier	SINT16	1, 10, or 100	N/A	none	
30	31	4	PT denominator	SINT16	1 to 9999	N/A	none	
30	32	4	Neutral Current	SINT16	0 to 32767	(10 / 32768)	A	For 1A model, multiplier is (2 / 32768) and values above 2A secondary read 32767

Object 80 - Internal Indicator

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
80	7	1	Device Restart Bit	N/A	N/A	N/A	none	Clear via Function 2 (Write), Qualifier Code 0.

C.7: DNP Message Layouts

Legend

All numbers are in hexadecimal base. In addition the following symbols are used.

dst	16 bit frame destination address
src	16 bit frame source address
crc	DNP Cyclic redundant checksum (polynomial $x^{16}+x^{13}+x^{12}+x^{11}+x^{10}+x^7+x^6+x^5+x^2+1$)
x	transport layer data sequence number
y	application layer data sequence number

Link Layer related framesReset Link

Request	05	64	05	C0	dst	src	crc
Reply	05	64	05	00	src	dst	crc

Reset User

Request	05	64	05	C1	dst	src	crc
Reply	05	64	05	00	src	dst	crc

Link Status

Request	05	64	05	C9	dst	src	crc
Reply	05	64	05	0B	src	dst	crc

Application Layer related framesClear Restart

Request	05	64	0E	C4	dst	src	crc	
	Cx	Cy	02	50	01	00	07	07
							00	crc
Reply	05	64	0A	44	src	dst	crc	
	Cx	Cy	81	int.	ind.			

Class 0 Data

Request	05	64	0B	C4	dst	src	crc	
	Cx	Cy	01	3C	01	06	crc	
Request (alternate)	05	64	14	C4	dst	src	crc	
	Cx	Cy	01	3C	02	06	3C	03
					06	3C	04	06
					3C	01	06	crc
Reply (same for either request)	05	64	72	44	src	dst	crc	
	Cx	Cy	81	int.	ind.	T4	05	00
					00	00	04	pt 0
					20	pt 1	pt 2	pt 3
						pt 4	pt 5	pt 6
							pt 7	pt 8
							pt 9	pt 10
							pt 11	pt 12
							pt 13	pt 14
							pt 15	pt 16
							pt 17	pt 18
							pt 19	pt 20
							pt 21	pt 22
							pt 23	pt 24
							pt 25	pt 26
							pt 27	pt 28
							pt 29	pt 30
							pt 31	pt 32
							0A	02
							00	00
							02	pt0
							pt1	pt2
								crc



Reset Energy

Request	05	64	18	C4	dst	src	crc
	Cx	Cy	05	0C	01	17	01 00 03 00 00 00 00 00 01 00 crc
	00	00	00	00	crc		
Reply	05	64	1A	44	src	dst	crc
	Cx	Cy	81	int. ind.	0C	01	17 01 00 03 00 00 00 00 00 00 crc
	01	00	00	00	00	crc	

Request (alternate)	05	64	1A	C4	dst	src	crc
	Cx	Cy	05	0C	01	28	01 00 00 00 03 00 00 00 00 00 00 00 crc
	01	00	00	00	00	crc	
Reply	05	64	1C	44	src	dst	crc
	Cx	Cy	81	int. ind.	0C	01	28 01 00 00 03 00 00 00 00 00 crc
	00	00	01	00	00	00	

Switch to Modbus

Request	05	64	18	C4	dst	src	crc
	Cx	Cy	06	0C	01	17	01 01 03 00 00 00 00 00 01 00 crc
	00	00	00	00	crc		
No Reply							

Reset Demand (Maximums & Minimums)

Request	05	64	18	C4	dst	src	crc
	Cx	Cy	05	0C	01	17	01 02 03 00 00 00 00 00 01 00 crc
	00	00	00	00	crc		
Reply	05	64	1A	44	src	dst	crc
	Cx	Cy	81	int. ind.	0C	01	17 01 02 03 00 00 00 00 00 00 crc
	01	00	00	00	00	crc	

Request (alternate)	05	64	1A	C4	dst	src	crc
	Cx	Cy	05	0C	01	28	01 02 00 00 03 00 00 00 00 00 00 00 crc
	01	00	00	00	00	crc	
Reply	05	64	1C	44	src	dst	crc
	Cx	Cy	81	int. ind.	0C	01	28 01 02 00 00 03 00 00 00 00 00 00 crc
	00	00	01	00	00	00	

Error Reply

Reply	05	64	0A	44	src	dst	crc
	Cx	Cy	81	int. ind.	crc		



C.8: Internal Indication Bits

Bits implemented in the Shark® 200 meter are listed below. All others are always reported as zeroes.

Bad Function

Occurs if the function code in a User Data request is not Read (0x01), Write (0x02), Direct Operate (0x05), or Direct Operate, No Ack (0x06).

Object Unknown

Occurs if an unsupported object is specified for the Read function. Only objects 10, 20, 30, and 60 are supported.

Out of Range

Occurs for most other errors in a request, such as requesting points that don't exist or direct operate requests in unsupported formats.

Buffer Overflow

Occurs if a read request or a read response is too large for its respective buffer. In general, if the request overflows, there will be no data in the response while if the response overflows at least the first object will be returned. The largest acceptable request has a length field of 26, i.e. link header plus 21 bytes more, not counting checksums. The largest possible response has 7 blocks plus the link header.

Restart

All Stations

These 2 bits are reported in accordance with standard practice.

This page intentionally left blank.

D: Using the USB to IrDA Adapter (CAB6490)

D.1: Introduction

Com 1 of the Shark® 200 meter is the IrDA port, located on the face of the meter. One way to communicate with the IrDA port is with EIG's USB to IrDA Adapter (CAB6490), which allows you to access the Shark® 200 meter's data from a PC. This Appendix contains instructions for installing the USB to IrDA Adapter.


D.2: Installation Procedures

The USB to IrDA Adapter comes packaged with a USB cable and an Installation CD. Follow this procedure to install the Adapter on your PC.


1. Connect the USB cable to the USB to IrDA Adapter, and plug the USB into your PC's USB port.
2. Insert the Installation CD into your PC's CD ROM drive.
3. You will see the screen shown below. The Found New Hardware Wizard allows you to install the software for the Adapter. Click the Radio Button next to Install from a list or specific location.




4. Click **Next**. You will see the screen shown on the next page.

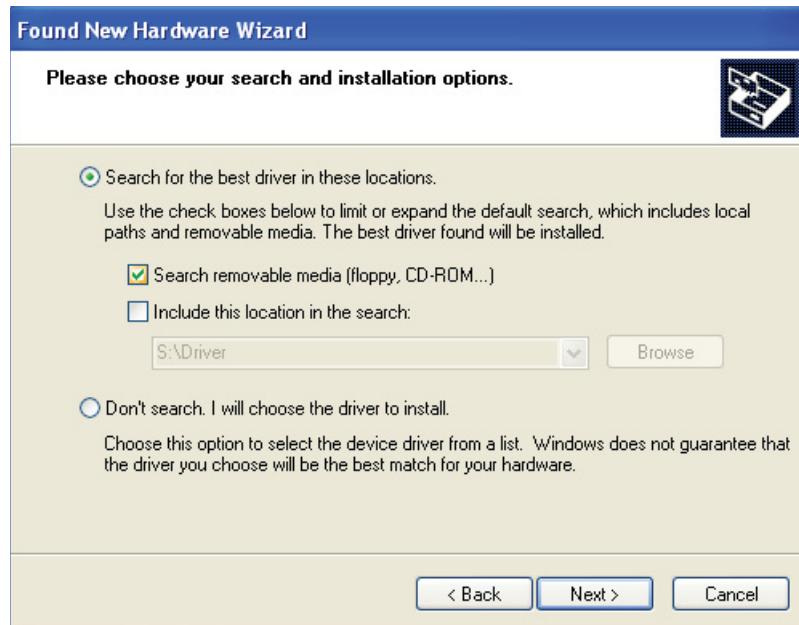

5. Make sure the first Radio Button and the first Checkbox are selected, as shown in the above screen. These selections allow the Adapter's driver to be copied from the Installation disk to your PC.
6. Click **Next**. You will see the screen shown below.

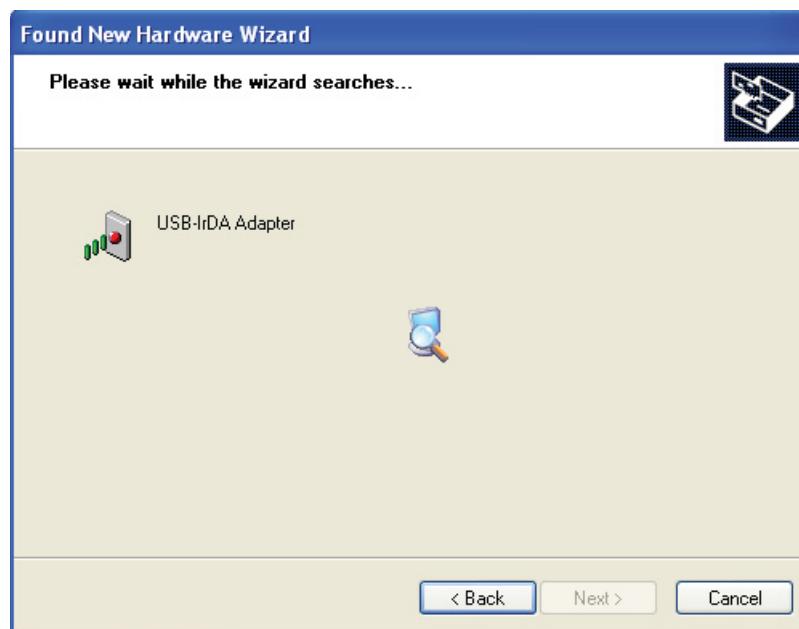


7. When the driver for the Adapter is found, you will see the screen shown below.

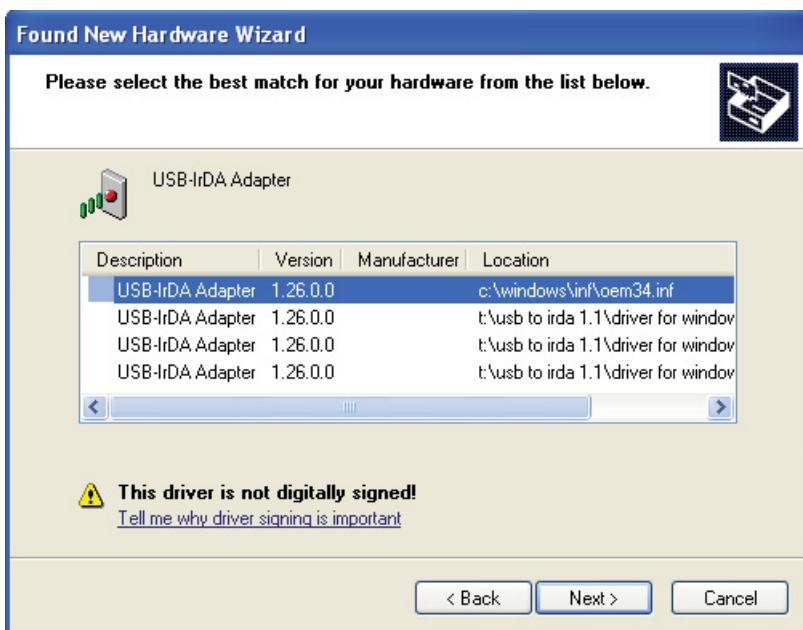


8. You do not need to be concerned about the message on the bottom of the screen.

Click **Next** to continue with the installation.


9. You will see the two windows shown below. Click **Continue Anyway**.

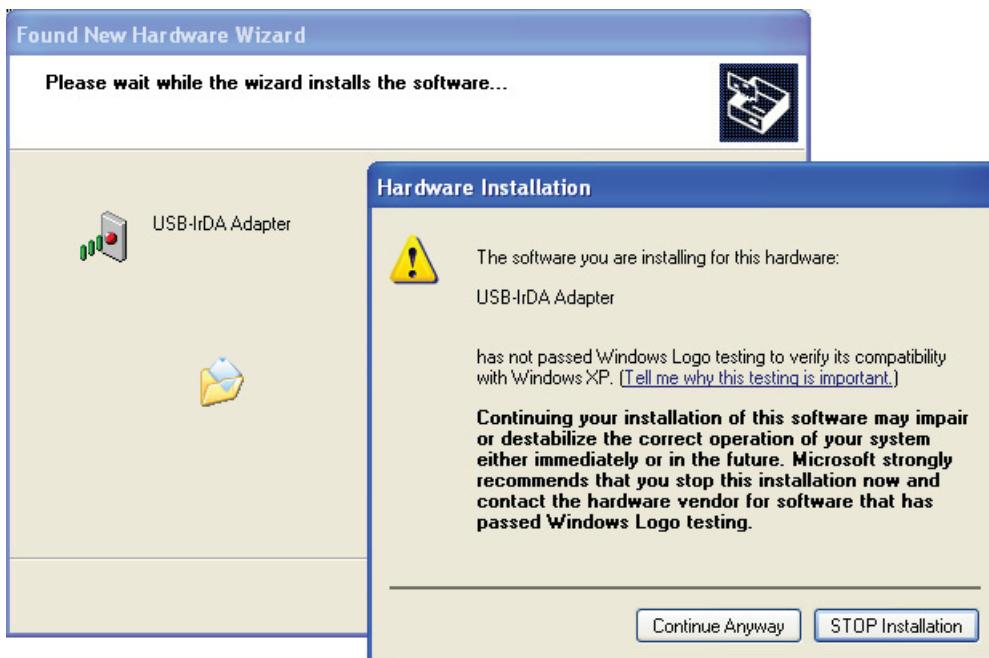

10. You will see the screen shown on the next page while the Adapter's driver is being installed on your PC.

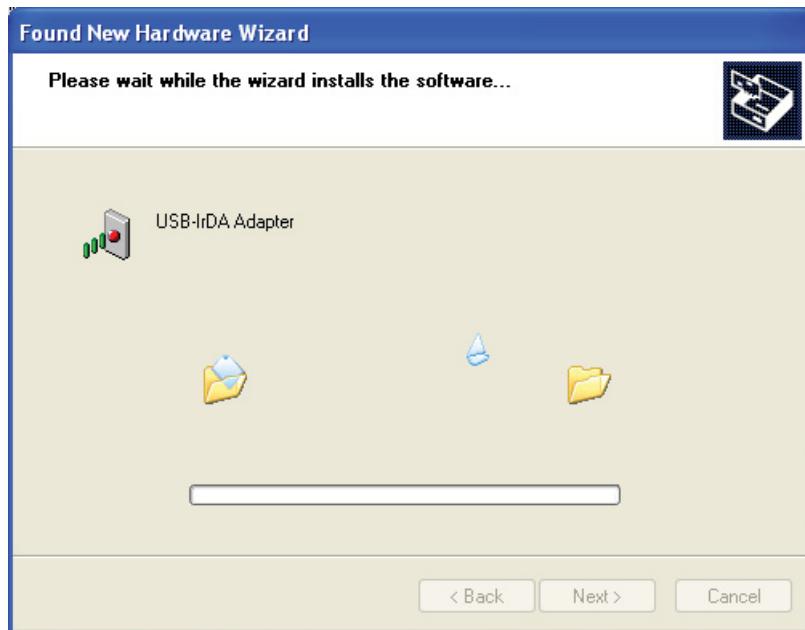

11. When the driver installation is complete, you will see the screen shown below.

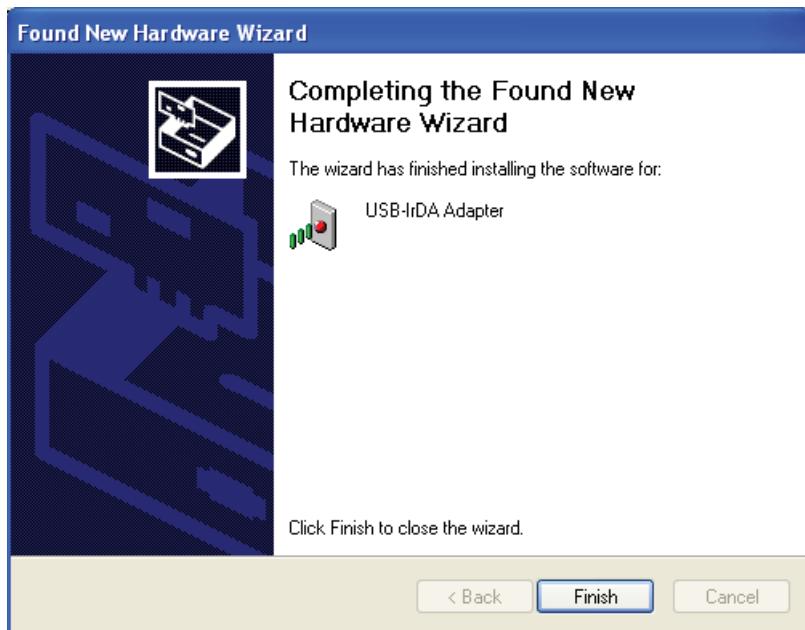

12. Click **Finish** to close the Found New Hardware Wizard.

IMPORTANT! Do NOT remove the Installation CD until the entire procedure has completed.


13. Position the USB to IrDA Adapter so that it points directly at the IrDA on the front of the Shark® 200 meter. It should be as close as possible to the meter, and not more than 15 inches/38 cm away from it.

14. The Found New Hardware Wizard screen opens again.



This time, click the Radio Button next to Install the software automatically.

15. Click **Next**. You will see the screen shown below.

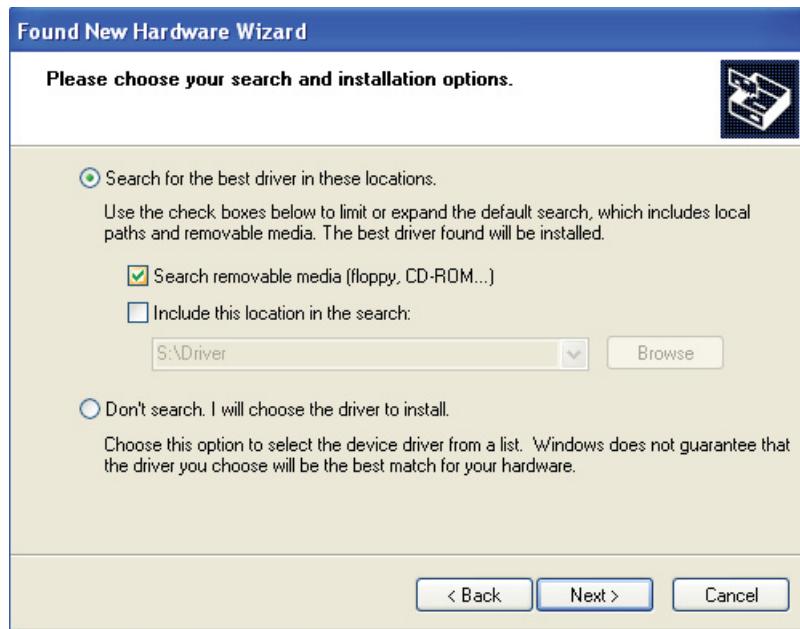

16. Make sure the first Radio Button and the first Checkbox are selected, as shown in the above screen. Click **Next**. You will see the two screens shown below.



17. When the installation is complete, you will see the screen shown below.




Click **Finish** to close the Found New Hardware Wizard.

18. To verify that your Adapter has been installed properly, click:

Start>Settings>Control Panel>System>Hardware>Device Manager.


The USB to IrDA Adapter should appear under both Infrared Devices and Modems (click on the + sign to display all configured modems). See the example screen below.

NOTE: If the Adapter doesn't show up under Modems, move it away from the meter for a minute and then position it pointing at the IrDA, again.

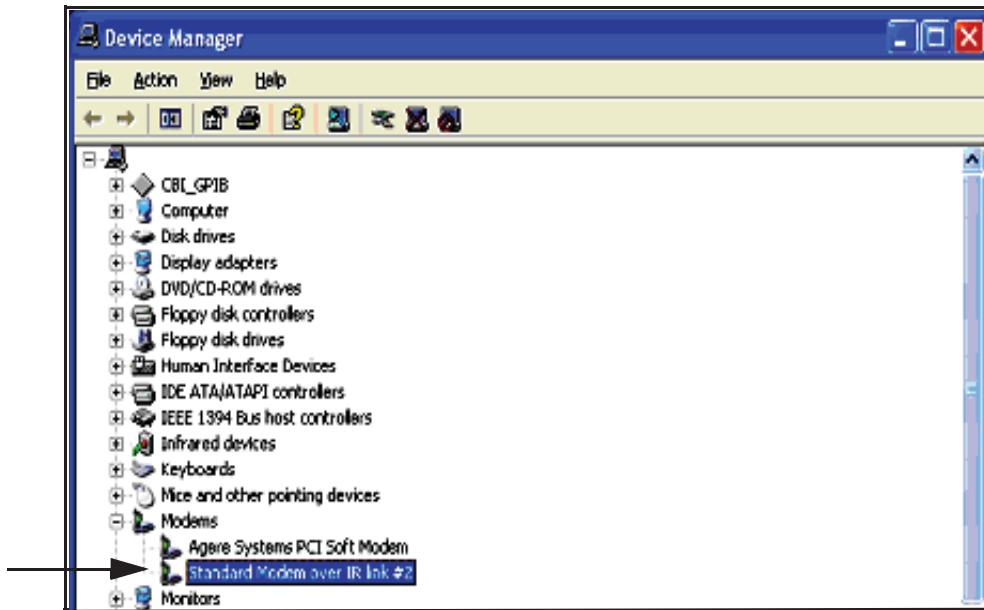

19.Double-click on the Standard Modem over IR link (this is the USB to IrDA Adapter). You will see the Properties screen for the Adapter.

20.Click the Modem tab. The Com Port that the Adapter is using is displayed in the screen.

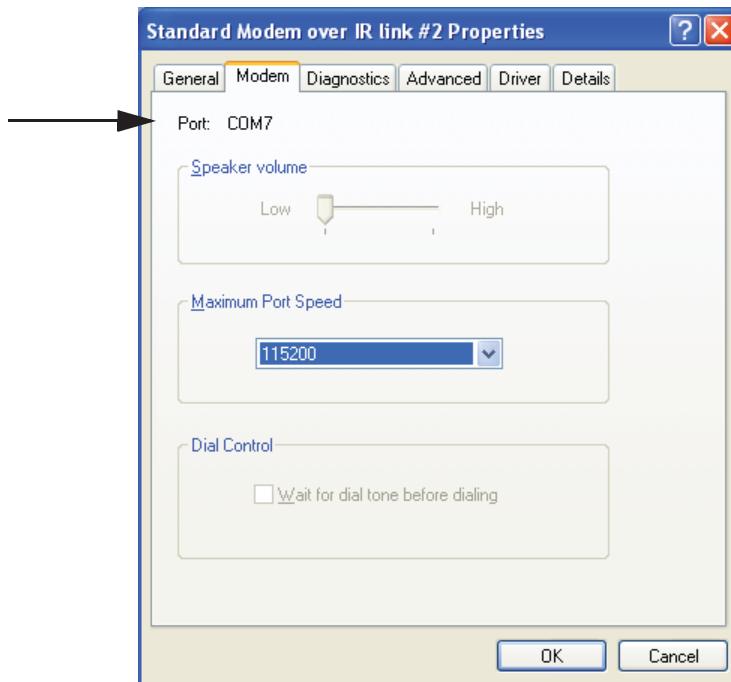

21.Use this Com Port to connect to the meter from your PC, using the Communicator EXT software. Refer to Chapter 5 of the *Communicator EXT 3.0 User Manual* for detailed connection instructions.